

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [ROBUD](#) /

> [ROBUD Vintage Wooden Toy Kitchen Oven Instruction Manual](#)

ROBUD RB-2-WCF20

ROBUD Vintage Wooden Toy Kitchen Oven Instruction Manual

Brand: ROBUD | Model: RB-2-WCF20

INTRODUCTION

This manual provides essential information for the safe assembly, operation, and maintenance of your ROBUD Vintage Wooden Toy Kitchen Oven. Please read these instructions carefully before use to ensure a positive play experience and product longevity.

SETUP

Assembly

The ROBUD Vintage Wooden Toy Kitchen Oven requires assembly. Please refer to the separate assembly guide included in your product packaging for detailed, step-by-step instructions. Ensure all components are present and securely fastened before allowing children to play with the toy.

Estimated Assembly Time: Approximately 30 minutes for two adults.

Unboxing and Inspection

Upon receiving your toy oven, carefully unbox all components. Inspect each piece for any signs of damage or missing parts. If any issues are found, please contact customer support immediately.

OPERATING INSTRUCTIONS

The ROBUD Vintage Wooden Toy Kitchen Oven is designed for imaginative play, featuring interactive elements for a realistic experience.

Oven Door and Baking Tray

- To open the oven door, gently pull the gold-colored handle. The door is designed to open smoothly.
- The oven includes two convenient slide-out baking trays. These trays can be pulled out to place or remove toy food items, such as the included cupcake molds.
- The oven door features a clear window, allowing children to observe their pretend baking.



◀ 01

Push-Pull Baking Pan

02 ▶

Turning the Turntable Makes a Clicking Sound



Image: Oven interior with pull-out baking tray and toy cupcakes.

Control Knobs and Sound Effects

- The front panel of the oven features four rotatable control knobs.
- Turning these knobs produces realistic clicking sounds, enhancing the play experience.
- The knobs are marked with 'OFF' and numerical settings (0-3 or 0-4) for pretend temperature and timer adjustments.

Video: Demonstrates the functional design of the toy oven, including turning knobs with clicking sounds and the pull-out baking tray for cupcakes.

Stovetop Burners

- The top surface of the oven features four simulated burners and a grill area for stovetop cooking play.
- Place toy pots and pans on these areas for pretend cooking.



Image: Child engaging in simulated role-playing with the stovetop.

Simulated Role-Playing Experience

Included Accessories

The toy oven comes with two slide-out baking trays and three adorable cupcake molds, perfect for crafting sweet delights.

MAINTENANCE

Cleaning

- Wipe the toy oven with a soft, damp cloth.
- Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish.

- Ensure the toy is completely dry before storing.

Storage

Store the toy oven in a dry, cool place away from direct sunlight and extreme temperatures to prevent warping or fading.

TROUBLESHOOTING

Missing or Damaged Parts

If you encounter any missing or damaged parts during assembly or use, please contact ROBUD customer support for assistance. Do not attempt to use the toy with incomplete or damaged components.

Loose Components

Periodically check all screws and fasteners to ensure they are tight. Re-tighten as necessary to maintain the toy's stability and safety.

SPECIFICATIONS

Product Dimensions	15 x 15 x 15 inches
Item Weight	14.62 pounds
Item Model Number	RB-2-WCF20
Manufacturer Recommended Age	36 months - 12 years
Material	Solid Wood and MDF



Image: Product dimensions diagram.

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided in your product packaging or visit the official ROBUD website. Keep your purchase receipt for any warranty claims.