

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Technical Pro](#) /
- › [Technical Pro TPCDP3032 Portable Wall Mounted CD Player User Manual](#)

Technical Pro TPCDP3032

Technical Pro TPCDP3032 Portable Wall Mounted CD Player

User Manual

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Technical Pro TPCDP3032 Portable Wall Mounted CD Player. Please read this manual thoroughly before using the device to ensure proper function and to maximize your listening experience. This player supports various audio sources including CD, Bluetooth, USB, AUX, and FM radio.

SAFETY INFORMATION

- Do not expose the device to rain or moisture.
- Do not disassemble the unit. Refer all servicing to qualified personnel.
- Avoid placing the unit near heat sources or in direct sunlight.
- Ensure proper ventilation; do not block ventilation openings.
- Use only the power adapter supplied with the device.
- Keep out of reach of children.
- When handling CDs, hold them by the edges to avoid fingerprints on the playing surface.

WHAT'S IN THE BOX

What's in the Box



Image: All components included in the product packaging.

- Portable CD Player
- Desktop Stand
- Remote Control
- Power Adapter
- Wall Mounting Hardware (screws, anchors)

PRODUCT FEATURES



Image: Overview of the player's connectivity options and LED lighting.

- **Multi-functional Playback:** Supports CD, Bluetooth, USB stick, SD card (via USB adapter, if applicable), AUX input, and FM radio.
- **Bluetooth Connectivity:** Connects wirelessly to Bluetooth-enabled devices for audio streaming.
- **Built-in HiFi Speakers:** Delivers clear stereo sound.
- **Wall Mount & Desktop Options:** Can be mounted on a wall or placed on a desktop using the included stand.
- **Remote Control:** Full control over playback and settings.
- **LED Display:** Shows track information and mode.
- **Headphone Jack:** For private listening.
- **A-B Repeat Function:** Repeats a specific section of audio.
- **Memory Function:** Resumes playback from the last stopped position.
- **CD Touch Protection:** Automatically slows down if the CD is touched during playback.

SETUP

1. Power Connection

1. Connect the power adapter to the DC input port on the CD player.
2. Plug the power adapter into a standard electrical outlet.
3. The player will power on when the power cord is pulled down from the bottom.

2. Placement Options



Image: Demonstrates the two primary placement methods for the CD player.

Desktop Placement:

- Attach the provided desktop stand to the bottom of the CD player.
- Place the player on a stable, flat surface.

Wall Mounting:

- Choose a suitable wall location, ensuring it is free from electrical wires or pipes.
- Use the provided wall mounting bracket as a template to mark screw positions.
- Drill pilot holes and insert wall anchors if necessary.

- Secure the mounting bracket to the wall using the provided screws.
- Carefully slide the CD player onto the mounted bracket until it clicks securely into place.

OPERATING INSTRUCTIONS

1. Power On/Off

- To power on, gently pull the power cord downwards.
- To power off, pull the power cord downwards again.

2. Mode Selection

Press the **MODE** button on the remote control or the unit to cycle through available modes: CD, Bluetooth, USB, AUX, FM Radio.

3. CD Playback



Image: Supported disc formats for CD playback.

1. Ensure the player is in CD mode.
2. Gently insert a CD into the disc slot until it is fully seated. The player will automatically begin reading the disc.
3. Use the **PLAY/PAUSE**, **PREV**, and **NEXT** buttons on the remote or unit to control playback.
4. To eject the CD, press the **STOP** button twice.

Note: The player supports CD, CD-R, CD-RW, MP3, and WMA formats.

If some one happens to touch the CD, the player will automatically slows down



Image: The player's safety feature that slows down the CD if touched.

4. Bluetooth Mode



Image: Demonstrates connecting a smartphone via Bluetooth to the CD player.

1. Switch the player to Bluetooth mode. The LED display will show "BT" and a pairing indicator.
2. On your Bluetooth-enabled device (e.g., smartphone, tablet), enable Bluetooth and search for available devices.
3. Select "Technical Pro CD Player" (or similar name) from the list to pair.
4. Once paired, you can stream audio from your device to the CD player.

5. USB Playback

1. Insert a USB flash drive containing MP3/WMA files into the USB port.
2. Switch the player to USB mode. The player will automatically detect and begin playing audio files.
3. Use the **PLAY/PAUSE**, **PREV**, and **NEXT** buttons to control playback.

6. AUX Input

1. Connect an external audio device (e.g., MP3 player, smartphone) to the AUX input jack using a 3.5mm audio cable (not included).
2. Switch the player to AUX mode.
3. Control playback directly from your connected external device.

7. FM Radio

1. Switch the player to FM Radio mode.
2. Press the **PLAY/PAUSE** button to initiate an automatic station scan. The player will scan and save available FM stations.
3. Use the **PREV** and **NEXT** buttons to navigate through saved stations.

8. Remote Control Functions



Image: The CD player and its remote control, detailing button layout.

- **CD/RADIO/USB/AUX/BT:** Selects the operating mode.
- **VOL+/-:** Adjusts volume level.
- **PLAY/PAUSE:** Starts or pauses playback.
- **PREV/NEXT:** Skips tracks/stations or fast forwards/rewinds.
- **STOP:** Stops playback; press twice to eject CD.
- **REPEAT:** Cycles through repeat modes (e.g., repeat one, repeat all).
- **A-B:** Sets A-B repeat points.
- **EQ:** Adjusts equalizer settings (if available).
- **PROG:** Programs track order for CD playback.
- **Number Buttons (0-9):** Direct track selection in CD/USB mode.

9. LED Lighting

The player features multi-color LED lighting. Use the dedicated LED button on the remote control (if available) or cycle through lighting modes by pressing a specific button on the unit (refer to unit markings) to change colors or turn off the lighting.

MAINTENANCE

- **Cleaning the Unit:** Wipe the exterior of the player with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Cleaning CDs:** Use a soft, lint-free cloth to wipe CDs from the center outwards. Do not use circular motions.
- **Storage:** When not in use for extended periods, unplug the power adapter and store the unit in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not power on.	Power adapter not connected; power cord not pulled.	Ensure power adapter is securely connected and plugged into a working outlet. Pull the power cord to turn on.
CD does not play or skips.	CD is dirty, scratched, or inserted incorrectly; unsupported format.	Clean the CD. Check for scratches. Reinsert the CD correctly. Ensure the CD format (CD, CD-R, CD-RW, MP3, WMA) is supported.
No sound.	Volume too low; incorrect mode selected; headphones connected.	Increase volume. Verify correct mode (CD, BT, USB, AUX, FM). Disconnect headphones if using speakers.
Bluetooth device won't pair.	Player not in Bluetooth mode; device too far; device already paired elsewhere.	Ensure player is in BT mode. Move device closer. Disconnect from other Bluetooth devices.
FM radio reception is poor.	Weak signal; interference.	Adjust the player's position. Try rescanning for stations.
Remote control not working.	Batteries dead; obstruction; too far.	Replace remote batteries. Remove obstructions between remote and player. Ensure remote is within range.

SPECIFICATIONS

- **Model:** TPCDP3032
- **Product Dimensions:** 8.5 x 8.5 x 2 inches
- **Item Weight:** 2.51 pounds
- **Supported Disc Formats:** CD, CD-R, CD-RW, MP3, WMA
- **Connectivity:** Bluetooth, USB, AUX (3.5mm), FM Radio
- **Power Source:** AC Power Adapter (included)
- **Special Features:** Wall-mountable, Desktop Stand, Remote Control, LED Lighting, Headphone Jack, A-B Repeat, Memory Function

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official Technical Pro website. Keep your purchase receipt as proof of purchase for warranty claims.

Manufacturer: Technical Pro