

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [PIKOY](#) /

› [PIKOY Night Light Projector Instruction Manual](#)

## PIKOY B0CQ85124K

# PIKOY Night Light Projector Instruction Manual

Brand: PIKOY | Model: B0CQ85124K

## INTRODUCTION

Thank you for choosing the PIKOY Night Light Projector. This device is designed to create a relaxing and engaging atmosphere in children's rooms with its diverse lighting modes and projection films. Please read this manual carefully to ensure proper setup, operation, and maintenance of your new night light projector.

## WHAT'S IN THE BOX

- PIKOY Night Light Projector Unit
- Remote Control
- USB Charging Cable
- 6 Projection Films (Star Moon, Fly Unicorn with Star Moon, Unicorns, Butterfly, Mermaid, Princess)
- User Manual

## KEY FEATURES

- **90 Lighting Modes:** Combines 6 films with 15 light colors for varied visual experiences.
- **6 Interchangeable Films:** Includes Star Moon, Fly Unicorn with Star Moon, Unicorns, Butterfly, Mermaid, and Princess themes.
- **360° Silent Rotation:** Projects dynamic patterns without distracting noise.
- **Remote Control:** Conveniently adjust settings from a distance.
- **Adjustable Brightness:** 5 brightness levels (20%, 40%, 60%, 80%, 100%).

- **Auto-Off Timer:** Set timers for 15, 30, or 60 minutes.
- **Rechargeable Battery:** Built-in 2400mAh battery for cordless operation.



The PIKOY Night Light Projector offers 90 lighting modes by combining 6 unique films with 15 color options.

## SETUP

### 1. Charging the Device

Before first use, fully charge the night light projector. Connect the provided USB charging cable to the device's charging port and a suitable USB power adapter (not included). The charging indicator light will show the charging status.



The projector features a rechargeable battery for convenient cordless use.

## 2. Installing/Changing Projection Films

1. Gently remove the outer dome cover from the projector.
2. If a film is already installed, carefully remove it.
3. Select your desired projection film. Ensure to peel off any protective film from both sides of the new projection film for a clearer image.
4. Align the tabs on the film with the slots on the projector's inner ring. Press down gently to secure the film.
5. Replace the outer dome cover, ensuring it clicks into place.

This video demonstrates the process of installing and changing the projection films on the night light projector.

## OPERATING INSTRUCTIONS

### 1. Device Buttons


The projector unit has several buttons for direct control:

Button	Function
Power Button	Turns the projector ON/OFF.
Light Color Button	Cycles through 15 light color modes.
Rotation Button	Activates/Deactivates 360° rotation.
Brightness Button	Adjusts brightness levels (20%, 40%, 60%, 80%, 100%).

### 2. Remote Control Functions

The included remote control provides full functionality from a distance:

Button on Remote	Function
ON/OFF	Power ON/OFF.
Color Cycle	Cycles through light colors.
Rotation	Activates/Deactivates rotation.
Brightness +/-	Increases/Decreases brightness.
Timer (15/30/60 min)	Sets auto-off timer.

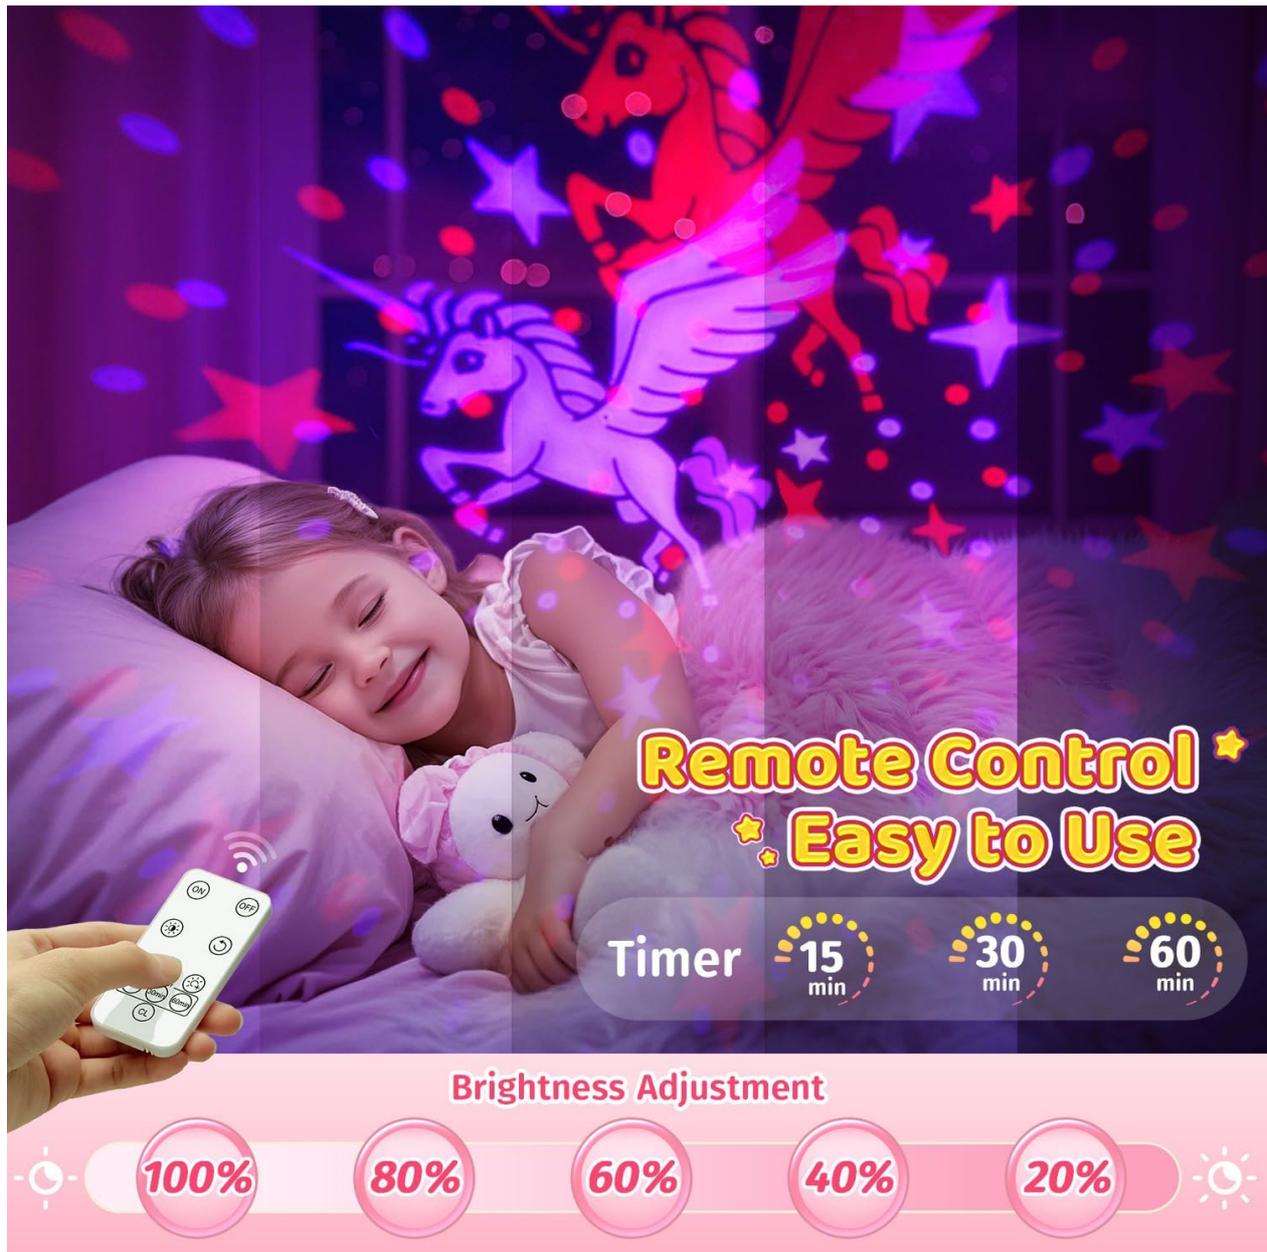

The remote control allows for easy adjustment of timer and brightness settings.

### 3. Changing Projection Modes

The projector offers 90 different lighting modes. Use the 'Light Color Button' on the device or the 'Color Cycle' button on the remote to switch between the 15 available colors. Each color combined with the selected film creates a unique projection mode.

This video showcases the various lighting modes and film projections available with the PIKOY Night Light Projector.

## 4. Rotation Function

Press the 'Rotation Button' on the device or remote to start or stop the 360° rotation of the projected images. This adds a dynamic element to the visual display.



The 360° silent rotation feature helps create a soothing environment for sleep.

## 5. Timer Settings

Use the timer buttons on the remote control to set the projector to automatically turn off after 15, 30, or 60 minutes. This is ideal for bedtime routines.

## 6. Brightness Adjustment

Adjust the projection brightness using the 'Brightness +/-' buttons on the remote control or the 'Brightness Button' on the device. There are 5 levels to choose from to suit different preferences.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the projector's surface. Do not use abrasive cleaners or immerse the device in water.
- **Film Care:** Handle projection films by the edges to avoid fingerprints or scratches. Store unused films in a clean, dry place.
- **Storage:** When not in use for extended periods, store the projector in a cool, dry place away from direct sunlight.

## TROUBLESHOOTING

Problem	Solution
Projector does not turn on.	Ensure the device is charged. Connect to a power source using the USB cable.
Projection is blurry or unclear.	Check if the protective film has been removed from both sides of the projection film. Ensure the film is correctly installed.
Remote control is not working.	Check the remote control battery. Ensure there are no obstructions between the remote and the projector.
Rotation is not smooth or makes noise.	Ensure the projector is on a flat, stable surface. If the issue persists, contact customer support.

## SPECIFICATIONS

Feature	Detail
Product Dimensions	5.04"D x 5.04"W x 5.04"H
Item Weight	1.13 ounces
Power Source	Battery Powered (Rechargeable Lithium Ion)

Feature	Detail
Light Source Type	LED
Material	Plastic
Voltage	4.5 Volts
Control Method	Remote, On-device buttons
Special Features	Cordless, Dimmable, Rechargeable, Color changing, Multiple lighting modes, Timer, Remote control compatibility

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official PIKOY website. Keep your purchase receipt as proof of purchase.