

[Manuals.plus](#) /

› [UPIKIT](#) /

› UPIKIT Dual Suction Cup Tile Vibrator User Manual

UPIKIT Tile Leveling Machine

UPIKIT Dual Suction Cup Tile Vibrator User Manual

Model: Tile Leveling Machine

INTRODUCTION

Thank you for choosing the UPIKIT Dual Suction Cup Tile Vibrator. This electric tile leveling machine is designed to simplify the installation of various tile sizes, offering powerful suction and efficient vibration for a smooth and precise finish. Please read this manual thoroughly before operation to ensure safe and effective use of the product.

SAFETY INSTRUCTIONS

- Always wear appropriate personal protective equipment (PPE) such as safety glasses and gloves during operation.
- Ensure the work area is clean, well-lit, and free from obstructions.
- Keep children and bystanders away from the operating area.
- Do not operate the machine in wet conditions or near flammable liquids or gases.
- Before each use, inspect the machine for any damage, loose parts, or worn components. Do not use if damaged.
- Use only the original battery and charger provided with the device.
- Do not attempt to modify or disassemble the machine. Refer all servicing to qualified personnel.
- Ensure the tile surface is clean and free of dust or debris before applying the suction cups.
- Avoid dropping the machine or subjecting it to strong impacts.

PACKAGE CONTENTS

Please check the package contents upon receipt to ensure all items are present and undamaged:

- 1 x UPIKIT Tile Vibrator Machine
- 1 x Original Lithium Battery (21V 2000mAh)
- 1 x Original Charger
- 1 x Original Plastic Case
- 1 x Hexagon Wrench (as shown in accessories image)



Accessories



Plactic Box



Lithium Battery



Hexagon Wrench



Charger

Figure 1: Included Accessories and Components. The image displays the main tile vibrator unit, a 21V lithium battery, a power charger, a hexagon wrench, and a durable plastic carrying case.

PRODUCT OVERVIEW

The UPIKIT Tile Vibrator features a robust design for efficient tile installation.



Figure 2: Main Product View. This image shows the complete tile vibrator unit with its dual suction cups, ergonomic handle, and the included battery, charger, and carrying case in the background.

Key Features:

- **Dual Suction Cup Design:** Features two 115mm (4.5 inch) rubber suction cups for powerful and stable tile adsorption. Each cup can absorb up to 200kg, allowing for easy handling of large tiles.
- **Shockproof Handle:** Ergonomically designed handle with a built-in spring to absorb vibration, ensuring comfortable and secure grip during operation.
- **6-Gear Vibration Adjustment:** Allows for precise control of vibration speed, adaptable to different tile sizes and plaster thicknesses.
- **Rechargeable Lithium Battery:** Powered by a high-quality 21V 2000mAh lithium battery, providing approximately 6 hours of continuous operation on a full 2-hour charge.

SETUP

1. Charging the Battery

1. Remove the lithium battery from the tile vibrator or its packaging.
2. Connect the original charger to a standard power outlet.
3. Insert the battery into the charger. The indicator light on the charger will show the charging status.
4. Allow approximately 2 hours for a full charge. Disconnect the charger once the battery is fully charged.

2. Attaching the Battery

- Align the charged battery with the battery slot on the tile vibrator.
- Slide the battery into the slot until it clicks securely into place. Ensure it is firmly seated to prevent accidental detachment during operation.

OPERATING INSTRUCTIONS

1. Preparing the Tile

- Ensure the tile surface is clean, dry, and free of dust or debris for optimal suction.
- Apply the adhesive or mortar to the wall or floor as per standard tiling practices.

2. Adsorbing the Tile

Adsorption Design



Figure 3: Suction Cup Lock Mechanism. This image highlights how to engage and release the suction cup lock for secure tile adsorption.

1. Place the tile vibrator's suction cups onto the tile surface.
2. Press down firmly on the handle to create a vacuum seal.
3. Engage the lock button on each suction cup to secure the tile firmly. This prevents the tile from falling or breaking during movement.
4. Carefully lift and position the tile onto the prepared surface.

3. Activating Vibration and Leveling



6-gear Adjustment

*

The vibration speed can be adjusted freely according to the size of the tile body and the thickness of tiles.

Figure 4: 6-Gear Adjustment Display. This image highlights the digital display showing the current vibration gear setting and the ON/OFF button for one-click vibration.

1. Once the tile is in place, press the ON/OFF button (often located near the handle) to activate the vibration function.
2. Use the gear adjustment controls (usually buttons or a dial) to select the desired vibration speed from 1 to 6. Adjust the speed based on the tile size and the thickness of the adhesive/plaster.
3. Gently move the vibrator across the tile surface to ensure even distribution of adhesive and proper leveling.
4. After leveling, release the lock buttons on the suction cups and carefully remove the vibrator from the tile.



Figure 5: Tile Vibrator in Use. This image demonstrates the tile vibrator being used to level a large tile on a wall, showcasing its practical application.

MAINTENANCE

- **Cleaning:** After each use, wipe down the suction cups and the body of the machine with a damp cloth to remove any adhesive residue or dust. Do not use harsh chemicals or abrasive cleaners.

- **Storage:** Store the tile vibrator and its accessories in the original plastic case in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** For long-term storage, ensure the battery is partially charged (around 50%). Recharge the battery every 3-6 months if not in use to maintain its lifespan.
- **Inspection:** Regularly inspect the suction cups for any cuts, tears, or signs of wear. Replace them if damaged to ensure optimal suction performance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not turn on.	Battery is not charged or not properly inserted.	Ensure battery is fully charged and securely inserted into the machine.
Weak suction.	Suction cups are dirty, damaged, or not properly sealed.	Clean suction cups. Check for damage and ensure firm pressure is applied when engaging the lock. Ensure tile surface is clean.
Vibration is weak or inconsistent.	Low battery charge or internal malfunction.	Recharge the battery. If problem persists, contact customer support.
Machine overheats.	Prolonged continuous use.	Allow the machine to cool down. Avoid continuous operation for extended periods.

SPECIFICATIONS

Product Parameters



- Product Name: Tile Vibrator

■ Gear: 6 gears
- Applicable Tiles: 23.6-70.8in

■ Vibration Frequency: 28000rpm
- Max. Adsorption Weight: 200kg

■ Item Weight: 2.4kg

Figure 6: Product Dimensions and Parameters. This image provides a visual representation of the tile vibrator’s dimensions and lists its key technical specifications.

Parameter	Value
Product Name	Dual Suction Cup Tile Vibrator
Brand Name	UPIKIT
Model / Part Number	Tile Leveling Machine
Vibration Speed	12,000 VPM (Vibrations Per Minute)
Battery Capacity	2,000 mAh (21V Lithium-Ion)

Parameter	Value
Gears	6 adjustable speeds
Suction Cup Diameter	4.5 inches (115 mm)
Max. Adsorption Capacity	440 lbs (200 kg)
Applicable Tile Size	23.6 - 70.8 inches (60 - 180 cm)
Net Weight	5.3 lbs (2.4 kg)
Package Dimensions	40.5 x 17.5 x 15 cm

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact UPIKIT customer service directly. Please have your product model number and purchase date available when contacting support.

Manufacturer: UPIKIT

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CQ87RGGL>

More documents and user manuals: <https://manuals.plus/>