

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Peavey](#) /

› [Peavey FX 24 II 24-Channel Professional Audio Mixer Console User Manual](#)

Peavey FX 24 II

Peavey FX 24 II 24-Channel Professional Audio Mixer Console User Manual

Model: **FX 24 II** | Brand: **Peavey**

1. INTRODUCTION AND OVERVIEW

The Peavey FX 24 II is a professional 24-channel audio mixer console designed for live sound, studio recording, and various audio applications. It features a high-power dual DSP engine for enhanced digital effects, USB connectivity for recording and playback, 48V phantom power for condenser microphones, and comprehensive routing options including 6 auxiliary sends and 4 subgroups. This manual provides essential information for the safe and effective operation of your mixer.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Peavey FX 24 II 24-Channel Professional Audio Mixer Console
 - Power Cord
 - User Manual (this document)
-

4. SETUP

4.1 Power Connection

1. Ensure the mixer's power switch is in the OFF position.
2. Connect the provided power cord to the AC inlet on the rear panel of the mixer.
3. Plug the other end of the power cord into a suitable AC power outlet.

4.2 Audio Input Connections

The FX 24 II offers 24 XLR microphone inputs and line inputs for various audio sources.

- **Microphones:** Connect dynamic or condenser microphones to the XLR inputs (1-24). For condenser microphones, activate 48V phantom power as described in Section 5.2.
- **Line-Level Devices:** Connect instruments, keyboards, or other line-level devices to the 1/4-inch TRS/TS inputs. The mixer also features 2 stereo channels with dual mic/line inputs.

4.3 Audio Output Connections

Connect your main speakers, monitors, or recording devices to the mixer's outputs.

- **Main Outputs:** Use the XLR or 1/4-inch outputs for connecting to your main PA system or powered speakers.
- **Auxiliary Sends:** Connect monitor speakers or external effects processors to the 6 Aux Send outputs.
- **Subgroup Outputs:** Utilize the 4 subgroup outputs for routing groups of channels to external devices or for sub-mixing.



Figure 4.1: Rear panel connections of the Peavey FX 24 II mixer.

4.4 USB Connection for Recording/Playback

The mixer supports USB 2.0 connectivity for digital audio streaming and recording.

- **USB 2.0 "A" Port:** Connect a memory stick (not included) to record directly or play back audio files.
- **USB 2.0 "B" Port:** Connect to your computer for streaming digital audio out or for multi-track recording.

SUPPORTS USB & COMPUTER

Compatible with USB and MP3. Connect external USB devices, computers, or flash drives for mixing and recording.



COMPUTER



USB

Figure 4.2: USB and computer connectivity for the Peavey FX 24 II mixer.

5. OPERATING INSTRUCTIONS

5.1 Channel Controls

Each input channel features the following controls:

- **GAIN:** Adjusts the input sensitivity for the connected microphone or line-level device.
- **EQ (Equalizer):** 3-band EQ with sweepable mid-frequency allows for precise tonal shaping.
- **AUX Sends:** Controls the amount of signal sent to each of the 6 auxiliary outputs.
- **PAN:** Positions the channel's signal within the stereo field.
- **MUTE:** Silences the channel.
- **FADER:** 100mm fader controls the channel's output level to the main mix and subgroups.

5.2 Phantom Power Activation

To power condenser microphones, activate the 48V phantom power:

1. Ensure all channel faders are at their minimum position.
2. Connect condenser microphones to the XLR inputs.
3. Locate the **48V PHANTOM POWER** switch (usually a global switch or per-channel, refer to the mixer's panel for exact location).
4. Engage the switch. An indicator light will illuminate.
5. Gradually raise the channel faders to the desired level.

Caution: Do not activate phantom power when dynamic microphones or non-phantom powered devices are connected, as this may cause damage.

5.3 Effects Processor Usage

The FX 24 II features a dual DSP engine with improved digital effects.

- Use the dedicated controls in the effects section to select and adjust various effects such as reverb, delay, chorus, etc.
- Apply effects to individual channels using the channel's FX send controls.



Figure 5.1: Top view of the mixer, highlighting the effect program list and key features.

5.4 USB Recording and Playback

- **Recording to Memory Stick:** Insert a USB memory stick into the USB 2.0 "A" port. Use the mixer's USB controls to initiate and manage recording.
- **Playback from Memory Stick:** Insert a USB memory stick with audio files. Use the mixer's USB controls to select and play back tracks.
- **Computer Streaming/Recording:** Connect the USB 2.0 "B" port to your computer. The mixer will function as an audio interface, allowing you to stream digital audio or record multiple tracks into your Digital Audio Workstation (DAW).



Figure 5.2: Detailed view of the mixer's control surface.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Peavey FX 24 II mixer.

- **Cleaning:** Regularly wipe the mixer's surface with a soft, dry, lint-free cloth. Do not use abrasive cleaners, solvents, or waxes.
- **Dust Protection:** When not in use, cover the mixer with a dust cover to prevent dust and debris from entering the controls and faders.
- **Storage:** Store the mixer in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cable Management:** Ensure all cables are neatly organized and not under tension to prevent damage to connectors and ports.

7. TROUBLESHOOTING

If you encounter issues with your Peavey FX 24 II mixer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No sound output	Power not connected; Master fader down; Channel fader down; Mute engaged; Incorrect output connection.	Check power, raise master and channel faders, disengage mute, verify output cables.
Distorted sound	Input gain too high; Output level too high; Damaged cable.	Reduce input gain and output levels, try a different cable.
Condenser mic not working	48V phantom power not engaged; Faulty microphone or cable.	Engage 48V phantom power, test with another condenser mic or cable.
USB recording/playback issues	Incorrect USB port used; USB drive not formatted correctly; Driver issues (for computer connection).	Ensure correct USB port (A for stick, B for computer), format USB drive to FAT32, install necessary drivers for computer.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	Peavey FX 24 II
Number of Channels	24
Microphone Inputs	24 XLR inputs
Phantom Power	48V (for each channel input)
Aux Sends	6
Stereo Inputs	2 (with dual mic/line inputs)
Subgroups	4
Faders	100mm
DSP Engine	High-power dual DSP with improved digital effects
EQ	3-band with sweepable mid-frequency and variable low cut filters; 28-band GEQ/5-band PEQ (output processing)
USB Connectivity	USB 2.0 "A" (record/playback from memory stick), USB 2.0 "B" (streaming digital out & computer recording)

Feature	Detail
Power Source	Corded Electric
Package Dimensions	54 x 52 x 29 cm
Item Weight	9.9 kg
Manufacturer	Peavey Electronics Corporation
Country of Origin	USA

9. WARRANTY AND SUPPORT

Peavey products are designed for reliability and performance. For specific warranty information, please refer to the warranty card included with your product or visit the official Peavey website.

Customer Support:

For technical assistance, service, or parts, please contact:

- **Manufacturer:** Peavey Electronics Corporation
- **Indian Distributor/Service Partner:** MX-MDR TECHNOLOGIES LIMITED
- **Address:** Plot 101, Sector 1, Gauraiпада, Vasai (East), Palghar - 401208, Mumbai, INDIA.
- **Email:** info@mdrelectronics.com / dipesh@mdrelectronics.com
- **Contact No.:** 9552529345 / 8805029016
- **Website:** www.mdrelectronics.com