



Manuals.plus /

› Redragon /

› Redragon Gamepad Harrow Pro Wireless G808-PRO User Manual

Redragon G808-PRO

Redragon Gamepad Harrow Pro Wireless G808-PRO

USER MANUAL

1. Introduction

This manual provides detailed instructions for the Redragon Harrow Pro Wireless G808-PRO Gamepad. Please read this manual carefully before using the product to ensure proper operation and to maximize your gaming experience. This gamepad is designed for multi-platform compatibility, including PC, PlayStation 3, and Android devices, offering both wireless and wired connectivity options.

2. Product Overview

The Redragon Harrow Pro Wireless G808-PRO is a robust and comfortable gamepad featuring 13 buttons and 2 analog sticks. It includes dual vibration motors for force feedback, customizable LED illumination, and sensitive triggers for precise control. The design incorporates anti-slip rubber on the analog sticks and grips for enhanced handling.



Figure 1: Front view of the Redragon Harrow Pro Wireless G808-PRO Gamepad. It features a black body with teal LED accents around the analog sticks and the central Redragon logo. The face buttons (Y, X, B, A) are colored yellow, blue, red, and green respectively. There are also 'TURBO', 'CLEAR', 'SELECT', 'START', and 'LED' buttons visible.

HARROW PRO

ROBUSTO Y CÓMODO



✔ CUENTA CON 13 BOTONES Y 2 STICKS

Figure 2: The Redragon Harrow Pro Gamepad, highlighting its robust and comfortable design. The image confirms the presence of 13 buttons and 2 analog sticks, essential for comprehensive gaming control.

3. Setup

3.1 Wireless Connection (2.4GHz Dongle)

1. Locate the 2.4GHz USB dongle included with your gamepad.
2. Insert the USB dongle into an available USB port on your PC, PlayStation 3 console, or Android device (an OTG adapter may be required for some Android devices).
3. Turn on the gamepad by pressing the central Redragon logo button. The gamepad will automatically attempt to pair with the dongle.
4. Once connected, the LED indicators on the gamepad will stabilize, indicating a successful connection.

¡JUEGA LIBRE!

Conexión Dongle USB 2.4 Ghz



✔ Incluye cable USB-C a USB-A de 1.5m

Figure 3: The Redragon 2.4 GHz USB dongle, which enables wireless connectivity for the gamepad. The image also indicates that a 1.5m USB-C to USB-A cable is included for wired connection and charging.

3.2 Wired Connection

1. Connect the USB-C end of the provided cable to the gamepad's USB-C port.
2. Connect the USB-A end of the cable to an available USB port on your PC or PlayStation 3 console.
3. The gamepad will automatically switch to wired mode and be ready for use.

3.3 Charging the Gamepad

The gamepad is equipped with a 600 mAh Li-ion battery. To charge:

1. Connect the gamepad to a USB power source (e.g., PC, USB wall adapter) using the provided USB-C to USB-A cable.
2. The LED indicators on the gamepad will show charging status. Refer to the LED behavior section for details.
3. A full charge typically takes approximately 2-3 hours.

HECHO PARA LA BATALLA

Plástico resistente ABS



✓ BATERÍA LI-ION DE 600 MAH

Figure 4: Side view of the Redragon Harrow Pro Gamepad, emphasizing its durable ABS plastic construction and the integrated 600 mAh Li-ion battery, which provides power for wireless operation.

4. Operating Instructions

4.1 Button Layout and Functions

The gamepad features a standard layout for intuitive control:

- **Analog Sticks:** Two high-precision analog sticks with anti-slip rubber for smooth movement and aiming.
- **D-Pad:** A responsive directional pad for precise input.
- **Face Buttons (Y, X, B, A):** Standard action buttons.
- **Shoulder Buttons (L1, R1) & Triggers (L2, R2):** Sensitive triggers and shoulder buttons for quick actions.
- **SELECT/BACK & START:** Standard function buttons.
- **TURBO Button:** Activates turbo function for rapid button presses.
- **CLEAR Button:** Deactivates turbo function.
- **LED Button:** Controls the gamepad's LED illumination.
- **Redragon Logo Button:** Power on/off and home button.



Figure 5: Close-up view of the Redragon Harrow Pro Gamepad highlighting key features. This includes the dual vibration motors for force feedback, the LED illumination around the analog sticks, and the 2.4 GHz USB dongle for wireless connectivity.

4.2 LED Illumination

The gamepad features customizable RGB LED lighting. Press the 'LED' button to cycle through different lighting modes or to turn the illumination on/off. Refer to the product's official software (if available) for advanced customization.

4.3 Vibration Feedback

The dual vibration motors provide immersive force feedback during gameplay, enhancing the realism of impacts and in-game events. This feature is automatically enabled when supported by the game.

GATILLOS SENSITIVOS CONSTRUIDO DE PLÁSTICO ABS



GOMA ANTIDESLIZANTE
en los sticks analógicos y en el grip.

Figure 6: Side view of the Redragon Harrow Pro Gamepad, showcasing its sensitive triggers and the anti-slip rubber material on the analog sticks and grips. This design ensures comfortable and precise control during extended gaming sessions.

5. Maintenance

5.1 Cleaning

To clean your gamepad, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid using harsh chemicals, abrasive materials, or excessive moisture, as these can damage the device.

5.2 Battery Care

The gamepad uses a built-in rechargeable Li-ion battery. To prolong battery life:

- Avoid fully discharging the battery frequently.
- Store the gamepad in a cool, dry place when not in use for extended periods.
- Charge the gamepad regularly, even if not in constant use, to maintain battery health.

6. Troubleshooting

6.1 Gamepad Not Connecting Wirelessly

- Ensure the USB dongle is securely plugged into a working USB port.
- Make sure the gamepad is powered on.
- Try re-pairing the gamepad by turning it off and on again, or by pressing a dedicated pairing button if available (refer to specific product documentation if present).
- Test the dongle in a different USB port or on another compatible device to rule out port issues.
- Ensure the gamepad is sufficiently charged.

6.2 Gamepad Not Responding in Wired Mode

- Verify that the USB-C cable is firmly connected to both the gamepad and the host device.
- Try using a different USB port on your PC or console.
- Test with a different USB-C cable to rule out cable damage.

6.3 Buttons or Analog Sticks Unresponsive

- Restart the gamepad and the host device.
- Ensure no debris is lodged around the buttons or sticks.
- Check if the issue persists across different games or applications.

7. Specifications

| | |
|--------------------------------|---|
| Model Name | Harrow Pro Wireless G808-PRO |
| Brand | Redragon |
| Compatible Devices | Android, PC, PlayStation 3 |
| Controller Type | Gamepad |
| Connectivity Technology | 2.4GHz Wireless (USB Dongle), Wired (USB-C) |
| Battery | 600 mAh Li-ion (Rechargeable) |
| Product Dimensions | 3.94 x 3.94 x 3.94 inches |
| Item Weight | 13 ounces |
| Material | ABS Plastic, Anti-slip Rubber |

8. Warranty and Support

For warranty information and detailed support, please refer to the official Redragon website or contact Redragon customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.
Redragon Official Website: www.redragonusa.com