

## Flieks WF311379AAK-MZJ

# Flieks Solid Wood Veneer Cabinet - Model WF311379AAK-MZJ Instruction Manual

## 1. INTRODUCTION

Thank you for choosing the Flieks Solid Wood Veneer Cabinet. This manual provides essential information for the safe assembly, operation, and maintenance of your new cabinet. Please read these instructions thoroughly before beginning assembly and retain them for future reference.

## 2. SAFETY INFORMATION

### Important Safety Instructions:

- Always assemble the cabinet on a soft, clean surface to prevent scratches.
- Ensure all parts are securely fastened before use. Do not overtighten screws.
- Do not allow children to climb on or play with the cabinet.
- Distribute weight evenly across shelves and the top surface to prevent tipping. The table top has a weight capacity of 220 lbs.
- If an anti-tip kit is included, it is highly recommended to install it to secure the cabinet to a wall, especially in homes with children or pets.
- Keep small parts and packaging materials away from children.

## 3. PACKAGE CONTENTS

Before assembly, verify that all components and hardware are present and undamaged. Refer to the included

parts list in your packaging. All hardware accessories and parts are labeled for easy identification.

Typical contents include:

- Cabinet panels (top, bottom, sides, back, doors)
- Adjustable shelves
- Legs
- Door handles
- Assembly hardware (screws, dowels, hinges, shelf pins, etc.)
- Assembly tools (if provided, e.g., Allen wrench)

## 4. SETUP AND ASSEMBLY

---

This cabinet requires assembly. Follow the detailed, step-by-step instructions provided in the separate assembly guide included in your package. Ensure you have adequate space and the necessary tools before starting.

1. **Unpack:** Carefully remove all components from the packaging.
2. **Identify Parts:** Match each part to the corresponding label in the assembly guide.
3. **Assemble Frame:** Connect the main cabinet panels according to the instructions.
4. **Attach Legs:** Secure the pine legs to the base of the cabinet.
5. **Install Doors:** Attach the three fir doors using the provided hinges.
6. **Install Handles:** Fasten the metal door handles.
7. **Insert Shelves:** Place the adjustable shelves at your desired height.
8. **Final Check:** Ensure all connections are tight and the cabinet is stable.



Image: Front angled view of the assembled Flieks Solid Wood Veneer Cabinet, showcasing its three doors and overall design.

## 5. OPERATING INSTRUCTIONS

Your Flieks cabinet is designed for versatile storage in various rooms such as studies, corridors, or entrances.

- **Opening/Closing Doors:** Gently pull or push the metal handles to open and close the three cabinet doors.
- **Adjusting Shelves:** The cabinet features three adjustable shelves. To change a shelf's height, remove all items from the shelf, lift the shelf, and reposition the shelf pins to the desired slots. Ensure all four shelf pins are securely in place before placing items back on the shelf.
- **Weight Distribution:** For stability and longevity, distribute items evenly across the shelves and the cabinet top. Do not exceed the top surface weight capacity of 220 lbs.



Image: Interior view of the Fliex cabinet with its three doors open, revealing the adjustable shelves inside for customizable storage.

## 6. CARE AND MAINTENANCE

Proper care will help maintain the appearance and longevity of your Fliex cabinet.

- **Cleaning:** Wipe the cabinet surfaces with a soft, dry cloth. Avoid abrasive cleaners, harsh chemicals, or excessive moisture, which can damage the wood veneer and finish.
- **Spills:** Immediately wipe up any spills with a dry cloth to prevent staining or damage.
- **Sunlight:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration.
- **Heat and Humidity:** Keep the cabinet away from direct heat sources and areas with extreme humidity fluctuations to prevent warping or cracking.
- **Hardware:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary.

## 7. TROUBLESHOOTING

If you encounter issues with your cabinet, refer to the following common solutions:

Problem	Possible Cause	Solution
Cabinet is wobbly or unstable.	Loose fasteners; uneven floor.	Ensure all screws are tightened. Adjust leg levelers if present, or place shims under legs on an uneven floor.

Problem	Possible Cause	Solution
Doors do not close properly or are misaligned.	Hinges are loose or improperly adjusted.	Check and tighten hinge screws. Adjust hinge mechanisms if they offer adjustment options (refer to hinge manufacturer's instructions if needed).
Shelves are not level.	Shelf pins are not inserted correctly or are in different height slots.	Ensure all four shelf pins are fully inserted into corresponding slots at the same height.
Scratches or minor damage to the finish.	Accidental impact or abrasion.	For minor scratches, a wood repair kit or furniture marker matching the finish color may be used. Consult a professional for significant damage.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Flieks
Model Number	WF311379AAK-MZJ
Overall Dimensions (L x W x H)	47.2" x 15.7" x 31.5"
Table Material	MDF
Frame Material	MDF + Fir
Cabinet Door Material	MDF + Fir
Legs Material	Pine
Door Handle Material	Metal
Cabinet Texture	Fraxinus mandschuric
Table Top Weight Capacity	220 lbs
Adjustable Shelves	Yes, 3 shelves
Assembly Required	Yes
UPC	195358408834



Image: Diagram showing the dimensions of the Flieks cabinet, indicating a width of 52.17 inches, a height of 19.49 inches, and a depth of 9.84 inches.

## 9. WARRANTY AND SUPPORT

For warranty information or if you require assistance with your Flieks cabinet, please refer to the warranty card included in your packaging or contact Flieks customer support through the retailer's platform or the official Flieks website. Please have your model number (WF311379AAK-MZJ) and purchase details ready when contacting support.