

Remote Control

Generic Remote Control Instruction Manual

For Wimius T4, T7, and EUB X99+AB Projectors

1. INTRODUCTION

This manual provides instructions for the Generic replacement remote control, designed for use with Wimius T4, T7, and EUB X99+AB WiFi 4K HD 1080P Video LED Projectors. This remote functions as a direct replacement for your original remote, offering essential control over your projector's features. No complex setup or programming is required; simply insert batteries and begin use.



Image 1.1: Front view of the remote control. This image displays the full layout of the remote control, including all buttons for power, navigation, playback, and numerical input.

2. SETUP

2.1. Battery Installation

The remote control requires two (2) AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the

markings inside the compartment.

4. Replace the battery compartment cover, ensuring it clicks securely into place.



Image 2.1: Back view of the remote control with the battery compartment open. This image shows the location of the battery compartment and the correct orientation for inserting AAA batteries.

2.2. Initial Use

This remote control is an infrared (IR) replacement and does not require any pairing or code setup. Once batteries are installed, point the remote directly at your compatible projector and press the desired function button.

3. OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your remote control:



Image 3.1: Close-up front view of the remote control buttons. This image provides a clearer view of the individual buttons and their labels for easier identification.

- **Power:** Turns the projector ON or OFF.
- **Mute:** Mutes or unmutes the projector's audio.
- **Playback Controls:**
 - **Rewind / Fast Forward**
 - **Previous / Next**
 - **Play / Pause**
 - **Stop**

- **AUD.LANG:** Selects audio language or track.
- **PVR:** Accesses Personal Video Recorder functions (if supported by projector).
- **Source:** Selects input source (HDMI, USB, etc.).
- **EPG:** Displays the Electronic Program Guide (if supported by projector).
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates menus and confirms selections.
- **Menu:** Opens the projector's main menu.
- **Exit:** Exits the current menu or function.
- **Number Pad (0-9):** For direct channel input or numerical selections.
- **-/-:** Toggles between single and double-digit channel input.
- **Recall/Return:** Returns to the previous channel or menu.

Note: Specific functions may vary depending on your projector model and its firmware. Refer to your projector's original manual for detailed information on its features.

4. MAINTENANCE

4.1. Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these may damage the surface or internal components.

4.2. Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

4.3. Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Point the remote directly at the projector's IR receiver.
 - Ensure there are no obstructions between the remote and the projector.
 - Verify that your projector model (Wimius T4, T7, EUB X99+AB) is compatible with this remote.
- **Some buttons not working:**
 - Some advanced functions may be specific to the original remote or projector model. Refer to your projector's manual.
 - Clean the remote's surface and buttons to ensure no debris is interfering.

If issues persist, consider contacting the seller for further assistance.

6. SPECIFICATIONS

Product Type	Replacement Infrared Remote Control
Brand	Generic
Compatible Projectors	Wimius T4, Wimius T7, EUB X99+AB WiFi 4K HD 1080P Video LED Projectors
Power Source	2 x AAA Batteries (not included)
Connectivity	Infrared (IR)
Color	Black
Special Feature	Ergonomic design, direct replacement

7. WARRANTY AND SUPPORT

This product is a generic replacement remote control. Specific warranty information may vary by seller. For any issues or support inquiries, please contact the original seller or manufacturer of the remote control. Please retain your purchase receipt for any warranty claims.