

[Manuals.plus](#) /

› [WOWOW](#) /

› WOWOW Touchless Bathroom Faucet Model 2322301B Instruction Manual

WOWOW 2322301B

WOWOW Touchless Bathroom Faucet Instruction Manual

Model: 2322301B

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your WOWOW Touchless Bathroom Faucet. Please read this manual thoroughly before installation and keep it for future reference.

Touchless Bathroom Faucet



The WOWOW Touchless Bathroom Faucet provides hands-free operation for enhanced hygiene.

PRODUCT COMPONENTS

Before beginning installation, ensure all components are present and undamaged. The package includes:

- Touchless Faucet Body
- Control Box

-
- Note: Always flush pipework before installation.
The installation place which you choose and design should not be under strong sunlight and strong light directly.
1. Insert O-ring under base angle.
2. Insert threaded rod under faucet body.
3. Please insert the faucet into the basin, and the sensor wires should go through the basin. The size of the hole should be 32mm to 40mm.
4. Please insert sensor wires through the gasket and the 1/2x3/4 gasket in order. Tighten the fixing nut in order to fix the faucet in the basin firmly.
5. Screw Outlet hose under the M10 inlet of the faucet body.
6. Install the control box as shown on the right.
7. Connect the water temperature regulator with the gasket to the control box inlet.
8. Connect the cold water (blue) and hot water (red) to the water temperature regulator respectively.
9. Using the Outlet hose connect the faucet. G1/2 inlet to the control box water outlet.
10. Plug the sensor wires to the control box sensor wire plug (left).
11. Open the water supply, the faucet will work right away. If the faucet does not work normally, please try to repeat step 4 to step 6. Take out the batteries for several minutes then put them back, and the faucet will work normally.

SETUP AND INSTALLATION

Installation Steps:

1. **Prepare the Sink:** Ensure the mounting hole on your sink or vanity is clean and has a diameter of 35mm. If using the deck plate, place it over the hole.
2. **Mount the Faucet:** Insert the faucet body into the mounting hole. Secure it from underneath the sink using the provided mounting hardware (gaskets and nuts). Ensure the faucet is oriented correctly.

3. **Connect the Temperature Mixer:** Screw the temperature mixer onto the cold water supply line.
4. **Connect Water Hoses:** Attach the hot and cold water hoses to the corresponding inlets on the temperature mixer and the faucet's control box.
5. **Connect the Control Box:** Connect the control box to the faucet body and the temperature mixer. Ensure all connections are tight to prevent leaks.
6. **Install Batteries:** Open the battery compartment on the control box and insert 4 AA alkaline batteries (not included). Close the compartment securely.
7. **Test for Leaks:** Turn on the water supply and check all connections for any leaks.

Visual guide for connecting the faucet components.



Detail of the faucet's threaded base for secure mounting.



The temperature mixer allows for precise water temperature adjustment.

Installation Video Guide:

Official video demonstrating the installation process for the WOWOW Touchless Bathroom Faucet.

OPERATING INSTRUCTIONS

The WOWOW Touchless Bathroom Faucet is designed for ease of use and water efficiency.

Automatic Sensor Operation:

The faucet features an intelligent sensor window. Simply place your hands within the sensing range, and water will flow automatically within 1 second. When your hands are removed, the water flow will stop automatically. This touchless operation promotes hygiene and reduces water waste.



The integrated sensor detects hand movement for automatic water activation.

Temperature Adjustment:

The faucet includes a temperature mixer located under the sink. You can adjust the water temperature by rotating the mixer left or right to achieve your desired hot and cold water ratio. This allows for personalized water temperature control.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your faucet.

Cleaning:

Clean the faucet regularly with a soft cloth and mild soap. Avoid abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the matte black finish and sensor. Wipe the sensor window gently to ensure proper function.

Battery Replacement:

The sensor is powered by 4 AA batteries. When the sensor light begins to flash continuously, it indicates that the battery power is low and the batteries need to be replaced. Use new alkaline batteries for best performance.

Aerator Maintenance:

The high-performance aerator ensures an even and soft water stream. If water flow becomes irregular or reduced, the aerator may be clogged. Unscrew the aerator from the spout, clean any debris, and reattach it securely.

TROUBLESHOOTING

If you encounter issues with your faucet, refer to the following common problems and solutions:

- **No Water Flow:**

- Check if the water supply valves are fully open.
- Ensure batteries are correctly installed and not depleted (sensor light flashing indicates low battery). Replace batteries if necessary.
- Verify that the sensor window is clean and unobstructed.
- Check for kinks in the water supply hoses.

- **Intermittent Water Flow:**

- Clean the sensor window.
- Ensure there are no reflective surfaces directly opposite the sensor that might interfere with its operation.

- Check battery level and replace if low.

- **Water Temperature Issues:**

- Adjust the temperature mixer under the sink to achieve the desired hot/cold balance.
- Ensure both hot and cold water supply lines are open.

- **Low Water Pressure:**

- Clean the aerator for any mineral buildup or debris.
- Check the water supply pressure to your home.


- **Leaks:**

- Tighten all connections, ensuring gaskets are properly seated.
- If leaks persist, contact customer support.

SPECIFICATIONS

Feature	Specification
Brand	WOWOW
Model Name	Touchless Bathroom Faucet
Model Number	2322301B
Mounting Type	Deck Mount, Single Hole
Finish Type	Matte Black
Material	Metal
Color	Matte Black
Hole Count	1
Special Feature	360° Swivel Spout
Handle Type	Sensor (Touchless)
Is Electric	Yes (Battery Powered)
Mounting Hole Diameter	35 Millimeters
Item Dimensions (D x W x H)	16.54"D x 11.02"W x 3.54"H

DIMENSION

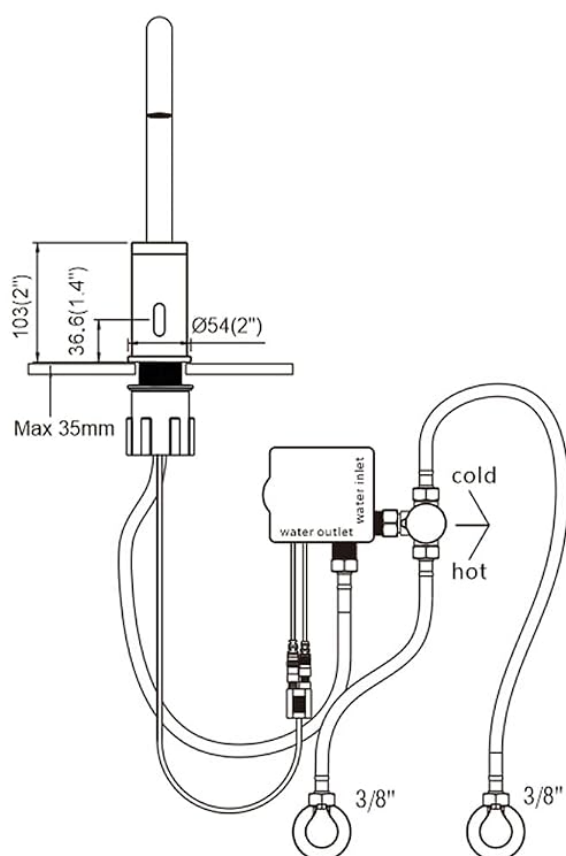

Detailed dimensions of the faucet and its components.

WARRANTY INFORMATION

This WOWOW Touchless Bathroom Faucet comes with a limited warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration of coverage. The warranty typically covers manufacturing defects under normal use.

CUSTOMER SUPPORT

For any questions, technical assistance, or warranty claims, please contact WOWOW customer support. You can find contact information on the WOWOW official website or through your purchase platform.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question