

[Manuals+](#)

[Q & A](#) | [Deep Search](#) | [Upload](#)

Greadio CD-W16

Greadio Portable CD Player with Cassette Recorder User Manual

Model: CD-W16

PRODUCT OVERVIEW

The Greadio CD-W16 is a versatile portable audio system offering multiple playback options and recording capabilities. It features a compact design, a powerful rechargeable battery, and intuitive controls, making it suitable for various environments.



Figure 1: Gradio CD-W16 Portable CD Player with Cassette Recorder and Remote Control.

WHAT'S IN THE BOX

- CD Player (CD-W16) x1
- Type-C Cable x1
- User Manual x1
- Remote Control x1

SETUP

Initial Charging

Before first use, fully charge the device using the provided Type-C cable. The built-in 5000mAh rechargeable battery provides up to 16 hours of playback after a 3-hour charge.



Figure 2: Charging the Greadio CD-W16 via Type-C cable.

OPERATING INSTRUCTIONS

Power On/Off

Press and hold the **Power button** (🔌) for 2 seconds to turn the CD player on or off.

Mode Selection

Press the **FUNC. button** repeatedly to cycle through available modes: CD, Bluetooth, Radio, Cassette, AUX, USB, and SD Card.

Your browser does not support the video tag.

Video 1: Demonstrates switching between various playback modes on the Greadio CD-W16.

CD Mode

1. Press the **FUNC. button** to select CD mode.
2. Press the **STOP/EJ. button** to open the CD compartment.
3. Insert a CD with the label side facing up.
4. Close the CD compartment. The player will automatically start reading the CD.
5. Press **PLAY/PAUSE** (⏮) to play or pause the track.
6. Press **PREV** (⏮) or **NEXT** (⏭) to skip tracks. Hold these buttons to fast forward or rewind.
7. Press **VOL-** or **VOL+** to adjust the volume.
8. Press and hold the **EQ button** to cycle through sound modes: NORMAL, ROCK, POP, JAZZ, CLASS.
9. Press the **REP button** to select repeat modes: ONE (repeat current track), ALL (repeat all tracks), SFL (shuffle), OFF.
10. Press the **PROG button** to program playback order.



Figure 3: CD playback and control functions.

Cassette Mode

1. Press the **FUNC. button** to select Cassette mode.
2. Press the **STOP/EJ. button** to open the cassette compartment.
3. Insert a cassette tape.
4. Press **PLAY** to start playback.
5. Press and hold **F.FWD** or **F.REW** to fast forward or rewind the tape.
6. Press **STOP/EJ.** to stop playback and eject the cassette.
7. To record, insert a blank cassette, then simultaneously press **PLAY** and **REC.** The device can record audio from CD, USB, Bluetooth, AUX, or Radio modes onto the cassette.



Sleep Timer
Stellen Sie eine Einschlafzeit von 10-120 Minuten ein, schalten Sie die Boombox regelmäßig aus, um die Batterie zu schonen.

Figure 4: Cassette playback and recording functions.

Bluetooth Mode

The CD-W16 supports both Bluetooth transmission (sending audio to Bluetooth headphones/speakers) and reception (receiving audio from a smartphone/tablet).

Bluetooth Transmission

1. Press and hold the **Bluetooth button** (📶) for 2 seconds to activate Bluetooth transmission mode. The display will show "FEAT".
2. Place your Bluetooth receiving device (headphones, speaker) in pairing mode.
3. The CD-W16 will automatically search and connect to nearby Bluetooth devices.



Figure 5: Bluetooth transmission mode.

Bluetooth Reception

1. Press the **FUNC. button** to select Bluetooth mode. The display will show "BLUE".
2. On your mobile phone or other Bluetooth device, search for "CD-W16" in the Bluetooth settings.
3. Select "CD-W16" to connect. Once connected, you can play audio from your device through the CD-W16 speakers.
4. Use the **PREV** or **NEXT** buttons on the CD-W16 to change tracks on the connected device.



Figure 6: Bluetooth reception mode.

FM Radio Mode

1. Press the **FUNC. button** to select FM Radio mode.
2. Extend the telescopic antenna for better reception.
3. Press and hold the **SCAN button** to start automatic station scanning and preset storage. The player can store up to 30 stations.
4. Press **PREV** or **NEXT** to manually tune the frequency.
5. To recall a preset station, press the **PROG button**, then use **PREV** or **NEXT** to select the preset number. Press **PROG** again to confirm.



Figure 7: FM Radio functions.

USB & SD Card Playback

1. Press the **FUNC. button** to select USB or SD Card mode.
2. Insert a USB flash drive into the USB port or an SD card into the SD card slot. The device supports MP3 format up to 32GB.
3. Playback will begin automatically. Use the **PLAY/PAUSE**, **PREV**, and **NEXT** buttons for control.



Figure 8: USB and SD Card playback options.

AUX Input Mode

1. Press the **FUNC. button** to select AUX mode.
2. Connect an external audio device (e.g., smartphone, MP3 player) to the AUX-IN port using a 3.5mm audio cable.
3. Play audio from your external device. The sound will be output through the CD-W16 speakers.

Sleep Timer

The sleep timer allows you to set a specific time (10-120 minutes) after which the boombox will automatically turn off, conserving battery life.

1. Press the **SLEEP button** on the remote control to activate the sleep timer.
2. Repeatedly press the **SLEEP button** to cycle through the preset sleep times (e.g., 10, 20, 30, ..., 120 minutes).

3. The selected time will be displayed. The device will power off automatically after the set duration.



Figure 9: Sleep Timer function.

Remote Control Operation

The included remote control provides convenient access to all major functions of the CD-W16.

- **Power Button:** Short press to turn the unit on/off.
- **FUNC Button:** Short press to switch between CD, Bluetooth, Radio, Cassette, AUX, USB, and SD Card modes.
- **Play/Pause, PREV, NEXT Buttons:** Control playback, skip tracks, fast forward/rewind.
- **VOL+/- Buttons:** Adjust volume.
- **EQ Button:** Short press to cycle through sound modes (NORMAL, ROCK, POP, JAZZ, CLASS).
- **REP Button:** Short press to select repeat modes (ONE, ALL, SFL, OFF).
- **Number Buttons (0-9):** Directly jump to specific tracks in CD/USB/SD modes.
- **Bluetooth Button:** Short press for quick Bluetooth connection, long press for Bluetooth transmission.
- **SLEEP Button:** Set the sleep timer.

Boombox CD-Player mit Fernbedienung



Figure 10: Remote control for the Greadio CD-W16.

MAINTENANCE

- Clean the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Keep the CD and cassette compartments free from dust and debris.
- Avoid exposing the unit to extreme temperatures, humidity, or direct sunlight.
- When not in use for extended periods, fully charge the battery and store the unit in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	Low battery or power adapter issue.	Charge the battery. Ensure the power cable is securely connected.

Problem	Possible Cause	Solution
CD/Cassette/USB/SD not playing.	Incorrect mode selected, media inserted incorrectly, or damaged media.	Verify the correct mode. Reinsert media correctly. Try different media.
No sound.	Volume too low, mute activated, or incorrect output selected.	Increase volume. Check if mute is active. Ensure correct mode is selected.
Bluetooth pairing failed.	Device too far, not in pairing mode, or interference.	Ensure devices are close. Put both devices in pairing mode. Restart both devices.
Poor radio reception.	Antenna not extended or weak signal.	Fully extend the telescopic antenna. Reposition the unit for better signal.

SPECIFICATIONS

Model Number: CD-W16

Brand: Greadio

Connectivity Technology: Bluetooth

Color: White

Speaker Type: Stereo

Product Dimensions: 19.2 x 19.2 x 13.1 cm; 1.66 Kilograms (7.56 x 7.56 x 5.16 inches; 3.66 lbs)

Battery: 1 Lithium-Ion battery required (included) - 5000mAh

Power Input: 5V/2A Type-C

Supported Media: CD, CD-R, CD-RW, Cassette, FM Radio, Bluetooth 5.1, USB, AUX, SD Card (up to 32GB)

WARRANTY AND SUPPORT

Greadio products come with a standard manufacturer's warranty. For detailed warranty information, technical support, or customer service inquiries, please refer to the contact information provided on the product packaging or the official Greadio website. Please retain your proof of purchase for warranty claims.

For further assistance, you may also visit the [Greadio Store on Amazon](#).