

[Manuals.plus](#) /

› [Aigostar](#) /

› Aigostar Retro 2-Slice Toaster and 1L Electric Kettle Instruction Manual

Aigostar Retro 2-Slice Toaster & 1L Electric Kettle

Aigostar Retro 2-Slice Toaster and 1L Electric Kettle Instruction Manual

Model: Retro 2-Slice Toaster & 1L Electric Kettle

1. INTRODUCTION

Thank you for choosing the Aigostar Retro 2-Slice Toaster and 1L Electric Kettle. This manual provides important information for the safe and efficient operation of your new appliances. Please read these instructions carefully before use and keep them for future reference.

The Aigostar Retro 2-Slice Toaster features extra-wide slots, multiple browning levels, and convenient functions for perfect toast every time. The Aigostar 1L Electric Kettle offers rapid boiling with safety features for your hot beverage needs.

2. SAFETY PRECAUTIONS

- Read all instructions before using the appliances.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or appliances in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliances for other than intended use.

3. PRODUCT OVERVIEW

Aigostar Retro 2-Slice Toaster

This toaster features a retro design with modern functionality, including extra-wide slots for various bread types and multiple browning settings.



Image: The Aigostar Retro 2-Slice Toaster in cream white, with two slices of golden-brown toast emerging from its slots. The control panel with buttons and browning dial is visible on the front.

Aigostar 1L Electric Kettle

A compact and portable electric kettle designed for quick and safe water boiling, featuring automatic shut-off and boil-dry protection.



Image: The Aigostar 1L Electric Kettle in brown and cream, showing the water level indicator with water inside.

4. SETUP

Toaster Setup

1. Unpack the toaster and remove all packaging materials.
2. Place the toaster on a stable, heat-resistant surface away from flammable materials.
3. Ensure the crumb tray is properly inserted at the bottom of the toaster.
4. Before first use, operate the toaster without bread on the highest browning setting (level 6) to burn off any manufacturing residues. A slight odor or smoke may occur, which is normal. Allow to cool completely.

Kettle Setup

1. Unpack the kettle and its power base.
2. Place the power base on a flat, stable surface.
3. Fill the kettle with fresh water to the MAX line and boil. Discard this water. Repeat this process 2-3 times to clean the kettle before first use.

5. OPERATING INSTRUCTIONS

Toaster Operation



Image: Close-up of the Aigostar Retro 2-Slice Toaster's control panel, highlighting the Cancel, Bagel, Reheat, and Defrost buttons, along with the browning control dial.

1. **Insert Bread:** Place up to two slices of bread, bagels, or muffins into the extra-wide slots (1.6 inches wide, 5.5 inches long).

2. **Select Browning Level:** Use the browning control knob to select your desired level from 1 (lightest) to 6 (darkest).



Image: A visual guide showing six different browning levels for toast and bagels, corresponding to the toaster's browning settings from level 1 (light) to level 6 (dark).

3. **Lower Lever:** Press the carriage lever down until it locks into place. The toaster will begin toasting.
4. **Special Functions:**
- **Cancel:** Press the 'Cancel' button to stop the toasting cycle at any time.
 - **Bagel:** Press the 'Bagel' button after lowering the lever. This function toasts the cut side of the bagel while gently warming the other side.
 - **Reheat:** Press the 'Reheat' button after lowering the lever. This warms previously toasted bread without further browning.
 - **Defrost:** Press the 'Defrost' button after lowering the lever. This function thaws and toasts frozen bread.
5. **Remove Toast:** Once the toasting cycle is complete, the toast will automatically pop up. Carefully remove the toast.

Kettle Operation



Image: The Aigostar 1L Electric Kettle with icons and text pointing out its safety features: 1L capacity, Cool-Touch Handle, Auto Shut-Off, Boil-Dry Protection, and BPA-Free construction.

1. **Fill Kettle:** Open the 120° broad opening lid and fill the kettle with the desired amount of water. Do not exceed the MAX fill line (1.0L) or fill below the MIN line.
2. **Place on Base:** Place the kettle securely on its 360° rotary power base.
3. **Power On:** Plug the power cord into a wall outlet. Press the ON/OFF switch to begin boiling. The indicator light will illuminate.
4. **Automatic Shut-Off:** The kettle will automatically turn off once the water has boiled. The indicator light will extinguish.
5. **Pour Water:** Carefully lift the kettle from its base and pour the hot water. The cool-touch handle ensures safe handling.

6. MAINTENANCE

Toaster Maintenance

1. **Cleaning the Crumb Tray:** After each use, allow the toaster to cool completely. Slide out the removable crumb tray from the back of the toaster. Discard crumbs and wipe the tray clean with a damp cloth. Reinsert the tray.



Image: The Aigostar Retro 2-Slice Toaster with its easy-clean removable crumb tray pulled out from the bottom, showing accumulated crumbs.

2. **Exterior Cleaning:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads.

Kettle Maintenance

1. **Exterior Cleaning:** Wipe the exterior of the kettle with a soft, damp cloth.
2. **Interior Cleaning/Descaling:** To remove mineral deposits, fill the kettle with a mixture of water and white vinegar (1:1 ratio). Boil the mixture and let it stand for at least 30 minutes, or longer for heavy deposits. Empty the kettle and rinse thoroughly with fresh water.

- 3. **Removable Filter:** The kettle includes a removable filter for easy cleaning. Remove and rinse under running water as needed.

7. TROUBLESHOOTING

Toaster Troubleshooting

- **Toaster does not operate:** Ensure the power cord is securely plugged into a working outlet. Check if the carriage lever is fully pressed down and locked.
- **Uneven Toasting:** Ensure bread slices are evenly sized and centered in the slots. Adjust browning level as needed.
- **Smoke from Toaster:** Unplug immediately. Remove any lodged food particles or excessive crumbs from the crumb tray. Clean the interior if necessary (after cooling).

Kettle Troubleshooting

- **Kettle does not boil:** Ensure the kettle is properly seated on the power base and the ON/OFF switch is pressed. Check if the power cord is plugged in.
- **Kettle turns off too quickly:** This may indicate mineral buildup. Descale the kettle as described in the Maintenance section.
- **Water tastes metallic:** Ensure the kettle has been properly cleaned before first use. Repeat the initial boiling and discarding process.

8. SPECIFICATIONS

Feature	Specification
Brand	Aigostar
Toaster Color	Cream White
Kettle Color	Brown
Wattage	1100 watts
Number of Toaster Slices	2
Toaster Slot Width	1.6 inches
Toaster Slot Length	5.5 inches
Toaster Browning Levels	6
Kettle Capacity	1.0 Liter

Feature	Specification
Kettle Special Features	Automatic Shut-Off, Boil Dry Protection, Portable, BPA-Free, Cordless Body, 360° Rotary Base, Integrated Cord-Wrap
ASIN	B0CQCHHDSK

9. WARRANTY AND SUPPORT

Aigostar products are designed for reliability and performance. For specific warranty information and customer support, please refer to the warranty card included with your purchase or visit the official Aigostar website. Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance, you may contact Aigostar customer service through their official channels.

© 2023 Aigostar. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CQCHHDSK>

More documents and user manuals: <https://manuals.plus/>