

Aigostar Window Box

Aigostar Maha 4L Air Fryer Instruction Manual

Model: Window Box | Brand: Aigostar

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation of your Aigostar Maha 4L Air Fryer, Model Window Box. This appliance is designed for cooking a variety of foods using rapid hot air circulation, offering a healthier alternative to traditional deep frying. Please read this manual thoroughly before first use and retain it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for other than intended use.
- Ensure adequate ventilation around the appliance during use.
- Never fill the basket with oil.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Aigostar Maha Air Fryer:

- Main Unit with Control Panel
- Removable Non-Stick Basket with Cool-Touch Handle
- Illuminated Viewing Window
- Power Cord



Figure 3.1: Aigostar Maha 4L Air Fryer with its illuminated viewing window, showing prepared food.

4. SETUP AND FIRST USE

4.1 Unpacking

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Check that all components are present and undamaged.

4.2 Cleaning Before First Use

1. Wipe the exterior of the air fryer with a damp cloth.
2. Clean the non-stick basket with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely.
3. Do not immerse the main unit in water or any other liquid.


4.3 Placement

- Place the air fryer on a stable, heat-resistant surface.
- Ensure there is at least 10 cm (4 inches) of free space on the back and sides, and 10 cm (4 inches) above the appliance to allow for proper ventilation.
- Do not place the appliance against a wall or other appliances.

5. OPERATING INSTRUCTIONS


5.1 Control Panel Overview

The Aigostar Maha Air Fryer features a large digital LED touch panel for easy operation. It includes preset functions, temperature and time controls, and a light button for the viewing window.

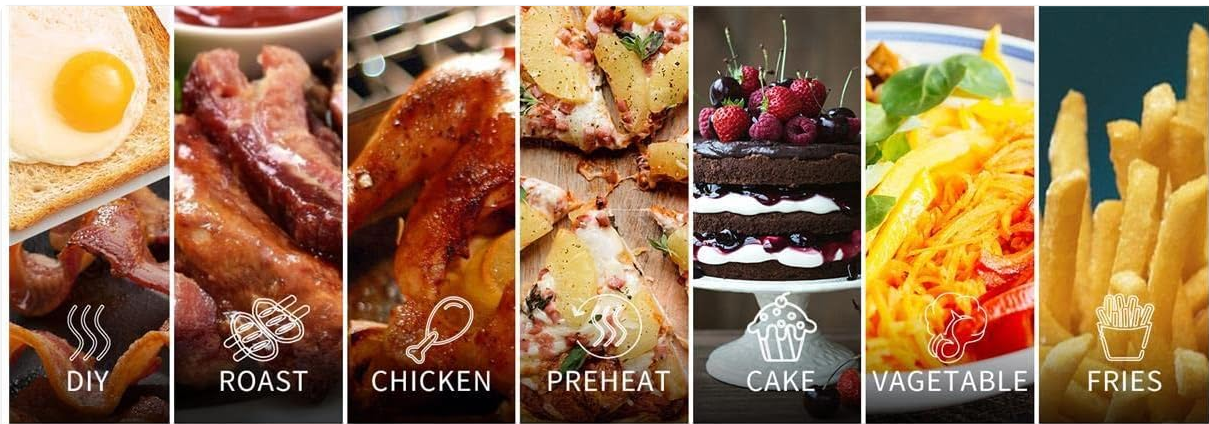

7 PRESET FUNCTIONS

Make it as delicious as you want

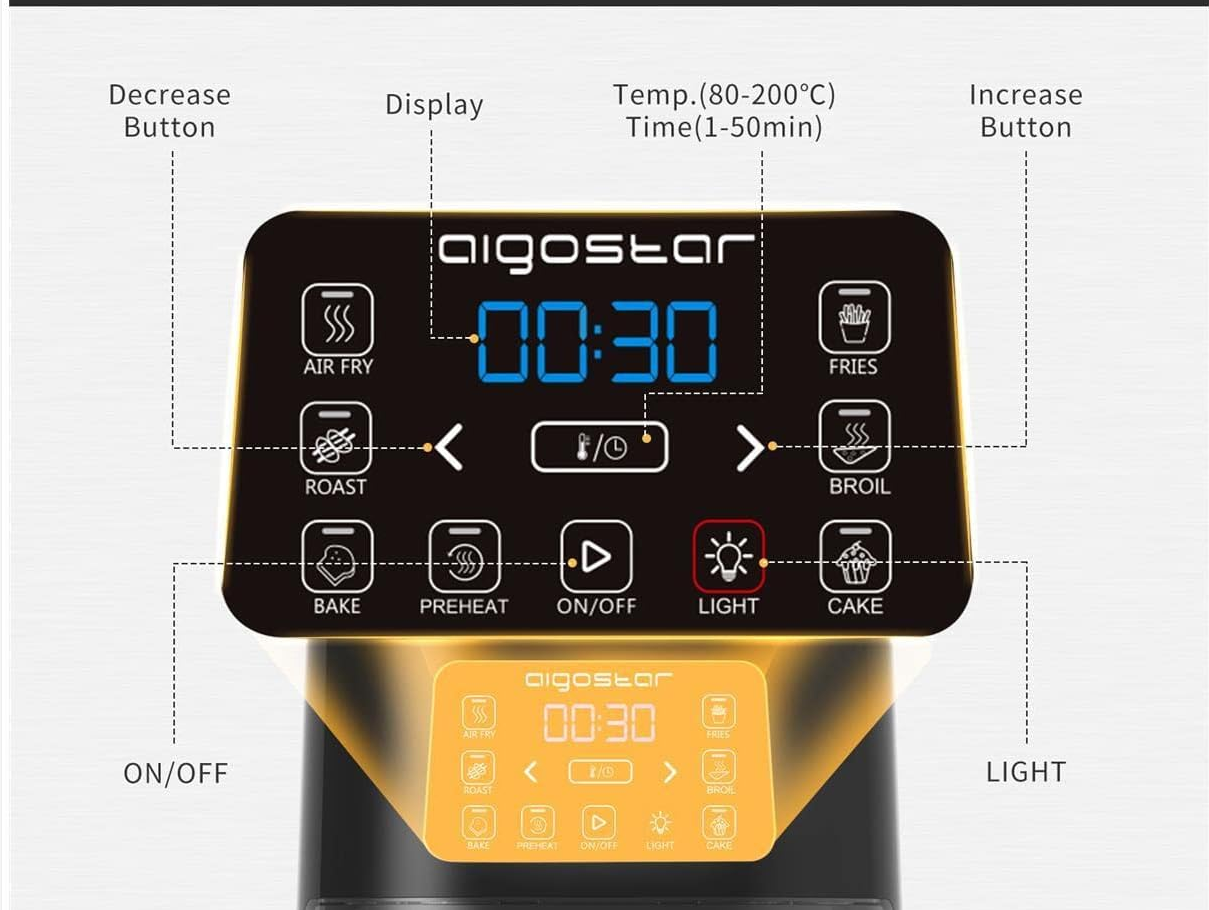

5.2 General Operation

1. **Prepare Food:** Place your ingredients in the air fryer basket. For best results, lightly coat food with oil if desired, but it is not always necessary.
2. **Insert Basket:** Slide the basket back into the main unit until it clicks into place.
3. **Power On:** Plug the appliance into a grounded wall outlet. The display will illuminate.
4. **Select Function:**
 - **Preset Programs:** Choose one of the 5 pre-programmed functions (Grill, Chicken, Fries, Vegetables, Dessert) by pressing the corresponding icon. The air fryer will automatically set the optimal time and temperature.
 - **Manual Mode:** Alternatively, use the temperature and time adjustment buttons to set your desired cooking parameters. The temperature range is typically 80-200°C and time up to 50 minutes.
 - **Preheat Mode:** Select the preheat function for optimal cooking results, especially for items that benefit from a hot start.
5. **Start Cooking:** Press the Start/Pause button to begin the cooking cycle.
6. **Monitor Progress:** Use the illuminated viewing window to check on your food without opening the basket, preserving heat and cooking efficiency. Press the 'LIGHT' button to turn the internal light on or off.
7. **Shake/Flip Food:** For even cooking, some recipes may require shaking or flipping ingredients halfway through the cooking time. Carefully pull out the basket using the cool-touch handle, shake or flip, and reinsert. The air fryer will resume cooking automatically.
8. **End of Cooking:** The air fryer will beep when the cooking time is complete. Carefully remove the basket and transfer food to a serving dish.

360° RAPID HEATING CIRCULATION



Figure 5.2: Rapid 360-degree hot air circulation for efficient cooking.



Figure 5.3: Removing the non-stick cooking basket.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

6.1 Cleaning the Basket

1. After each use, unplug the air fryer and allow it to cool completely.
2. Remove the non-stick basket.
3. Wash the basket with hot water, dish soap, and a non-abrasive sponge. For stubborn food residue, soak the basket in hot water for about 10 minutes before cleaning.
4. The basket is **not** dishwasher safe.
5. Rinse thoroughly and dry completely before storing or next use.

6.2 Cleaning the Exterior

- Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads.
- Ensure no water enters the appliance's interior.

6.3 Storage

Store the air fryer in a cool, dry place, ensuring it is clean and dry before storage.

7. TROUBLESHOOTING

If you encounter issues with your air fryer, refer to the following table for common problems and solutions:

| Problem | Possible Cause | Solution |
|---------------------------------------|--|--|
| Air fryer does not turn on. | Appliance is not plugged in. | Plug the power cord into a grounded wall outlet. |
| Food is not cooked evenly. | Basket is overloaded; food not shaken/flipped. | Cook in smaller batches; shake or flip food halfway through cooking. |
| White smoke comes from the appliance. | Grease residue from previous use; fatty ingredients. | Clean the basket thoroughly; remove excess oil from food. |
| Food is not crispy. | Not enough oil; temperature too low; cooking time too short. | Lightly brush food with oil; increase temperature or cooking time. |

8. SPECIFICATIONS

Technical specifications for the Aigostar Maha Air Fryer:

| Feature | Value |
|--------------------------|--|
| Special Feature | Viewing Window |
| Color | Black |
| Capacity | 4 Liters |
| Material | Stainless Steel, Acrylonitrile Butadiene Styrene (ABS), Polypropylene (PP) |
| Recommended Product Uses | Roasting, Baking, Dehydrating |
| Output Power | 1600 Watts |
| Wattage | 1600 watts |
| Voltage | 240 Volts |
| Control Method | Touch |
| Air Frying Technology | True |
| Smart Home Compatibility | Not Smart Home Compatible |
| Item Weight | 5.5 Kilograms |
| Has Non-Stick Coating | Yes |
| Dishwasher Safe | No |

| Feature | Value |
|----------------|-----------------|
| Inner Material | Stainless Steel |
| Brand Name | Aigostar |
| Model Name | Window Box |
| Manufacturer | Aigostar |
| Part Number | 220931 |

9. WARRANTY AND SUPPORT

Your Aigostar Maha Air Fryer is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical support, troubleshooting assistance beyond this manual, or to inquire about replacement parts, please contact Aigostar customer service through their official website or the contact information provided in your product packaging.