



Manuals.plus /

› EDOSTORY /

› EDOSTORY 5-in-1 Pikler Triangle Set Instruction Manual

EDOSTORY 5-in-1 Pikler Triangle Set

EDOSTORY 5-in-1 Pikler Triangle Set Instruction Manual

Model: 5-in-1 Pikler Triangle Set

INTRODUCTION

Thank you for choosing the EDOSTORY 5-in-1 Pikler Triangle Set. This versatile wooden climbing set is designed to promote active play and motor skill development in toddlers. It offers multiple configurations to keep children engaged and entertained while supporting their physical growth and coordination.

This manual provides essential information for the safe assembly, operation, and maintenance of your Pikler Triangle Set. Please read all instructions carefully before assembly and use.

SAFETY INFORMATION

- Adult supervision is required at all times when children are using the Pikler Triangle Set.
- Ensure the product is assembled correctly and all fasteners are securely tightened before use.
- Place the set on a flat, stable surface. Avoid placing it near stairs, windows, or other hazards.
- The maximum weight recommendation for this product is 130 pounds.
- Recommended age for use is 3 years and up.
- Regularly inspect the product for any loose parts, damage, or wear. Discontinue use if any issues are found.
- Keep small children and pets away from the assembly area.

COMPONENTS LIST

The EDOSTORY 5-in-1 Pikler Triangle Set includes the following main components:

- Foldable Climbing Triangle
- Climbing Arch / Rocking Arch
- Double-sided Ramp (Slide / Climbing Ramp)

- Assembly Hardware (screws, knobs, etc.)

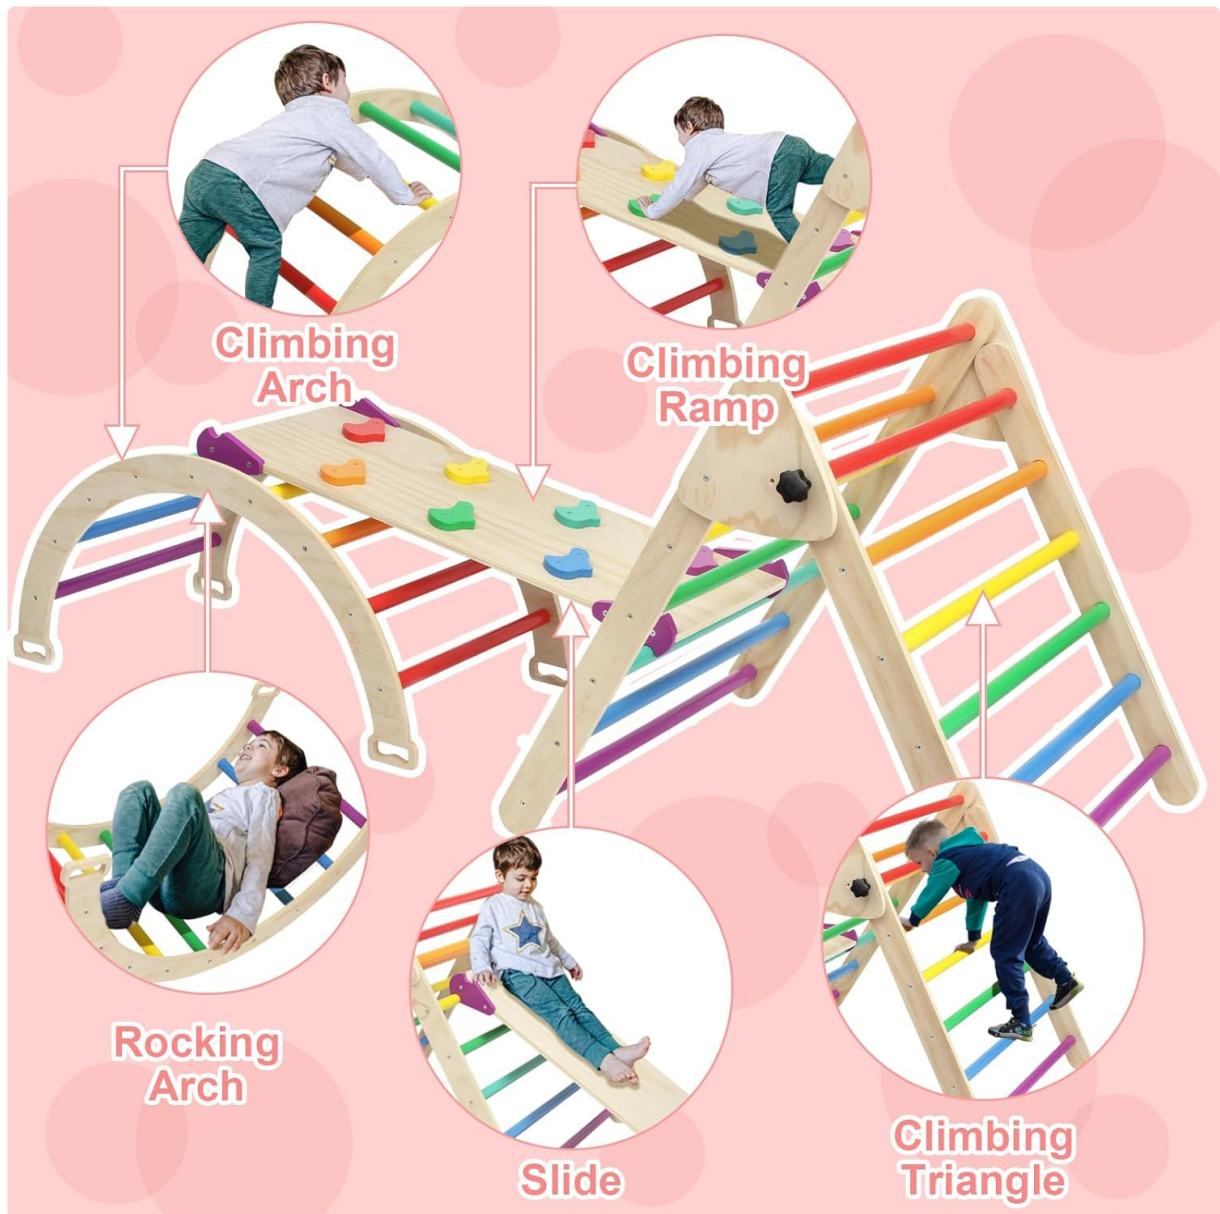


Figure 1: Main components and approximate dimensions of the set.

ASSEMBLY INSTRUCTIONS

Assembly is required for this product. Please follow the steps below and refer to the provided diagrams and video for visual guidance.

1. Unpack all components and verify against the parts list in your included paper manual.
2. Begin by assembling the main Climbing Triangle frame. Ensure all colored rungs are inserted into the correct holes and secured with the provided fasteners.
3. Assemble the Climbing Arch, ensuring all rungs are securely in place.
4. The double-sided ramp features climbing holds on one side and a smooth slide on the other.
5. Attach the ramp to either the Climbing Triangle or the Climbing Arch using the designated hooks and grooves. Ensure it is firmly seated before use.
6. The Climbing Triangle features adjustable joints that allow you to modify its width. Loosen the star-shaped knobs, adjust the angle, and re-tighten to secure.

Installation Tips

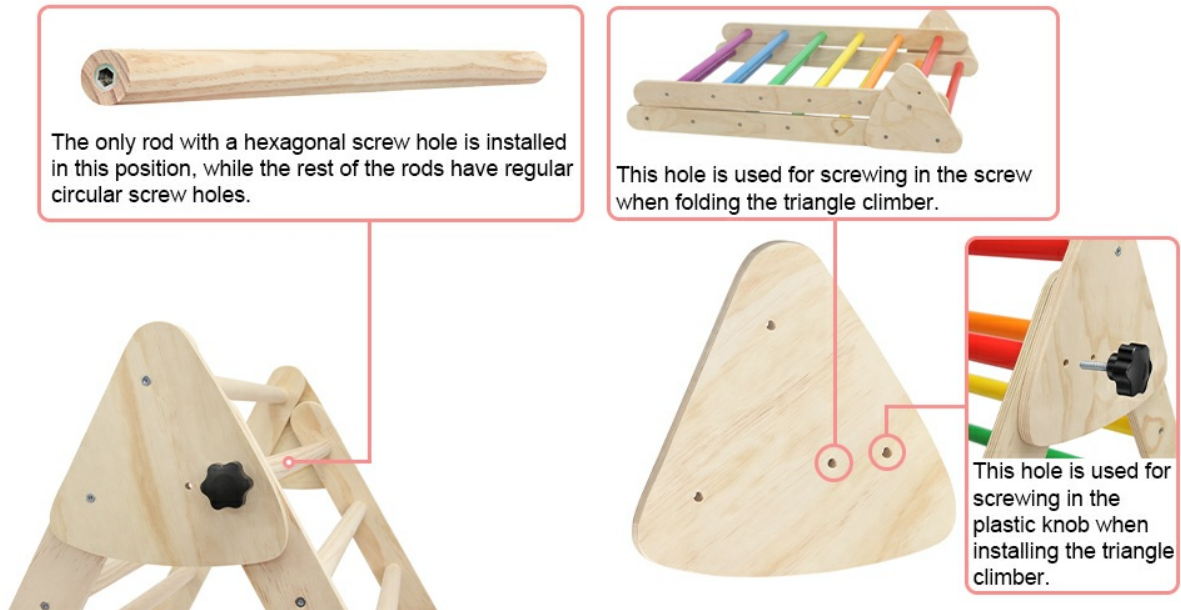


Figure 2: Key installation tips for securing components and adjusting the triangle.

Video 1: Assembly demonstration for the Pikler Triangle Set, showing how pieces fit together.

OPERATING INSTRUCTIONS (5-IN-1 CONFIGURATIONS)

The EDOSTORY Pikler Triangle Set offers five primary play configurations:

- **Climbing Triangle:** The main A-frame structure allows children to climb up and down the colorful rungs, developing strength and coordination.
- **Climbing Arch:** The curved arch structure can be used independently for climbing over or crawling under.
- **Rocking Arch:** When flipped over, the arch transforms into a rocking structure, providing a gentle rocking motion for relaxation or imaginative play.
- **Slide:** Attach the smooth side of the ramp to the triangle or arch for a fun sliding experience.
- **Climbing Ramp:** Attach the side of the ramp with climbing holds to the triangle or arch, creating an inclined surface for challenging climbs.



Figure 3: Visual guide to the 5-in-1 play configurations.

Video 2: Overview of the EDOSTORY 5-in-1 Pikler Triangle Set, demonstrating various play configurations and features.

MAINTENANCE

- **Cleaning:** Wipe down the wooden surfaces with a damp cloth and mild soap as needed. Avoid harsh chemicals or abrasive cleaners.
- **Inspection:** Periodically check all screws, bolts, and connections to ensure they are tight. Re-tighten if necessary.
- **Storage:** The Climbing Triangle is foldable for easy storage. Loosen the adjustment knobs, fold the sides inward, and store in a dry place away from direct sunlight or extreme temperatures.



Figure 4: The foldable design allows for convenient storage when not in use.

TROUBLESHOOTING

- **Wobbly Structure:** If the set feels wobbly, check all assembly points and ensure all screws and knobs are fully tightened.
- **Difficulty Folding:** Ensure the adjustment knobs on the Climbing Triangle are sufficiently loosened before attempting to fold.
- **Ramp Not Securing:** Verify that the ramp's hooks are correctly aligned and seated into the rungs of the triangle or arch.

SPECIFICATIONS

- **Material:** Wood
- **Color:** Rainbow
- **Maximum Weight Recommendation:** 130 Pounds
- **Age Range (Description):** 3 years and up
- **Package Dimensions:** 40.5 x 19.75 x 4.75 inches

- **Item Weight:** 32.8 pounds
- **Assembly Required:** Yes

WARRANTY AND SUPPORT

For any questions, concerns, or warranty information regarding your EDOSTORY 5-in-1 Pikler Triangle Set, please contact the manufacturer directly through your purchase platform or the contact information provided with the product packaging.