

[Manuals.plus](#) /

› [Goldsea](#) /

› Goldsea Mini Electric Chainsaw EC01 User Manual

Goldsea EC01

Goldsea Mini Electric Chainsaw EC01 User Manual

Comprehensive instructions for safe and effective operation, maintenance, and troubleshooting.

1. INTRODUCTION

Thank you for choosing the Goldsea Mini Electric Chainsaw, model EC01. This compact and powerful cordless chainsaw is designed for efficient wood cutting, branch pruning, and various DIY tasks. Its lightweight design and ergonomic handle ensure comfortable use, even during extended periods. This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your new tool. Please read it thoroughly before first use and retain it for future reference.



Figure 1: Goldsea Mini Electric Chainsaw EC01 with included batteries.

2. IMPORTANT SAFETY INSTRUCTIONS

Always observe the following safety precautions to reduce the risk of serious personal injury. Failure to follow these instructions may result in electric shock, fire, and/or serious injury.

- **Personal Protective Equipment (PPE):** Always wear safety goggles, gloves, and appropriate protective clothing when operating the chainsaw. The product includes safety goggles and gloves.
- **Work Area Safety:** Keep the work area clean and well-lit. Cluttered or dark areas invite accidents. Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.
- **Electrical Safety:** Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the tool. The chainsaw is equipped with a safety lock; press the safety lock and trigger simultaneously to start.
- **Tool Use and Care:** Do not force the power tool. Use the correct power tool for your application. Maintain the tool and its accessories. Keep cutting tools sharp and clean.
- **Battery Use and Care:** Recharge only with the charger specified by the manufacturer. Use only with specifically designated battery packs. Unplug the battery pack from the tool before making any adjustments, changing accessories, or storing power tools.
- **Lubrication:** Ensure the lubrication oil tank is filled before use. Regularly press the oil pump during operation to lubricate the chain and reduce friction.
- **Chain Tension:** Regularly check and adjust chain tension. The tool-free knob allows for easy tightening if the chain becomes loose during use.

3. PACKAGE CONTENTS

Upon opening the package, verify that all items listed below are present and in good condition. If any items are missing or damaged, please contact customer support.

- 1 x Goldsea Mini Electric Chainsaw
- 2 x 21V Lithium-Ion Batteries
- 1 x Battery Charger
- 2 x Saw Chains
- 1 x Chain Sharpener
- 1 x Pair of Gloves
- 1 x Pair of Goggles
- 1 x Cleaning Brush
- 1 x User Manual (this document)

How to install the chain ?



Figure 2: Contents included in the Goldsea Mini Electric Chainsaw carrying case.

4. SETUP AND ASSEMBLY

4.1 Battery Charging

Before first use, fully charge both 21V lithium-ion batteries. Connect the charger to a power outlet and insert the battery. The charging indicator light on the charger will show the charging status. A full charge typically takes 2-3 hours per battery.



Figure 3: The 21V Max Li-ion battery with power indicator.

4.2 Chain and Guide Bar Installation

Follow these steps to install the saw chain and guide bar. Ensure the battery is removed before performing any assembly.

1. **Remove the sprocket cover:** Locate the integrated locking knob on the side of the chainsaw and turn it counter-clockwise to loosen and remove the sprocket cover.
2. **Assemble the saw chain:** Carefully place the saw chain around the guide bar, ensuring the cutting teeth are facing

the correct direction (refer to the arrow on the guide bar).

3. **Align guide bar and chain:** Place the guide bar with the chain onto the chainsaw body, aligning the chain with the sprocket.
4. **Align the sprocket cover and tighten:** Re-attach the sprocket cover, ensuring it aligns correctly. Turn the integrated locking knob clockwise to secure the guide plate and chain. Tighten until the chain is snug but can still be moved by hand.

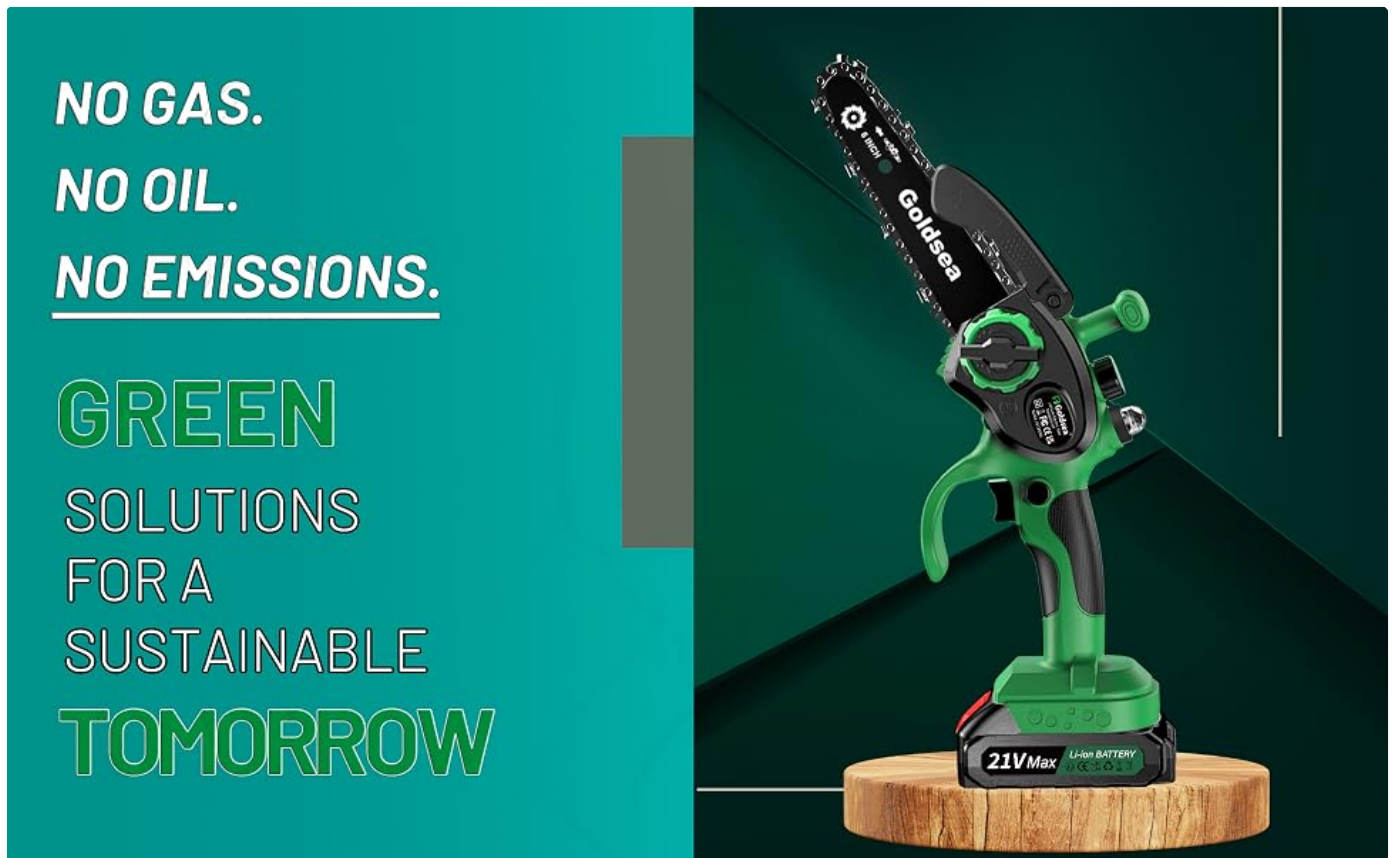


Figure 4: Step-by-step guide for chain installation.

FAST ADJUST CHAIN VS REPLACE CHAIN WITH SCREWDRIVER

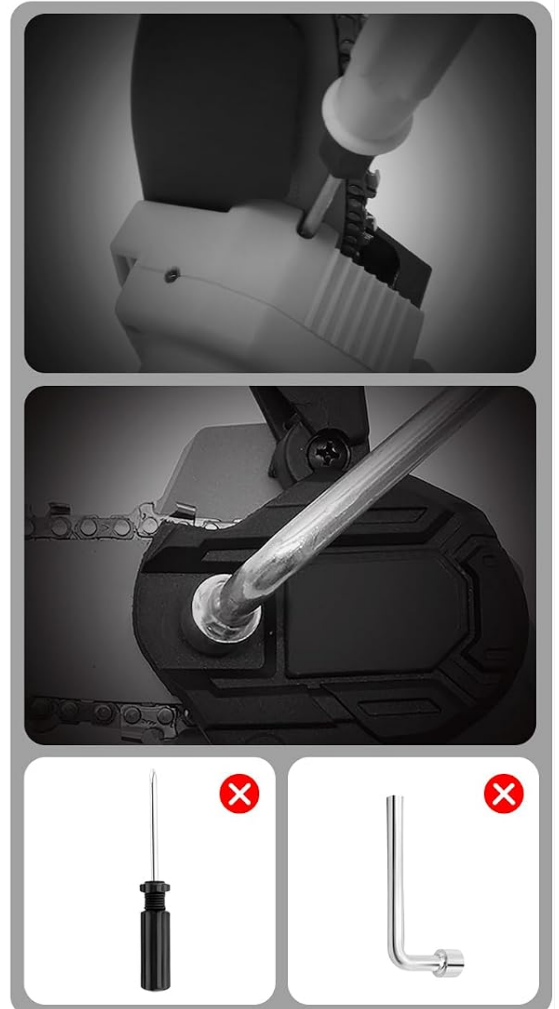


Figure 5: The tool-free adjustment knob for chain tensioning.

4.3 Lubrication System

The chainsaw is equipped with a lubrication oil tank to ensure smooth operation and extend chain life. Fill the tank with appropriate chainsaw bar and chain oil before each use.

- Locate the oil tank cap on the top of the chainsaw body.
- Unscrew the cap and carefully pour chainsaw bar and chain oil into the tank. Do not overfill.
- Replace the cap securely.
- During operation, periodically press the oil pump bulb (located near the oil tank) to manually lubricate the chain.



Figure 6: Chainsaw oil system with visible oil tank.

5. OPERATING INSTRUCTIONS

Always wear appropriate safety gear (goggles, gloves) before operating the chainsaw.

5.1 Starting the Chainsaw

1. Ensure a fully charged battery is securely inserted into the chainsaw.
2. Hold the chainsaw firmly with both hands (or one hand if performing light tasks, ensuring stable grip).
3. Press the safety lock button (usually located on the side of the handle).
4. While holding the safety lock, press the trigger to start the chainsaw. Release the safety lock once the chainsaw is running.



Figure 7: One-hand operation for light pruning tasks.

5.2 Cutting Techniques

- **General Cutting:** Position the chainsaw firmly against the material to be cut. Apply steady, even pressure. Allow the chain to do the work.
- **Branch Pruning:** For smaller branches (up to 6-8 inches in diameter), the chainsaw can cut through quickly. Be aware of falling branches.
- **Wood Cutting:** The chainsaw is effective for cutting firewood or small logs. For larger diameters, make multiple passes if necessary.
- **Avoid Kickback:** Always be aware of the guide bar tip. Avoid contact with any object, as this can cause kickback, leading to loss of control.



Figure 8: Versatile applications of the Goldsea Mini Electric Chainsaw.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your chainsaw.

- **Cleaning:** After each use, remove the battery and use the included cleaning brush to remove wood chips, sawdust, and debris from the guide bar, chain, and motor housing.
- **Chain Sharpening:** A sharp chain is crucial for efficient cutting. Use the included chain sharpener to maintain the sharpness of the saw chain. Refer to the sharpener's instructions for proper technique.
- **Chain Tension Check:** Periodically check the chain tension. A properly tensioned chain should be snug against the guide bar but still allow you to pull it around the guide bar by hand. Adjust using the tool-free knob if necessary.
- **Lubrication System:** Ensure the oil tank is clean and free of blockages. Use only recommended bar and chain oil.
- **Storage:** When not in use, store the chainsaw in its carrying case in a dry, secure location, out of reach of children. Remove the battery before storage.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your Goldsea Mini Electric Chainsaw.

Problem	Possible Cause	Solution
Chainsaw does not start.	Battery not charged or not inserted correctly. Safety lock not engaged with trigger.	Ensure battery is fully charged and securely inserted. Press safety lock and trigger simultaneously.
Chain is loose or falls off.	Chain tension is too low.	Remove battery, then use the tool-free knob to tighten the chain tension. Refer to Section 4.2.
Poor cutting performance.	Dull chain. Insufficient lubrication.	Sharpen the chain using the included sharpener. Ensure the oil tank is filled and press the oil pump regularly during operation.
Battery life is shorter than expected.	Battery not fully charged. Old battery. Heavy usage.	Ensure battery is fully charged before use. Consider replacing old batteries. Avoid continuous heavy cutting.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	EC01
Brand	Goldsea
Guide Bar Length	6 inches
Item Weight	Approximately 2.6 pounds (chainsaw only), 6 pounds (with packaging)
Product Dimensions	17 x 7.5 x 5.2 inches
Power Source	Battery Powered
Battery Type	21V Lithium Ion (2 included)
Horsepower	800 Watts
Material	Plastic, Hardened Alloy Chain

9. WARRANTY AND SUPPORT

Your satisfaction is our top priority. For any questions, concerns, or assistance with your Goldsea Mini Electric Chainsaw, please contact our customer service team. We are committed to providing prompt support and solutions within 24 hours. Please refer to your purchase platform (e.g., Amazon) for specific warranty details and contact methods.



