

JOYROOM JR-DB2

Joyroom Jdots Series JR-DB2 TWS Earbuds User Manual

Model: JR-DB2

INTRODUCTION

Thank you for choosing the Joyroom Jdots Series JR-DB2 TWS Earbuds. This manual provides detailed instructions on how to set up, operate, maintain, and troubleshoot your new earbuds. Please read this manual carefully before use to ensure optimal performance and longevity of your device.

SAFETY INFORMATION

- Do not disassemble or modify the earbuds or charging case.
- Keep the device away from extreme temperatures, humidity, and liquids.
- Avoid prolonged exposure to high volume levels to prevent hearing damage.
- Clean the earbuds and charging case with a soft, dry cloth only.
- Dispose of the device responsibly according to local regulations.

PACKAGE CONTENTS

Please check the package for the following items:

- Joyroom Jdots Series JR-DB2 TWS Earbuds (Left and Right)
- Charging Case
- USB Charging Cable
- User Manual

PRODUCT OVERVIEW

Familiarize yourself with the components of your JR-DB2 earbuds and charging case.



Image 1: Front view of the Joyroom JR-DB2 TWS Earbuds placed inside their charging case. The image displays the compact design of the case and the ergonomic shape of the earbuds, highlighting the overall product aesthetics.

- **Earbuds:** Left (L) and Right (R) earbuds with touch control areas and charging contacts.
- **Charging Case:** Houses the earbuds for charging and storage, features a charging port and LED indicator.

SETUP

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case.

1. Place the earbuds into the charging case. Ensure the charging contacts align.
2. Connect the USB charging cable to the charging port on the case and to a power source (e.g., USB wall adapter, computer USB port).
3. The LED indicator on the charging case will show the charging status. A full charge is indicated when the LED stops blinking or turns solid.
4. Charging time for the case is approximately 1.5-2 hours. Earbuds charge automatically when placed in the case.



Image 2: Close-up view of the Joyroom JR-DB2 charging case with a USB-C cable connected to its charging port. The image illustrates the correct way to connect the charging cable to power the case.

2. Pairing with Your Device

The earbuds will automatically enter pairing mode when taken out of the charging case.

1. Open the charging case and remove both earbuds. They will automatically power on and attempt to pair with each other.
2. On your smartphone or Bluetooth-enabled device, go to the Bluetooth settings.
3. Search for available devices and select "**JR-DB2**" from the list.
4. Once connected, you will hear a confirmation sound, and the earbuds' indicator lights will turn off or blink slowly.
5. If pairing fails, place the earbuds back into the case, close the lid, wait a few seconds, and then repeat the steps.

OPERATING INSTRUCTIONS

Wearing the Earbuds

For optimal sound quality and comfort, ensure the earbuds are worn correctly.

- Identify the Left (L) and Right (R) earbuds.
- Gently insert each earbud into the corresponding ear canal.
- Rotate the earbud slightly until it fits snugly and comfortably.



Image 3: A person demonstrating how to properly wear the Joyroom JR-DB2 TWS Earbuds. The image shows an earbud securely placed in the ear, highlighting its ergonomic fit.

Touch Controls

The JR-DB2 earbuds feature intuitive touch controls on each earbud.

Action	Function
Single Tap (L/R)	Play/Pause music, Answer/End call
Double Tap (Right)	Next track
Double Tap (Left)	Previous track
Triple Tap (Right)	Volume Up
Triple Tap (Left)	Volume Down

Action	Function
Long Press (2s, L/R)	Reject call, Activate Voice Assistant

MAINTENANCE

Cleaning

- Regularly clean the earbuds and charging case to prevent dirt buildup.
- Use a soft, dry, lint-free cloth to wipe the surfaces.
- For stubborn dirt, slightly dampen the cloth with water, then wipe dry immediately.
- Do not use harsh chemicals, aerosols, or abrasive cleaners.
- Ensure charging contacts on both earbuds and case are clean and dry.

Storage

- When not in use, store the earbuds in their charging case to protect them and keep them charged.
- Store the device in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues, try the following solutions:

Problem	Solution
Earbuds not pairing with device	<ul style="list-style-type: none">◦ Ensure earbuds are charged.◦ Place earbuds back in case, close lid, then reopen and try pairing again.◦ Forget "JR-DB2" from your device's Bluetooth list and re-pair.◦ Ensure Bluetooth is enabled on your device.
Only one earbud working	<ul style="list-style-type: none">◦ Ensure both earbuds are charged.◦ Place both earbuds back in the case, close the lid, then reopen. They should re-sync.◦ Clean the charging contacts on both earbuds and inside the case.
No sound	<ul style="list-style-type: none">◦ Check device volume and earbud volume.◦ Ensure earbuds are properly connected to your device.◦ Try playing audio from a different application or source.
Charging case not charging	<ul style="list-style-type: none">◦ Verify the USB cable is securely connected to both the case and the power source.◦ Try a different USB cable or power adapter.◦ Ensure the power source is active.

SPECIFICATIONS

Feature	Detail
Model Number	JR-DB2
Brand	JOYROOM
Connectivity	Wireless (Bluetooth)
Color	Black (Note: Product may be available in other colors)
Material	Acrylic
Compatible Devices	Bluetooth-enabled devices (e.g., smartphones, tablets, laptops)
UPC/EAN	6941237112057

WARRANTY AND SUPPORT

Joyroom products are designed with quality and reliability in mind. For warranty information, please refer to the warranty card included in your product packaging or visit the official Joyroom website. For technical support or further assistance, please contact Joyroom customer service through their official channels. You can often find support contact details on the manufacturer's website: www.joyroom.com