

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Dyzeryk](#) /

› [Dyzeryk MP3 Player User Manual](#)

Dyzeryk JS-01

Dyzeryk MP3 Player User Manual

Model: JS-01

Brand: Dyzeryk

PRODUCT OVERVIEW

The Dyzeryk MP3 Player is a portable audio device designed for listening to music, viewing photos and videos, recording voice, and reading e-books. It features a compact design, a built-in speaker, and supports expandable storage.



Image: The Dyzyryk MP3 Player in dark blue, shown with its included 16GB Micro SD card and a pair of white wired earphones. The player's screen displays colorful music-related icons.

Key Features:

- **16GB Large Storage:** Comes with a 16GB micro SD card, expandable up to 128GB.
- **HIFI Lossless Sound Quality:** Utilizes a professional intelligent digital noise reduction chip for high-quality audio.
- **Long Battery Life:** Provides up to 10 hours of music playback on a single charge.
- **Portable and Lightweight:** Designed for easy portability, fitting into pockets and backpacks.
- **Multi-functional:** Supports music, video, photo playback, FM radio, voice recording, and e-book reading.

Multifunction



Image: A close-up of the MP3 player's screen displaying icons for its various functions, including Music, Videos, FM Radio, Picture, Record, EBook, Files, Games, and Settings.

SETUP GUIDE

1. Charging the Device

Before first use, fully charge the MP3 player. Connect the included USB cable to the player's charging port and the other end to a computer's USB port or a compatible USB wall adapter. The device typically charges within 2-3 hours.

2. Inserting the Micro SD Card

The player comes with a 16GB Micro SD card. Locate the Micro SD card slot on the side of the device. Gently insert the Micro SD card into the slot until it clicks into place. Ensure the card is inserted in the correct orientation to avoid damage.

Included **16GB** TF card,
stores over 3000 songs and
E-books.

128GB

support up to 128GB TF card



Image: The MP3 player displaying text indicating that a 16GB TF card is included, capable of storing over 3000 songs and e-books, and that the device supports up to a 128GB TF card.

3. Transferring Files

Connect the MP3 player to your computer using the USB cable. The device will appear as a removable disk. You can then drag and drop music, video, photo, and e-book files into the appropriate folders on the player's internal storage or the Micro SD card.

- **Supported Music Formats:** MP3, WMA, OGG, APE, FLAC, WAV, AAC-LC, ACELP
- **Supported Video Formats:** AMV, AVI
- **Supported Picture Formats:** JPEG, BMP, GIF

- **Supported E-book Format:** TXT

OPERATING INSTRUCTIONS

Basic Navigation

The MP3 player features a central circular control pad with several buttons:

- **M (Menu/Back):** Press to access the main menu or go back to the previous screen.
- **Play/Pause (Center Button):** Press to play or pause media. Also used to confirm selections.
- **Left/Right Arrows:** Navigate through menu options or skip tracks during playback.
- **Up/Down Arrows (VOL):** Adjust volume during playback.

Music Playback

1. From the main menu, select "Music".
2. Browse your music library by artist, album, genre, or all songs.
3. Select a song and press the Play/Pause button to begin playback.
4. Use the Left/Right arrows to skip tracks. Use the Up/Down (VOL) arrows to adjust volume.

Video Playback & Photo Viewing

The device supports AMV and AVI video formats, and JPEG, BMP, GIF image formats.

1. Select "Videos" or "Picture" from the main menu.
2. Navigate to the desired file and press the Play/Pause button to open it.



Watch pictures and videos
anytime, anywhere

Image: The MP3 player showing a video playing on its screen, with several smaller image thumbnails floating in the background, illustrating its capability to watch pictures and videos.

FM Radio

The built-in FM radio supports frequencies from 87.5MHz to 108MHz and can save up to 30 channels.

1. Select "FM Radio" from the main menu.
2. Use the navigation buttons to scan for stations or select a saved channel.



FM Radio

When resting, turning on the radio can reignite your emotions; with the radio function, you can increase your fun during long trips or leisure activities.



Image: A person wearing headphones, with the Dyzezyk MP3 player visible in the foreground, illustrating the use of the FM Radio function.

Voice Recorder

Record and save audio in WAV or MP3 format.

1. Select "Record" from the main menu.
2. Follow on-screen prompts to start, pause, and save recordings.

E-Book Reader

The player supports TXT format e-books.

1. Select "E-Book" from the main menu.
2. Browse and select your TXT files to read.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid liquid cleaners or abrasive materials.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Storage:** Store the MP3 player in a cool, dry place away from direct sunlight, extreme temperatures, and humidity.
- **Handling:** Handle the device with care to prevent drops or impacts, which can damage internal components.

TROUBLESHOOTING

Device does not power on:

Ensure the battery is charged. Connect the player to a power source and allow it to charge for at least 30 minutes before attempting to power on again.

Cannot play music/video files:

Verify that the files are in a supported format (MP3, WMA, OGG, APE, FLAC, WAV, AAC-LC, ACELP for music; AMV, AVI for video). Check if the files are corrupted or incomplete. Ensure the Micro SD card is properly inserted.

Poor sound quality:

Check the volume level. Ensure headphones are properly connected. If using the built-in speaker, note that external speakers or headphones generally provide superior sound quality.

Device is not recognized by computer:

Try a different USB port or USB cable. Ensure the device is powered on when connected. Restart your computer and the MP3 player.

SPECIFICATIONS

Model Name	JS-01
Screen Size	1.8 Inches
Memory Storage Capacity	16 GB (supports up to 128 GB Micro SD)
Connectivity Technology	USB
Supported Audio Formats	MP3, WMA, OGG, APE, FLAC, WAV, AAC-LC, ACELP
Supported Video Formats	AMV, AVI
Supported Picture Formats	JPEG, BMP, GIF
Supported E-book Format	TXT
FM Radio Range	87.5MHz~108MHz
Battery	Built-in Li-ion battery
Battery Life (Music Playback)	Up to 10 hours
Charging Time	2-3 hours
Item Weight	2.08 ounces
Dimensions	3.5 x 1.5 x 0.3 inches (MP3 Size)
Color	Dark blue

WARRANTY AND SUPPORT




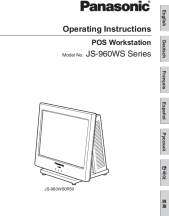
This Dyzeryk MP3 Player comes with a**12-month warranty** from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use.


For technical support, warranty claims, or any questions regarding your device, please contact our professional after-sales service team. Your satisfaction is our priority, and we aim to provide quick and satisfactory responses.

Please refer to the contact information provided with your product packaging or visit the official Dyzeryk website for support details.

© 2025 Dyzeryk. All rights reserved.

Related Documents - JS-01

	<p>Dyzeryk MP3 Player User Instructions</p> <p>User instructions for the Dyzeryk MP3 Player, covering button navigation, supported formats for music, videos, radio, pictures, recordings, ebooks, settings, and troubleshooting.</p>
	<p>Hyundai GD-01 MP3/USB/AUX/Bluetooth/iPod CD Player with AM/FM Radio Instruction Manual</p> <p>This instruction manual provides detailed information on operating the Hyundai GD-01 car audio system, including its CD player, MP3/USB/AUX/Bluetooth/iPod capabilities, and AM/FM radio functions. Learn about general controls, steering wheel controls, tuner operations, media playback, and settings.</p>
	<p>GPX MWB308 Bluetooth MP3 Player User's Guide</p> <p>Comprehensive user's guide for the GPX MWB308 Bluetooth MP3 Player, detailing features, operation, controls, charging, music management, Bluetooth connectivity, radio functions, recording capabilities, e-book reader, and settings. Includes FCC warnings and additional safety information.</p>
	<p>Panasonic POS Workstation JS-960WS Series Operating Instructions</p> <p>Operating instructions for the Panasonic POS Workstation, JS-960WS Series. This manual provides detailed information on installation, usage, maintenance, and troubleshooting.</p>

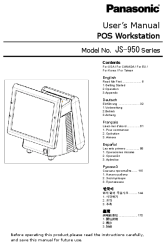

[Panasonic JS-950 Series POS Workstation User Manual](#)

User's manual for the Panasonic JS-950 series POS Workstation, providing setup, operation, and safety guidelines. Includes product details and troubleshooting information.



[GPX BD702B Portable Movie + Music System User Guide](#)

User guide for the GPX BD702B Portable Movie + Music System, covering features, setup, operation of CD/DVD player, radio, USB/SD card, AV inputs/outputs, safety precautions, and company information.