

[Manuals.plus](#) /

› [Cozy N Safe](#) /

› Cozy N Safe 360° Swivel High Chair Instruction Manual - Model B0CQJDYDWB

Cozy N Safe B0CQJDYDWB

Cozy N Safe 360° Swivel High Chair Instruction Manual

Model: B0CQJDYDWB

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and use of the Cozy N Safe 360° Swivel High Chair. Keep this manual for future reference.


- **Age and Weight Limits:** This high chair is suitable for children aged 6 to 36 months, with a maximum weight recommendation of 15 kg (33 lbs).
- **Harness System:** Always secure your child with the 5-point safety harness. Ensure it is adjusted snugly around your child.
- **Stability:** The high chair features a stable pyramid structure and robust beechwood legs. Always ensure the high chair is placed on a flat, stable surface. Never leave your child unattended.
- **Tray:** Always ensure the tray is securely locked in place before use.
- **Moving the High Chair:** Do not move the high chair with your child in it.
- **Hazards:** Keep children away from hot surfaces, liquids, and electrical cords. Do not use the high chair if any parts are damaged or missing.

2. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- High Chair Seat Unit with 5-point harness and PU cushion
- Wooden Leg Frame (Beechwood)
- Footrest (integrated into leg frame)
- Double Removable Tray
- Anti-slip pads for legs
- Assembly Hardware (screws, Allen key)

COZY  SAFE®
Without Compromise...

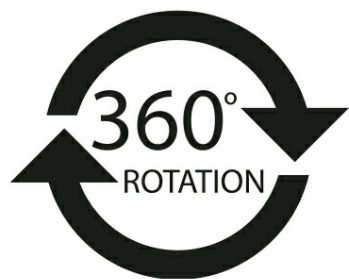

7 positions



Image: All components of the high chair laid out for assembly.

3. ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your high chair:

1. **Attach Legs:** Connect the beechwood leg sections to form the stable pyramid base. Ensure all screws are tightened securely using the provided Allen key.
2. **Install Seat Unit:** Place the high chair seat unit onto the assembled leg frame. Align the connection points and secure them according to the instructions.
3. **Attach Anti-slip Pads:** Press the anti-slip pads firmly onto the bottom of each leg to ensure stability and protect your floors.
4. **Insert Cushion:** Place the polyurethane cushion into the seat unit.
5. **Attach Tray:** Slide the double tray onto the designated slots on the seat unit until it clicks securely into place.





Image: Assembled high chair in various configurations.

4. OPERATING INSTRUCTIONS

4.1. 360° Swivel Function

The high chair seat can rotate 360 degrees with 7 different locking positions. To swivel the seat, locate the swivel release button (often at the base of the seat unit). Press the button and rotate the seat to your desired position until it locks into place. This allows for easy access to your child from any angle.



Image: High chair demonstrating the 360-degree swivel feature.



Image: Detail of the 'PRESS HERE' button for activating the 360-degree rotation.

4.2. 3-in-1 Convertible Modes

This high chair offers versatile functionality, converting into three main modes:

- **High Chair Mode:** For feeding at standard table height.
- **Play Chair Mode:** By adjusting the height, the high chair can be converted into a lower chair suitable for play.
- **Booster Seat Mode:** The seat unit can be detached from the wooden frame and used as a booster seat, typically secured to an adult dining chair (straps not included, check compatibility).



Image: High chair in high chair mode and converted to a lower play chair.

4.3. 5-Point Safety Harness

To secure your child:

1. Place your child in the seat.
2. Bring the shoulder straps over your child's shoulders and the waist straps around their waist.

3. Insert the two buckle prongs into the central buckle until they click.
4. Adjust the straps to ensure a snug fit, leaving no more than one finger's width between the strap and your child.

COZY  SAFE®
Without Compromise...



Características de seguridad: Equipado con un arnés ajustable de 5 puntos y hombreras para mayor seguridad



Image: Detail of the 5-point harness system.

4.4. Removable Double Tray

The high chair features a double tray for convenience. To attach, slide the tray onto the armrests until it locks. To remove, locate the release mechanism (usually a button or lever underneath the tray) and pull the tray away from the seat. The top layer of the tray is removable for easy cleaning.



Image: Instructions for removing the high chair tray.

4.5. Adjustable Footrest

The footrest can be adjusted to suit your child's height, providing comfortable support. Adjust the footrest by repositioning the wooden steps on the leg frame.

Je nach Körpergröße passendes Pedal einstellen



Image: Child demonstrating the adjustable footrest.

5. CLEANING AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and hygiene of your high chair.

- **Cushion:** The removable polyurethane (PU) cushion cover is waterproof and easy to clean. Wipe with a damp cloth and mild soap. Allow to air dry completely before reattaching.
- **Tray:** The top layer of the double tray is removable and dishwasher-safe for thorough cleaning. The main tray can be wiped clean with a damp cloth.
- **Frame:** Wipe the plastic and wooden parts of the frame with a damp cloth. Avoid abrasive cleaners or harsh chemicals.
- **Harness:** The harness straps can be spot cleaned with mild soap and water.
- **Inspections:** Periodically check all screws, bolts, and connections to ensure they are tight and secure. Inspect for

any signs of wear or damage.



Image: Cleaning the high chair cushion and tray.

6. TROUBLESHOOTING

If you encounter any issues with your high chair, refer to the following common solutions:

- **High Chair Feels Unstable:** Ensure all leg connections are securely tightened. Verify the high chair is on a flat, even surface.
- **Tray Not Attaching/Detaching Smoothly:** Check for any food debris or obstructions in the tray runners. Ensure the release mechanism is fully engaged when detaching.
- **Harness Difficult to Adjust:** Ensure the straps are not twisted. Refer to section 4.3 for proper harness adjustment.
- **Seat Not Swiveling:** Ensure the swivel release button is fully pressed. Check for any obstructions preventing rotation.

If problems persist, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Cozy N Safe
Model	B0CQJDYDWB
Product Dimensions	61 x 67 x 89 cm (24 x 26.4 x 35 inches)
Product Weight	9.3 Kilograms (20.5 lbs)
Maximum Weight Recommendation	15 Kilograms (33 lbs)

Feature	Detail
Age Range	6 to 36 months
Material	Plastic and Beechwood
Color	Grey (PU Green in original, but product images show grey)
Orientation	360° Swivel
Harness Type	5-point



Image: Product dimensions diagram.

8. WARRANTY AND SUPPORT

For warranty information, please refer to the product packaging or the manufacturer's official website. If you require technical support, have questions about assembly, or need replacement parts, please contact Cozy N Safe customer service directly. Contact details can typically be found on the product packaging or the brand's website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CQJDYDWB>

More documents and user manuals: <https://manuals.plus/>