

- Manuals.plus /
- > ODK /
 - > ODK SNG-0156 Dresser with 8 Fabric Drawers and Integrated Charging Station User Manual

ODK SNG-0156

ODK SNG-0156 Dresser User Manual

Model: SNG-0156 | Brand: ODK

1. INTRODUCTION

Thank you for choosing the ODK SNG-0156 Dresser. This manual provides essential information for the safe assembly, operation, and maintenance of your new dresser. Please read it thoroughly before beginning assembly and keep it for future reference.

The ODK SNG-0156 dresser is designed to offer convenient storage with its eight fabric drawers and features an integrated charging station with two USB ports and two AC outlets, allowing you to organize your space and power your electronic devices simultaneously.



Figure 1: ODK SNG-0156 Dresser with 8 Fabric Drawers and Charging Station. This image shows the complete dresser unit, highlighting the eight fabric drawers and the integrated charging station on the top left shelf.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: Failure to follow these safety instructions could result in electric shock, fire, or serious injury.

- Always ensure the dresser is placed on a stable, level surface to prevent tipping.
- Do not overload drawers. Distribute weight evenly to maintain stability.
- Keep children away during assembly. Small parts can be a choking hazard.
- Only use the charging station for its intended purpose. Do not exceed the rated electrical load.
- Do not expose the charging station to water or excessive moisture.
- If the power cord or plug is damaged, do not use the charging station. Contact customer service for assistance.
- Ensure all connections are secure before plugging the unit into a power outlet.

- This product is intended for indoor use only.

3. PACKAGE CONTENTS

Before assembly, please verify that all parts listed below are present and undamaged. If any parts are missing or damaged, do not proceed with assembly. Contact ODK customer service for replacement parts.

3.1. Components List

- Metal Frame Components (various sizes)
- Wooden Top Board
- Wooden Back Support (X-crossbar)
- Fabric Drawers (8 units)
- Integrated Charging Station (with 2 USB ports and 2 AC outlets)
- Adjustable Feet
- Assembly Hardware (screws, bolts, Allen wrench, etc.)
- Instruction Manual

3.2. Tools Required (Not Included)

- Phillips Head Screwdriver
- Hammer (optional, for wall anchoring if desired)

4. ASSEMBLY INSTRUCTIONS

Assembly is straightforward. Follow these steps carefully. It is recommended to assemble the dresser with two people.

1. **Unpack and Identify Parts:** Lay out all components on a clean, soft surface to prevent scratches. Refer to the parts list to identify each piece.
2. **Assemble the Metal Frame:** Connect the vertical and horizontal metal frame components using the provided screws and Allen wrench. Ensure all connections are finger-tight initially.
3. **Attach the Back Support:** Secure the X-crossbar to the rear of the metal frame for added stability.
4. **Install the Wooden Top Board:** Place the wooden top board onto the assembled frame and secure it with the designated screws.
5. **Integrate the Charging Station:** Carefully insert the charging station into its designated slot on the top shelf. Ensure it clicks into place or is secured as per specific instructions in the included manual.
6. **Insert Fabric Drawers:** Unfold each fabric drawer and insert the bottom panel to create a rigid structure. Slide the assembled drawers into their respective slots in the metal frame.
7. **Attach Adjustable Feet:** Screw the adjustable feet into the bottom of the dresser frame. Adjust them as needed to ensure the dresser is level and stable on your floor.
8. **Final Tightening:** Once all components are in place, go back and securely tighten all screws and bolts. Do not overtighten.

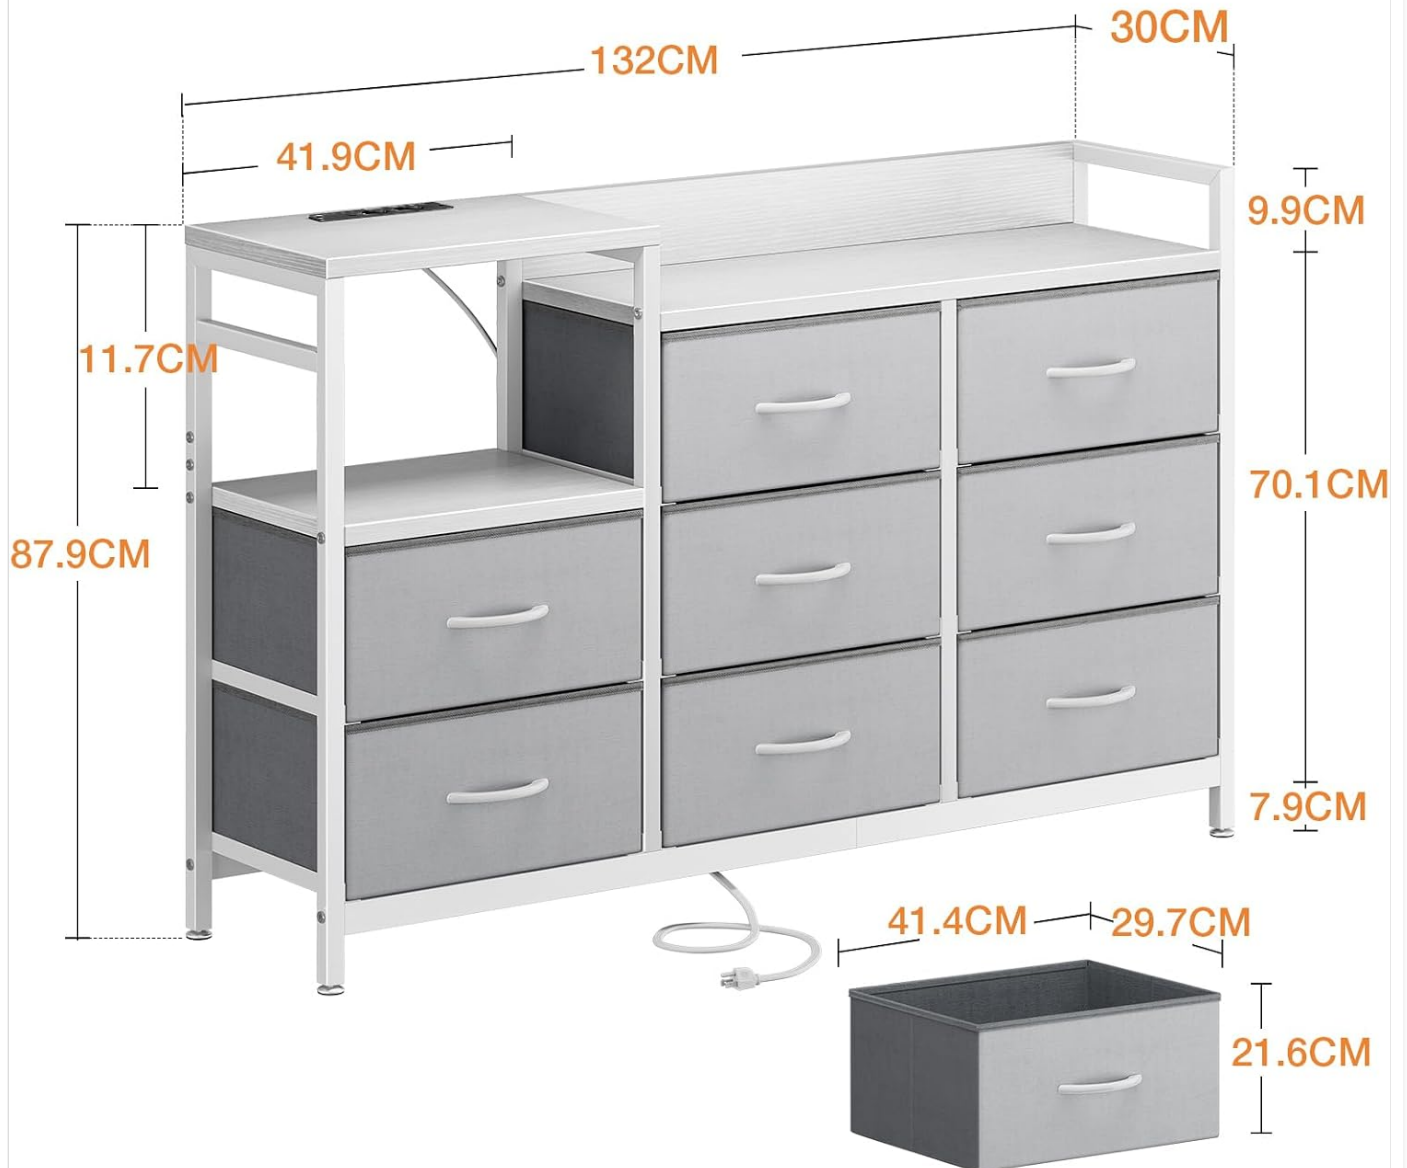


Figure 2: Dresser Dimensions Diagram. This image provides detailed measurements of the dresser, including overall width (132cm), depth (30cm), height (88cm), and individual drawer dimensions (41.4cm x 29.7cm x 21.6cm).

5. OPERATING INSTRUCTIONS

5.1. Using the Fabric Drawers

- The eight spacious fabric drawers are designed for organizing various items such as clothing, accessories, books, or toys.
- To open a drawer, gently pull the handle. To close, push it back into the slot.
- Avoid placing excessively heavy or sharp objects in the drawers to prevent damage to the fabric.
- Distribute items evenly within each drawer to maintain its shape and functionality.



8 GROSSE SCHUBLADEN



Jede kann enthalten:

60-80 Socken

15-18 T-shirts

8-11 Jeans

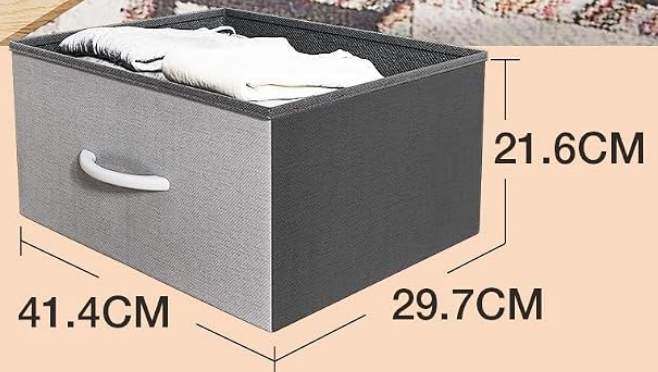


Figure 3: Fabric Drawers Capacity. This image illustrates the spaciousness of the fabric drawers, showing them filled with various clothing items like socks, t-shirts, and jeans, along with estimated capacities.

5.2. Using the Integrated Charging Station

- Plug the dresser's main power cord into a standard wall outlet.
- The charging station provides two AC outlets and two USB-A ports for charging electronic devices.
- Connect your devices to the appropriate USB port or AC outlet.
- Ensure devices are compatible with the charging station's output specifications (refer to Section 8: Specifications).
- Do not attempt to charge devices that require more power than the station can provide.



2 Steckdosen und 2 USB-A-Anschlüsse zum Aufladen



Figure 4: Charging Station in Use. This image shows the integrated charging station with a smartphone and a smartwatch connected and charging via the USB ports and AC outlets.

6. MAINTENANCE

6.1. Cleaning

- **Frame and Wooden Top:** Wipe with a dry, soft cloth. For stubborn marks, a slightly damp cloth can be used, followed immediately by a dry cloth. Avoid harsh chemicals or abrasive cleaners.
- **Fabric Drawers:** Spot clean with a mild detergent and a damp cloth. Allow to air dry completely. Do not machine wash or tumble dry the fabric drawers.
- **Charging Station:** Ensure the unit is unplugged before cleaning. Wipe the surface with a dry cloth. Do not use liquid cleaners directly on the electrical components.

6.2. General Care

- Regularly check all screws and connections to ensure they remain tight. Tighten if necessary.
- Avoid direct sunlight exposure for prolonged periods to prevent fading of the fabric drawers and wooden top.
- Keep the dresser away from excessive heat or humidity.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Dresser is wobbly/unstable.	Uneven floor; loose connections.	Adjust the leveling feet at the bottom of the dresser. Tighten all assembly screws.
Charging station not working.	Not plugged into wall outlet; power switch off; faulty device cable; overloaded circuit.	Ensure the dresser's power cord is securely plugged into a live wall outlet. Check if the charging station has a power switch and it's on. Try a different device cable. Unplug some devices if overloaded.
Drawers do not slide smoothly.	Drawer overloaded; items obstructing movement; drawer not fully assembled.	Reduce the weight in the drawer. Check for any items blocking the drawer's path. Ensure the drawer's bottom panel is fully inserted and rigid.
Missing parts during assembly.	Packaging error.	Do not proceed with assembly. Contact ODK customer service immediately for replacement parts.

8. SPECIFICATIONS

Brand:	ODK
Model Number:	SNG-0156
Color:	White
Product Dimensions (D x W x H):	30 x 132 x 88 cm (11.8 x 52 x 34.6 inches)
Item Weight:	18.9 kg (41.6 lbs)
Number of Drawers:	8
Special Features:	Integrated charging station with 2 USB ports and 2 AC outlets
Room Type:	Living Room, Bedroom
Care Instructions:	Wipe with a dry cloth
Charging Station Input:	Standard Household AC (e.g., 230V, 50Hz for EU)

USB Output:	5V / 2.1A (typical, refer to product label for exact specifications)
AC Outlet Output:	Standard Household AC (e.g., 230V, 10A max for EU)

9. WARRANTY AND CUSTOMER SUPPORT

ODK offers a 30-day free return and exchange service for this product. If you encounter any issues or have questions regarding assembly, operation, or parts, please do not hesitate to contact our customer service team.

Our professional 24-hour online customer service team is available to provide prompt assistance and resolve any problems you may experience.

Contact Information:

- For support, please refer to the contact details provided on your purchase platform or the ODK official website.
- Please have your model number (SNG-0156) and purchase date ready when contacting support.

© 2025 ODK. All rights reserved.

This manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CQJPRFH2>

More documents and user manuals: <https://manuals.plus/>