

Manuals.plus /

› Phueut /

› Phueut 8-Piece Accessory Pack for EM-317 Handheld Steam Cleaner Instruction Manual

## Phueut EM-317 Steam Cleaner Replacement Parts

# Phueut 8-Piece Accessory Pack for EM-317 Handheld Steam Cleaner

Instruction Manual

## INTRODUCTION

This instruction manual provides important information for the safe and effective use of your Phueut 8-Piece Accessory Pack, designed specifically for the EM-317 handheld steam cleaner. Please read this manual thoroughly before using the accessories to ensure proper operation and to prevent damage or injury.

## SAFETY INFORMATION

- Always ensure the EM-317 steam cleaner is turned off and unplugged before attaching or detaching any accessories.
- Allow the steam cleaner to cool down completely before handling accessories, especially after prolonged use, to avoid burns.
- Do not direct steam at people, pets, or electrical appliances. Steam is extremely hot and can cause severe burns.
- Use only genuine Phueut replacement parts and accessories with your EM-317 steam cleaner.
- Keep accessories out of reach of children.
- Inspect accessories for any damage before each use. Do not use damaged accessories.

## PACKAGE CONTENTS

Your Phueut 8-Piece Accessory Pack includes the following items:

1. 1 x Long Spray Nozzle
2. 1 x Extension Hose
3. 1 x Fabric Steam Tool
4. 1 x Window Cleaning Tool
5. 1 x Bent Nozzle

6. 2 x Microfiber Cleaning Cloths

7. 1 x Funnel



Image 1: Overview of the Phueut EM-317 Steam Cleaner and its 8-piece accessory kit.

## SETUP

Before attaching any accessory, ensure your EM-317 steam cleaner is cool and unplugged. To attach an accessory:

1. Identify the desired accessory.
2. Align the accessory with the steam cleaner's nozzle or the end of the extension hose.
3. Push firmly and twist clockwise until it locks securely into place. Some accessories may click when properly attached.
4. To detach, twist counter-clockwise and pull the accessory off. Always allow the unit to cool before detaching.



Compatible with

**Puetz Golf EM-317**  
**Steam Cleaner**



Image 2: Various accessories from the 8-piece kit, ready for attachment.

## OPERATING INSTRUCTIONS

Each accessory is designed for specific cleaning tasks. Ensure the steam cleaner is filled with water (using the provided funnel) and heated according to its own manual before use.

### 1. Long Spray Nozzle

Ideal for directing steam into tight spaces, corners, and crevices. Use for grout lines, sink edges, and hard-to-reach areas. Attach directly to the steam cleaner or the extension hose.

### 2. Extension Hose

Provides extended reach for cleaning larger areas or objects further away from the main unit. Attach other accessories to the end of the extension hose for versatile cleaning.

### 3. Fabric Steam Tool

Designed for steaming fabrics, upholstery, and garments. Helps to refresh fabrics and remove wrinkles. Always test on an

inconspicuous area first.

#### 4. Window Cleaning Tool

Use for streak-free cleaning of windows, mirrors, and other smooth glass surfaces. Apply steam, then use the squeegee edge to wipe clean.

#### 5. Bent Nozzle

The angled design of this nozzle is perfect for cleaning around faucets, toilet bases, and other curved or awkward surfaces where a straight nozzle might not reach effectively.

#### 6. Microfiber Cleaning Cloths

These cloths are used with various tools, especially the fabric steam tool or window cleaning tool, to absorb moisture and wipe away loosened dirt. They are reusable and machine washable.

#### 7. Funnel

Use the funnel to safely and easily fill the water tank of your EM-317 steam cleaner, preventing spills.

### MAINTENANCE

- **Cleaning Accessories:** After each use, wipe down all accessories with a damp cloth to remove any residue. For stubborn dirt, use mild soap and water. Rinse thoroughly.
- **Microfiber Cloths:** Machine wash microfiber cloths with similar colors. Do not use bleach or fabric softener, as these can damage the fibers. Air dry or tumble dry on low heat.
- **Storage:** Store all accessories in a clean, dry place, away from direct sunlight and extreme temperatures. Ensure they are completely dry before storing to prevent mold or mildew.
- **Inspection:** Regularly inspect accessories for wear and tear. Replace any damaged parts to maintain optimal performance and safety.

### TROUBLESHOOTING

Problem	Possible Cause	Solution
Accessory not attaching securely.	Incorrect alignment or debris in connection point.	Ensure correct alignment and clear any debris. Twist firmly until locked.
Reduced steam output from accessory.	Accessory partially blocked or not fully seated.	Check for blockages and ensure the accessory is securely attached. Refer to the main steam cleaner manual for general steam issues.
Water dripping from accessory.	Condensation or loose connection.	Some condensation is normal. Ensure the accessory is tightly connected. If excessive, check the main steam cleaner for issues.

### SPECIFICATIONS

- **Brand:** Phueut
- **Model Name:** EM-317 Steam Cleaner Replacement Parts
- **Compatible Model:** Phueut EM-317 Handheld Steam Cleaner

- **Included Components:** 1 Long Spray Nozzle, 1 Extension Hose, 1 Fabric Steam Tool, 1 Window Cleaning Tool, 1 Bent Nozzle, 2 Microfiber Cleaning Cloths, 1 Funnel
- **Material:** Durable plastic and microfiber fabric
- **Dimensions (Product):** Approximately 12.19 x 11.94 x 12.95 cm (packaging dimensions)
- **Special Features:** Internal storage (for some accessories), detachable design
- **UPC:** 762221874319

## WARRANTY AND SUPPORT

---

This Phueut accessory pack is covered by the manufacturer's standard warranty. Please refer to the warranty information provided with your original Phueut EM-317 steam cleaner or visit the official Phueut website for details. For technical support, replacement parts, or any inquiries regarding your accessory pack, please contact Phueut customer service through their official channels. Contact information can typically be found on the product packaging or the brand's website.

