



[Manuals.plus](#) /

› [Furmax](#) /

› Furmax Farmhouse Fireplace TV Stand User Manual

Furmax 12B

Furmax Farmhouse Fireplace TV Stand User Manual

Model: 12B (Natural Oak)

1. INTRODUCTION

Thank you for choosing the Furmax Farmhouse Fireplace TV Stand. This manual provides essential information for the safe assembly, operation, and maintenance of your new entertainment center. Please read these instructions thoroughly before beginning assembly or use, and retain them for future reference.

This highboy media console table is designed to accommodate TVs up to 65 inches, featuring a 26-inch electric fireplace insert, open storage, and side cabinets with adjustable shelves and barn doors. Its rustic design aims to complement various interior styles.



Image 1.1: The Furmax Farmhouse Fireplace TV Stand in Natural Oak, showcasing its design and integrated electric fireplace.

2. IMPORTANT SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product.

- **Read all instructions:** Before assembly and operation, carefully read and understand all instructions.
- **Electrical Safety:** The electric fireplace operates on standard household current. Ensure the power outlet matches the voltage requirements of the fireplace. Do not overload circuits.
- **Placement:** Place the TV stand on a flat, stable, and level surface. Avoid placing it near heat sources, direct sunlight, or in damp environments.
- **Ventilation:** Ensure adequate clearance around the fireplace insert for proper ventilation. Do not block air vents.
- **Overheat Protection:** The fireplace is equipped with overheat protection. If it overheats, it will automatically shut off. Unplug the unit and allow it to cool before restarting.

- **Children and Pets:** Keep children and pets away from the fireplace and any moving parts during operation. The surface of the fireplace can become hot.
- **Weight Capacity:** Do not exceed the maximum weight capacity of 220 lbs for the TV stand. Distribute weight evenly.
- **Assembly:** Assembly should be performed by at least two adults. Use only the provided hardware.
- **Cable Management:** Utilize the cable management cutouts to keep wires organized and prevent tripping hazards.

WARNING: The product will be shipped in TWO packages that may NOT be delivered at the same time. Ensure all packages are received before starting assembly.



Image 2.1: Illustration of the two-package delivery and recommended pre-assembly checks: Inspect for Damages, Check Components, Verify Functionality.

3. PACKAGE CONTENTS

Before assembly, verify that all components and hardware are present. Refer to the detailed instruction manual included in the packaging for a complete list of parts and hardware. The product is delivered in two separate packages:

- **Package 1:** TV Stand Components (Engineered Wood panels, hardware, assembly tools)
- **Package 2:** 26-inch 3D Electric Fireplace Insert

Each accessory and screw is labeled with letters for easy identification during assembly.

4. ASSEMBLY INSTRUCTIONS

Assembly typically requires two adults and approximately 1-2 hours. Follow the step-by-step instructions provided in the separate assembly guide included with your product. Ensure you have ample space and the necessary tools (usually a screwdriver) before starting.

1. **Unpack and Identify:** Carefully unpack both packages. Lay out all components and hardware on a clean, soft surface to prevent scratches. Match each part to the corresponding label in the assembly guide.

2. **Assemble the Main Frame:** Begin by assembling the base and side panels of the TV stand according to the numbered steps in the guide.
3. **Install Shelves:** Insert the adjustable shelves into the side cabinets. The height can be customized to your preference.
4. **Attach Barn Doors:** Secure the rustic barn doors to the side cabinets using the provided hinges and retro metal handles.
5. **Integrate Fireplace Insert:** Once the main structure is complete, carefully slide the 26-inch electric fireplace insert into its designated opening in the center of the TV stand.
6. **Final Checks:** Ensure all screws are tightened, and the stand is stable. Use the cable management cutouts to route any wires neatly.

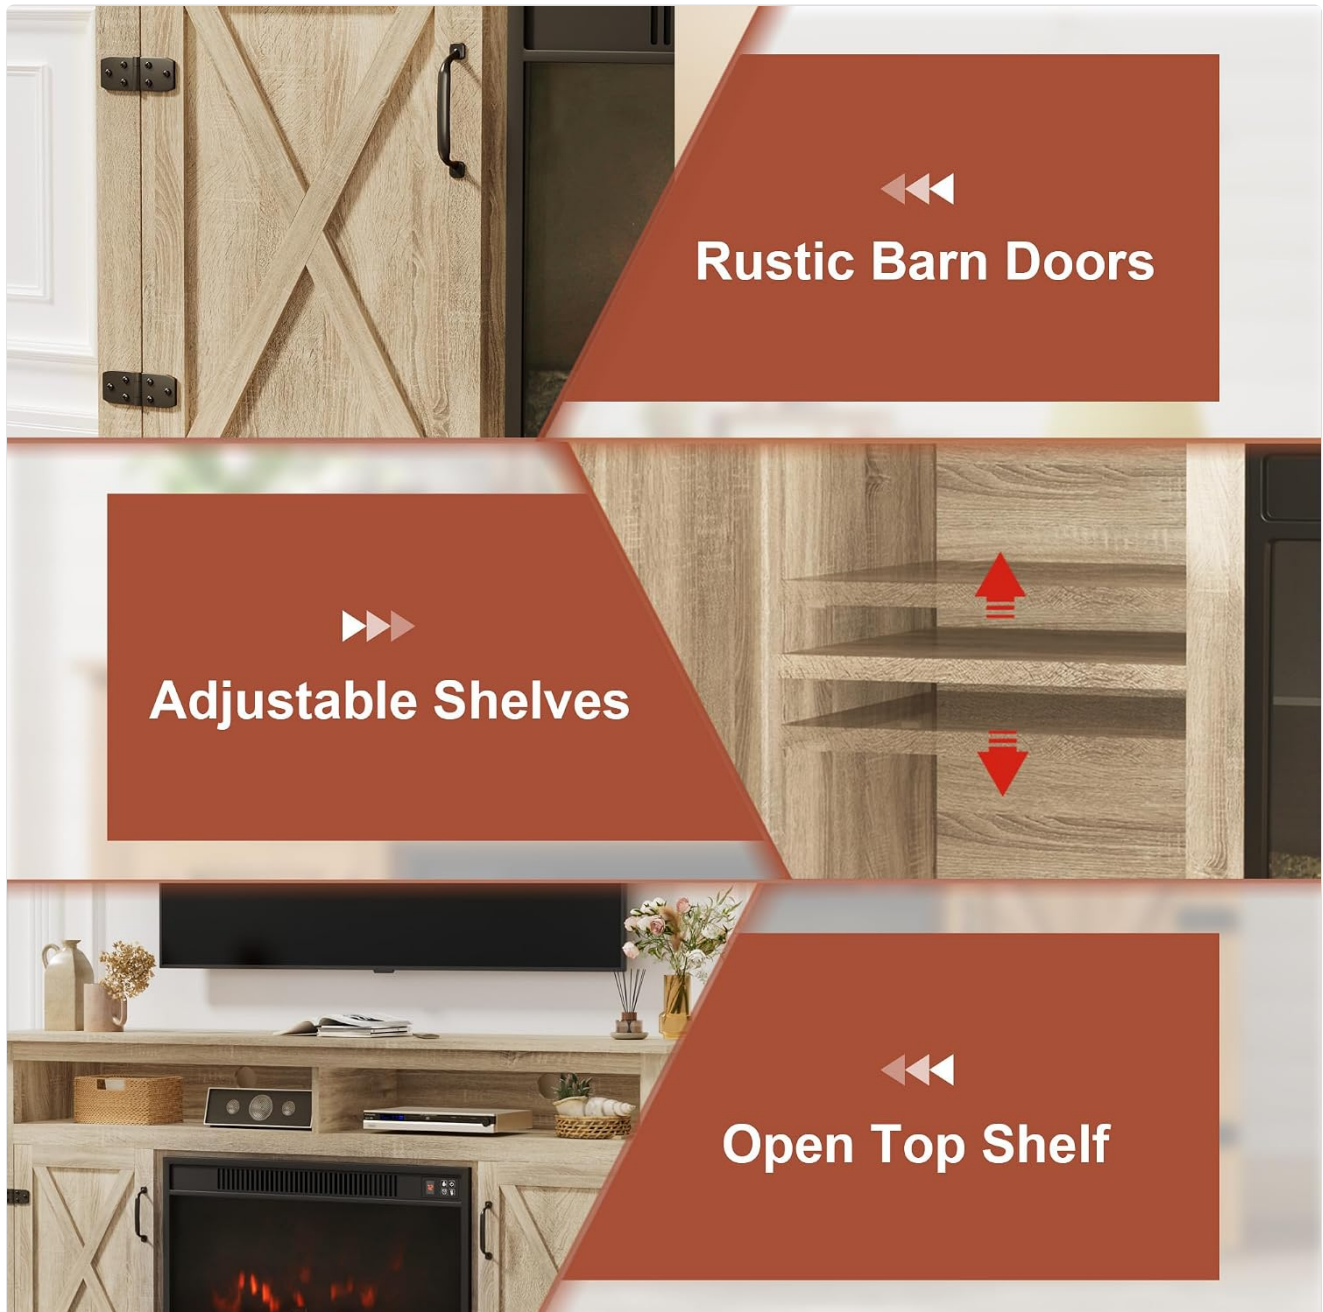


Image 4.1: Key features for assembly and functionality: rustic barn doors, adjustable shelves, and the open top shelf for media devices.



Image 4.2: Close-up views illustrating the cable management system, adjustable shelves, vintage metal handles, and the robust base for stability.

5. OPERATING INSTRUCTIONS (ELECTRIC FIREPLACE)

The integrated 26-inch electric fireplace provides both aesthetic flame effects and supplemental heating. Refer to the separate fireplace manual for detailed controls, typically found on the unit itself or via a remote control.

- **Power On/Off:** Locate the power button on the fireplace unit or remote control to turn the unit on or off.
- **Flame Effect:** The fireplace features a 3D flame effect with adjustable intensity (low, medium, high). The flame effect can be operated independently of the heating function.
- **Heating Function:** Activate the heating function to provide warmth. The temperature can be adjusted from 65°F to 95°F. The heater is designed to warm areas up to 400 sq. ft.
- **Temperature Control:** Use the thermostat controls to set your desired room temperature. The unit will cycle on and off to maintain this setting.
- **Timer Function:** A timing control feature may be available to set an automatic shut-off time for the fireplace.
- **Remote Control:** Most functions can be controlled via the included remote control for convenience.
- **Overheat Protection:** For safety, the fireplace will automatically shut off if it detects overheating. If this occurs, unplug the unit and allow it to cool for at least 15 minutes before plugging it back in and restarting.

26 Inches Electric Fireplace



3D Flame Effect



Heat Control
as 65-95°F



Warm for
400 SQ. FT.



Overheat
Protection



Timing Control



Remote Control



Low Effect



Medium Effect



High Effect

Image 5.1: Overview of the 26-inch electric fireplace's capabilities, including adjustable flame effects and heating options.

6. MAINTENANCE

Regular maintenance will help prolong the life and appearance of your TV stand and fireplace.

- **Cleaning the TV Stand:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the engineered wood finish.
- **Cleaning the Fireplace:** Ensure the fireplace is unplugged and cool before cleaning. Wipe the exterior with a soft, damp cloth. Clean the glass display with a glass cleaner, avoiding direct spray onto electrical components.
- **Dusting:** Regularly dust the unit, especially around the fireplace vents, to ensure proper airflow.
- **Inspecting Connections:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Storage:** If storing the unit, ensure it is clean, dry, and protected from extreme temperatures and humidity.

7. TROUBLESHOOTING

If you encounter issues with your Furmax Farmhouse Fireplace TV Stand, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fireplace does not turn on.	No power, power cord not fully plugged in, circuit breaker tripped, overheat protection activated.	Check power outlet and cord connection. Reset circuit breaker. If overheat protection activated, unplug and allow to cool for 15 minutes.
No heat output.	Heating function not activated, thermostat set too low, air vents blocked.	Ensure heating function is on. Increase thermostat setting. Clear any obstructions from air vents.
Flame effect not visible.	Flame effect not activated, LED bulbs faulty.	Activate flame effect. If issue persists, contact customer support.
Stand is wobbly after assembly.	Screws not fully tightened, uneven floor.	Ensure all assembly screws are securely tightened. Move the stand to a level surface or use shims if necessary.
Missing parts or damaged components.	Shipping error or manufacturing defect.	Do not proceed with assembly. Contact Furmax customer support immediately with your purchase details.

8. SPECIFICATIONS

Feature	Detail
Brand	Furmax
Model Name	Farmhouse Fireplace TV Stand
Item Model Number	12B
Color	Natural Oak
Product Dimensions	59"W x 16.3"D x 30.1"H
Material	Engineered Wood
Finish Type	Polished
Installation Type	Freestanding
Item Weight	94.8 Pounds
Max TV Size Accommodated	Up to 65 inches

Feature	Detail
Max Weight Capacity	220 lbs
Fireplace Type	3D Electric Fireplace Insert
Power Source	Corded Electric
Heating Coverage	400 sq ft
Temperature Adjustments	65°F to 95°F
Special Features	Adjustable Flame, Dimmer, Overheat Protection, Cable Management

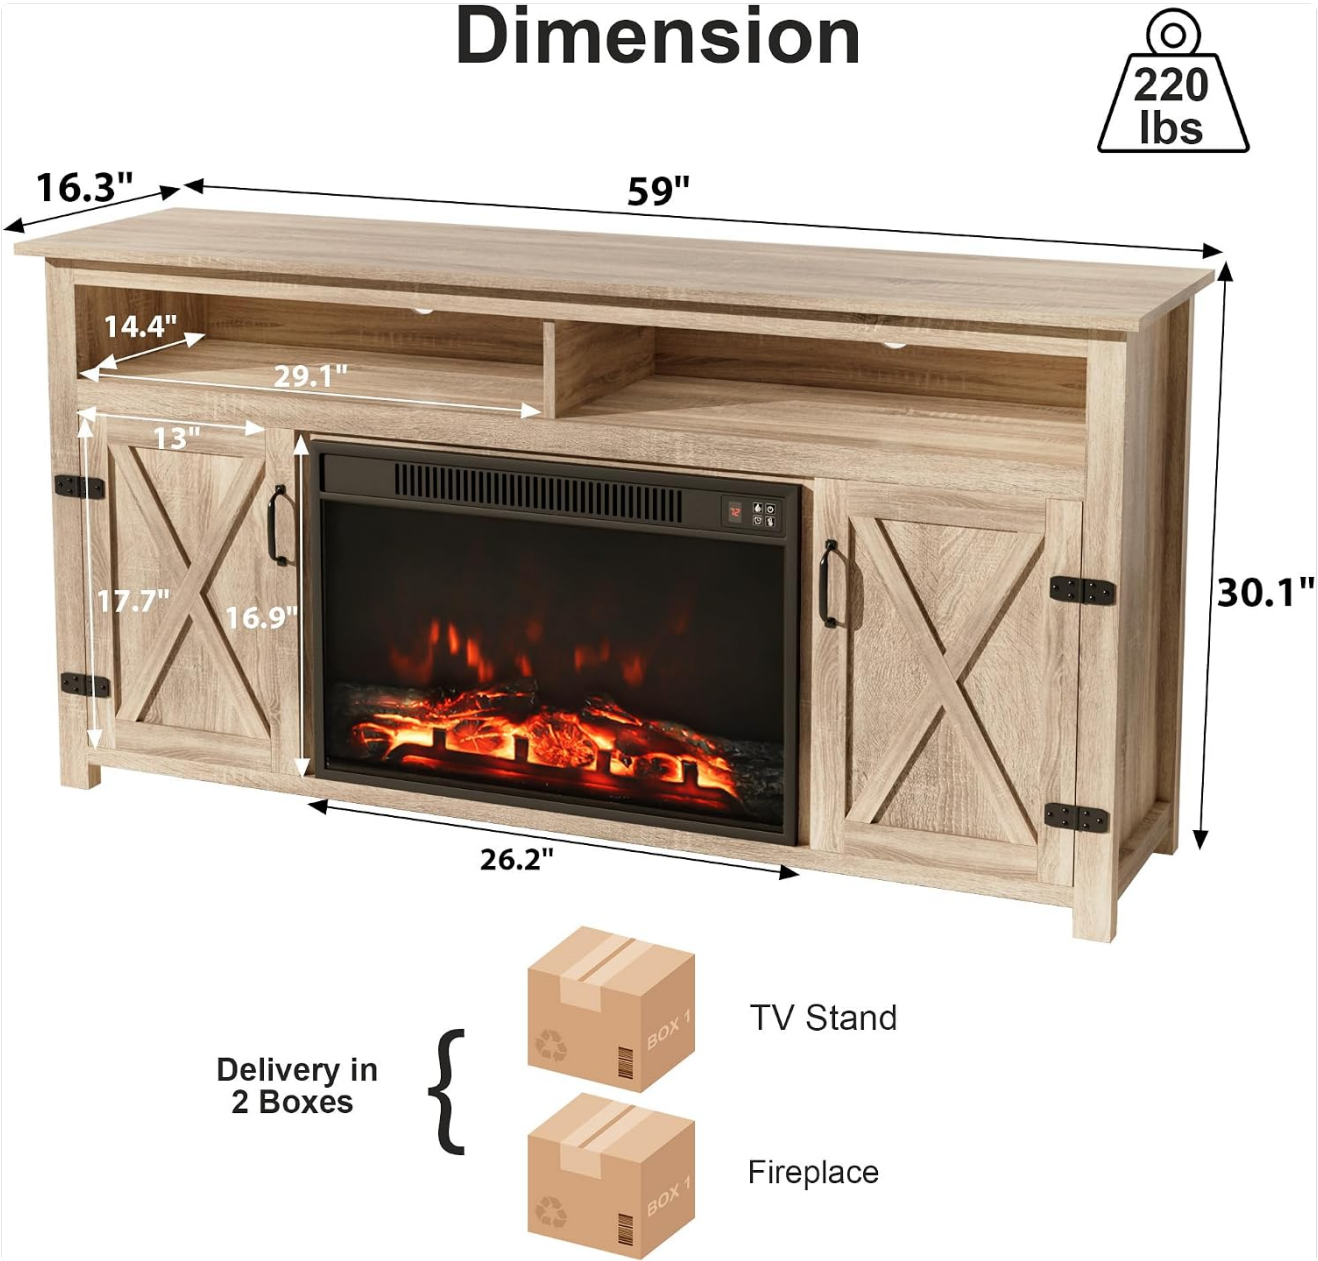


Image 8.1: Detailed dimensions of the TV stand, including width, depth, and height, and the fireplace insert size.

Fit Up to 65 Inches TVs



Image 8.2: Visual representation of the TV stand's compatibility with various TV sizes, up to 65 inches.

9. WARRANTY AND SUPPORT

The Furmax Farmhouse Fireplace TV Stand comes with a **Limited Warranty**. Please refer to the warranty card included in your package for specific terms and conditions, including coverage duration and what is covered.

For technical assistance, missing parts, or warranty claims, please contact Furmax customer support. Have your purchase receipt, model number (12B), and date of purchase ready when contacting support.

Contact Information: Please refer to the contact details provided in your product packaging or visit the official Furmax website for the most up-to-date support information.

