

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TELESIN](#) /

› [TELESIN 59-inch Long Selfie Stick Tripod Instruction Manual \(Model COB-S1-TSS\)](#)

## TELESIN COB-S1-TSS

# TELESIN 59-inch Long Selfie Stick Tripod Instruction Manual

Model: COB-S1-TSS

## 1. PRODUCT OVERVIEW

The TELESIN 59-inch Long Selfie Stick Tripod (Model: COB-S1-TSS) is a versatile accessory designed for action cameras, offering extended reach and stable support. It features a 360° adjustable ball head, an integrated tripod, and a durable aluminum construction, making it suitable for various shooting scenarios.



Figure 1: TELESIN Selfie Stick Tripod in various configurations.

## 2. KEY FEATURES

- **360° Ball Head:** The adjustable ball joint allows for full 360-degree rotation, enabling both horizontal and vertical shooting angles.
- **Integrated Tripod Stand:** A robust, non-detachable tripod is built into the handle, constructed from upgraded aluminum material for enhanced stability when fully extended. It folds compactly for storage.
- **Extendable Pole:** Made from durable aluminum, the pole is compact at 12.1 inches when retracted and extends up to 59 inches, maintaining stability at various lengths.
- **Dual Mount Adapters:** Includes an adapter compatible with GoPro Max Hero (13, 12, 11, 10, 9, 8, 7, 6, 5), DJI Osmo 360, DJI Osmo Nano, DJI Action (3, 4, 5 Pro, 6), and DJI Osmo Pocket 3. Also features a 1/4-inch adapter for other action cameras such as Insta360 (X5, X4, X3, X2, GO2, Go 3), Ace Pro, AKASO Brave, and Dragon Touch 4K.

# 360° million dimensional Rotation There is no limit to the Shooting Angle

Specialize in PTZ design, greatly improve the shooting perspective experience,



Figure 2: The 360° ball head allows for flexible camera positioning.

## 3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x TELESIN 360 Selfie Stick with Tripod
- 1 x 1/4 AE Adapter
- 1 x Locking Screw

## 4. SETUP INSTRUCTIONS

### 1. Attach Camera:

- For action cameras with a standard two-pronged mount (e.g., GoPro, DJI Action), align the camera's mount with the selfie stick's mount and secure it using the provided locking screw.
- For cameras with a 1/4-inch screw thread (e.g., Insta360, other action cameras), attach the 1/4 AE Adapter to the selfie stick's mount, then screw your camera onto the adapter.

2. **Adjust Ball Head:** Loosen the retention screw on the side of the ball head to adjust your camera's angle. Tighten the screw firmly once the desired angle is achieved.



Figure 3: The quick release mount and 1/4 inch adapter for camera attachment.

## 5. OPERATING INSTRUCTIONS

1. **Extend/Retract Pole:** To extend the selfie stick, simply pull the top section upwards. The pole will lock into place at various lengths. To retract, push the sections back down until fully collapsed.
2. **Use as Tripod:** To deploy the tripod, gently spread the legs at the base of the handle until they are fully open and stable. Ensure the tripod is placed on a flat, stable surface. To fold, bring the legs back together.
3. **Adjust Camera Orientation:** Use the 360° ball head to switch between horizontal (landscape) and vertical (portrait) shooting modes, or any angle in between, by loosening and tightening the side screw.

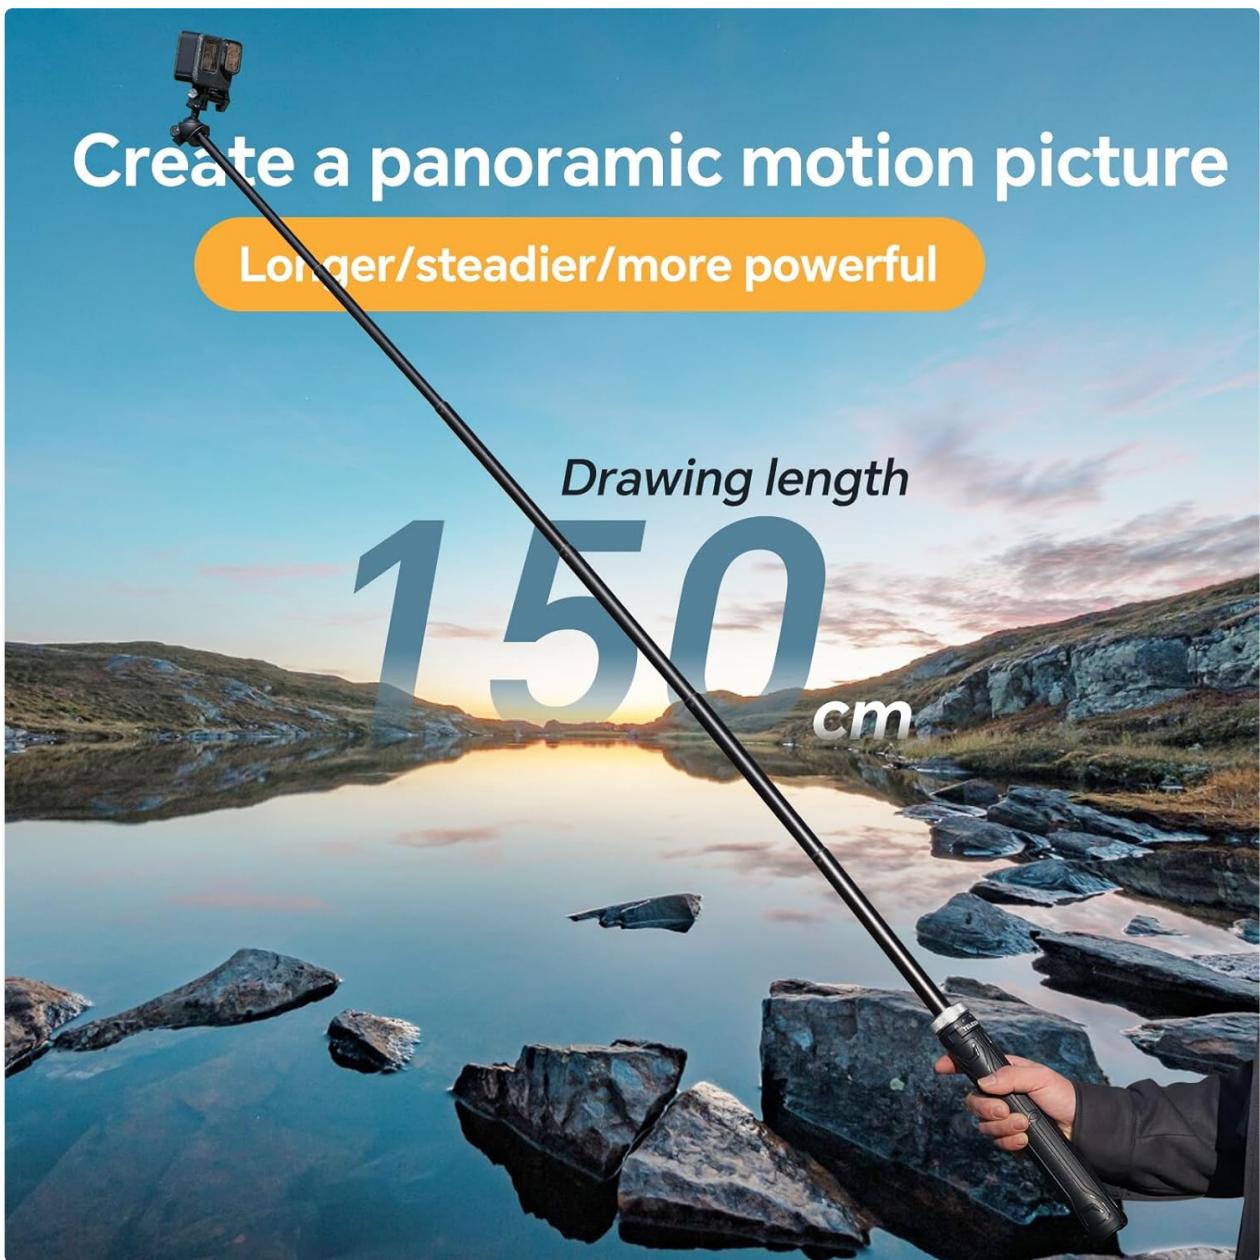


Figure 4: The extendable pole allows for wide-angle and panoramic shots.

## 6. MAINTENANCE

- **Cleaning:** Wipe the selfie stick with a soft, dry cloth after each use to remove dust and debris. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures. Ensure it is fully retracted and the tripod legs are folded for compact storage.
- **Inspection:** Periodically check all screws and joints for tightness. Tighten any loose components to ensure stability and prevent damage.

## 7. TROUBLESHOOTING

- **Instability:** If the selfie stick or tripod feels unstable, ensure all sections are fully extended and locked, and the tripod legs are completely spread on a flat surface. Check that the camera is securely attached and the ball head screw is tightened.
- **Difficulty Extending/Retracting:** Ensure no debris is lodged in the pole sections. Clean the pole and try again. Avoid forcing the mechanism.

## 8. SPECIFICATIONS

Attribute	Detail
Model Number	COB-S1-TSS
Brand	TELESIN
Item Weight	13.4 ounces
Package Dimensions	14.13 x 1.89 x 1.81 inches
Extended Length	Up to 59 inches (1480mm)
Retracted Length	12.1 inches (307mm)
Material	ABS + Aluminum
Compatible Devices	Action Cameras (GoPro, DJI Action, Insta360, etc.)
Mounting Type	Surface Mount (with 1/4" adapter)

## Product Parameters

Brand: Telesin

Model: S1-TSS-01

Net weight: 322g

Shrinkage size: 307mm

Material quality: ABS+AL

Extended length: 1480mm



Figure 5: Detailed product parameters and dimensions.

## 9. WARRANTY AND SUPPORT

---

This TELESIN product comes with a 90-day free return and refund policy, and a 12-month warranty. For any product-related inquiries or shipping issues, please contact GAOPOLO customer service for assistance.

## **10. OFFICIAL PRODUCT VIDEOS**

---

No official seller videos directly demonstrating this specific product (Model COB-S1-TSS) were available based on the provided data.