

Sharp AF-GD82AE-B

SHARP AF-GD82AE-B Hot Air Fryer User Manual

Model: AF-GD82AE-B

1. INTRODUCTION

Thank you for purchasing the SHARP AF-GD82AE-B Hot Air Fryer. This appliance is designed to provide a versatile and efficient way to cook a variety of dishes with minimal oil, utilizing high-speed hot air circulation. Please read this manual thoroughly before operating the appliance to ensure safe and optimal performance. Keep this manual for future reference.

2. IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions carefully.

- Do not immerse the appliance, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Always supervise the appliance when in use, especially when children are present.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Keep the appliance and its cord out of reach of children.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place the appliance against a wall or against other appliances. Leave at least 10 cm free space on the back and sides and 10 cm free space above the appliance.
- Hot air is released through the air outlet openings during hot air frying. Keep your hands and face at a safe distance from the steam and from the air outlet openings.
- Always unplug the appliance after use and before cleaning. Allow it to cool down completely before handling.
- This appliance is intended for household use only.

3. PRODUCT OVERVIEW

The SHARP AF-GD82AE-B Hot Air Fryer features a sleek design with dual compartments for cooking multiple items simultaneously. Its digital control panel provides easy access to various cooking functions and programs.



Figure 3.1: Front view of the SHARP AF-GD82AE-B Hot Air Fryer, showcasing its dual baskets and digital control panel.



Figure 3.2: Angled view of the SHARP AF-GD82AE-B Hot Air Fryer, highlighting its compact yet spacious design.

Components:

- Main Unit with Heating Element and Fan
- Digital Touch Screen Control Panel
- Two Removable Frying Baskets (4L each)
- Two Non-stick Frying Pans/Crisper Plates
- Handles for Baskets



Figure 3.3: The SHARP AF-GD82AE-B Air Fryer with one of its 4-liter cooking baskets removed, showing the interior compartment.

4. SETUP

Before first use, follow these steps:

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Clean the frying baskets and crisper plates thoroughly with hot water, dish soap, and a non-abrasive sponge.
3. Wipe the inside and outside of the appliance with a damp cloth.
4. Place the appliance on a stable, horizontal, and level surface. Do not place the appliance on non-heat-resistant surfaces.
5. Ensure there is adequate ventilation around the appliance (at least 10 cm clearance on all sides).
6. Insert the crisper plates into the frying baskets. Slide the baskets back into the air fryer until they click into place.

5. OPERATING INSTRUCTIONS

The SHARP AF-GD82AE-B Hot Air Fryer features a digital touch screen control panel and 12 automatic programs, along with 10 cooking functions for versatile meal preparation.



Figure 5.1: Close-up view of the digital touch screen control panel, showing various program icons and settings.

Basic Operation:

1. Plug the power cord into a grounded wall outlet. The appliance will beep, and the display will light up briefly.
2. Pull out the frying baskets and place your ingredients into them. Do not overfill the baskets.
3. Slide the baskets back into the appliance.
4. Press the Power button to turn on the display.
5. Select a cooking program or manually set the temperature and time.

Using Automatic Programs:

The air fryer comes with 12 automatic programs for common dishes. Press the 'Auto Menu' button or cycle through the program icons on the touch screen to select your desired program. The appliance will automatically set the optimal temperature and time.

Manual Settings:

To manually adjust settings, use the 'Temp/Time' buttons and the '+' / '-' buttons to set the desired temperature and cooking duration for each basket independently.

Dual Cook Functionality:

This air fryer features two independent cooking zones. You can:

- **Sync Finish:** Cook two different foods with different settings, and the fryer will automatically adjust cooking times so both finish simultaneously.
- **Dual Cook:** Apply the same cooking settings (temperature and time) to both baskets with a single touch.

Cooking Functions:

Utilize the following functions for various cooking needs:

- **Pre-Heat:** Warms up the air fryer to the desired temperature before adding food.
- **Air Fry:** For crispy results with little to no oil.
- **Roast:** Ideal for meats and vegetables.
- **Bake:** For cakes, pastries, and other baked goods.
- **Dehydrate:** For drying fruits, vegetables, or making jerky.
- **Reheat:** Warms up previously cooked food.
- **Keep Warm:** Maintains food at a serving temperature.
- **Frozen:** Optimized settings for cooking frozen foods.



Figure 5.2: The SHARP AF-GD82AE-B Air Fryer in operation, demonstrating simultaneous cooking of different food items in its dual compartments.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

Cleaning the Frying Baskets and Crisper Plates:

- The non-stick frying baskets and crisper plates are dishwasher safe.
- Alternatively, wash them with hot water, dish soap, and a non-abrasive sponge.
- For stubborn food residue, soak the baskets in hot water with dish soap for about 10 minutes before cleaning.

Cleaning the Main Unit:

- Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads.
- Clean the interior of the appliance with a damp cloth.
- Never immerse the main unit in water or any other liquid.

Storage:

Ensure the appliance is completely cool and clean before storing. Store it in a dry place.

7. TROUBLESHOOTING

If you encounter issues with your air fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in. Power outlet not working.	Ensure the power cord is securely plugged in. Test the outlet with another appliance.
Food is not cooked evenly.	Baskets are overfilled. Temperature or time settings are incorrect.	Do not overfill the baskets; cook in smaller batches if necessary. Shake the baskets halfway through cooking. Adjust temperature and time as needed.
White smoke comes from the appliance.	Grease residue from previous use. Fatty ingredients being cooked.	Clean the baskets and crisper plates thoroughly after each use. Remove excess fat from ingredients before cooking.
Food is not crispy.	Too much moisture in food. Not enough oil (for certain foods).	Pat food dry before air frying. Lightly brush or spray with oil for extra crispiness.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Refer to the following technical specifications for the SHARP AF-GD82AE-B Hot Air Fryer:

Feature	Specification
Brand	Sharp
Model Number	AF-GD82AE-B (844216)
Color	Black
Product Dimensions (L x W x H)	36.2 x 39.5 x 30.5 cm
Item Weight	10 Kilograms
Capacity	2 x 4 Liters (8 Liters total)
Power	1850 Watts

Feature	Specification
Voltage	230 Volts (AC)
Material	Stainless Steel
Special Feature	Programmable
Recommended Uses	Bake, Reheat, Roast



Figure 8.1: Dimensional overview of the SHARP AF-GD82AE-B Hot Air Fryer, showing its length, width, and height measurements.

9. WARRANTY AND SUPPORT

Information regarding specific warranty terms and conditions for the SHARP AF-GD82AE-B Hot Air Fryer is not available in this document. Please refer to the warranty card included with your product or contact Sharp customer service for detailed warranty information.

For technical support, spare parts, or service inquiries, please visit the official Sharp website or contact their authorized service centers. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question