

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [COMFIER](#) /

> [COMFIER Foot Massager with Heat \(Model CF-5326\) - Instruction Manual](#)

COMFIER CF-5326

COMFIER Foot Massager with Heat

MODEL: CF-5326 - INSTRUCTION MANUAL

[Introduction](#) [Safety](#) [Contents](#) [Features](#) [Setup](#) [Operation](#) [Maintenance](#) [Specifications](#) [War](#)

1. Introduction

Thank you for choosing the COMFIER Foot Massager with Heat, Model CF-5326. This device is designed to provide a comprehensive foot massage experience, combining shiatsu kneading, rolling, and air compression with optional heat. Please read this manual thoroughly before use to ensure proper operation and safety.



2. Important Safety Information

To reduce the risk of electric shock, fire, or injury, please observe the following safety precautions:

- Do not use this massager near water or in damp environments.
- Do not use while sleeping or in a state of unconsciousness.
- If you have certain health conditions, such as neuropathy, plantar fasciitis, or other medical concerns, consult a physician before using this device.
- Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. (*Note: This disclaimer is included as per product information, though typically found with ingestible products.*)
- Ensure the power supply is turned off and the plug is removed from the socket when not in use or before cleaning.
- Do not pull the power plug by damp hands.
- Do not use corrosive cleaning agents like benzene or thinner.
- Avoid contact with sharp edges or pointed objects which might cut or puncture the massager.

3. Package Contents

Verify that all items are present in the package:

- COMFIER Foot Massager Machine
- UL Home Adapter
- User Manual
- Remote Controller

Package Includes:

- Foot Massager Machine
- UL Home Adapter
- User Manual
- Remote Controller



Image: All components included in the COMFIER Foot Massager package.

4. Product Features

The COMFIER Foot Massager offers a range of features for a personalized and effective foot massage:

- **Deep Shiatsu Massage with Heat:** Integrates kneading for the foot arch, rolling for the sole, shiatsu for heels, and U-shaped compression for instep and ankles. The heating function provides additional comfort.



Image: Detailed diagram illustrating the five massage zones: heel (small roller with bump), forefoot (kneading + rolling), arch (large roller with bump), forefoot (kneading + rolling), and instep (360-degree compression).

- **Diverse Massage Modes:** Features 4 automatic massage modes. Kneading, squeezing (air compression), and heating functions can be used independently with adjustable intensity levels.

Comfier Make Life Comfier



Max Foot Size: US 13

Are you struggling with any of these problems?



Poor sleep



Cold feet



Heelers



Runner

Image: Illustrates the foot massager's various massage techniques, beneficial for conditions like neuropathy.

- **Adjustable Heat Settings:** Offers two temperature settings: 113°F (Low) and 131°F (High).

Why Choose COMFIER?

COMFIER

OTHERS



VS



New upgraded turntable
+ 2 roller massage



Wireless remote control



Selectable massage modes



With dust cover



Multi-purpose



Image: A woman relaxing while using the foot massager, highlighting the two heating settings available.

- **Convenient Control Options:** Equipped with piano-key buttons on the unit and a remote control for easy adjustment of settings.
- **Advanced Functionality:** Includes a pause function to temporarily stop and resume the massage, and a mute mode for quieter operation.
- **Sleek Design & Easy Maintenance:** Comes with a dust cover for protection when not in use. The foot sleeve covers are detachable and washable for hygiene.



Image: Demonstrates the waterproof material of the massager, the dust lid, and the washable foot sleeve for easy cleaning.

5. Setup

1. **Unpack:** Carefully remove the foot massager and all accessories from the packaging.
2. **Placement:** Place the massager on a flat, stable surface in a comfortable seating area.
3. **Power Connection:** Connect the UL Home Adapter to the power input port on the massager, then plug the adapter into a suitable electrical outlet.
4. **Foot Sleeves:** Ensure the detachable foot sleeve covers are properly inserted and zipped into the foot chambers.

6. Operating Instructions

The massager can be operated using either the piano-key buttons on the unit or the included remote control.

6.1. Getting Started

1. **Power On:** Press the 'Power' button on the unit or the remote control to turn on the massager. The default mode (Mode A) will activate automatically.
2. **Insert Feet:** Sit comfortably and gently place your feet into the foot chambers.

6.2. Control Panel & Remote Functions

Multi-purpose without taking up space

With cover – dustproof and can be
used as a footstool



Image: Overview of the massager's control panel with piano-key buttons and the remote control.

- **Power Button:** Turns the unit On/Off.
- **Heat Button:** Toggles between Low heat (113°F), High heat (131°F), and Off.
- **Knead Button:** Adjusts kneading intensity between Low, High, and Off.
- **Mode Button:** Cycles through 4 automatic massage modes (Mode A, B, C, D).
- **Pause Button:** Pauses the current massage program. Press again to resume from where it left off.
- **Air Button:** Adjusts air compression intensity between Low, Medium, High, and Off.
- **Timer Button:** Sets the massage duration to 15 or 30 minutes.
- **Mute Function:** (Available via remote or specific button on unit if present) Silences the massage prompts.

6.3. Massage Modes Overview

The massager offers various combinations of shiatsu, rolling, kneading, and air compression. Experiment with the modes to find your preferred experience:

- **Mode A (Feet Icon):** General comprehensive foot massage.
- **Mode B (Toes/Forefoot Icon):** Focuses on the forefoot and toe areas.
- **Mode C (Meditating Person Icon):** A relaxing and gentle massage mode.

- **Mode D (Wave/Dynamic Icon):** Features a dynamic, wave-like massage motion.

7. Maintenance & Cleaning

Regular maintenance ensures the longevity and hygiene of your massager.

- **Cleaning the Unit:** Before cleaning, ensure the power supply is turned off and unplugged. Use a soft, dry cloth to wipe the surface of the product. Do not use water or corrosive cleaning agents.
- **Washable Foot Sleeves:** The foot sleeve covers are detachable via zippers for easy cleaning. Detach the sleeves and wash them by hand or machine (gentle cycle recommended). Air dry thoroughly before reinserting.



Image: The foot massager with its dust cover, demonstrating its multi-purpose use as a footstool when covered.

- **Storage:** When not in use, store the massager in a cool, dry place. Use the provided dust cover to prevent dust and pet hair from entering the massager.

8. Troubleshooting Guide

If you encounter any issues with your COMFIER Foot Massager, please refer to the following common solutions:

- **Unit does not power on:** Ensure the power adapter is securely plugged into both the massager and a working electrical outlet.
- **No massage action:** Check if the correct mode is selected and if the pause function is active.
- **Weak or no heat:** Verify that the heat function is turned on and allow a few minutes for the heating elements to warm up.
- **Unusual noises:** If you hear a rattling noise, ensure no foreign objects are inside the foot chambers. If the noise persists, discontinue use and contact customer support.
- **Massager switches off unexpectedly:** This may be due to the automatic timer. Restart the device if you wish to continue the massage.

If the problem persists after attempting these solutions, please contact COMFIER customer support.

9. Product Specifications

Specification	Detail
Brand	COMFIER
Model Number	CF-5326
Product Dimensions	12.6 x 14.02 x 8.27 inches
Item Weight	8.99 Pounds (9 Pounds listed elsewhere)
Use For	Feet
Power Source	Corded Electric
Material	Polyester
Manufacturer	COMFIER
ASIN	B0CQL6QP7S

10. Warranty & Support

The COMFIER Foot Massager comes with a standard 1-year warranty. This warranty can often be extended to 3 years for free upon product registration. Please refer to the product packaging or the COMFIER official website for details on how to register your product and extend your warranty.



Image: FSA/HSA Eligible logo, indicating potential eligibility for health spending accounts.

For technical support, troubleshooting assistance, or warranty claims, please contact COMFIER customer service through their official website or the contact information provided in your product packaging.