

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Sycelu](#) /

› [Sycelu FYQ-K2 RF Remote Page Turner Instruction Manual for Kindle and Tablets](#)

Sycelu FYQ-K2

Sycelu FYQ-K2 RF Remote Page Turner Instruction Manual

Model: FYQ-K2 | Brand: Sycelu

INTRODUCTION

The Sycelu FYQ-K2 RF Remote Page Turner is designed to enhance your digital reading experience by providing hands-free page turning for various e-readers and tablets. This device allows you to comfortably read in any position, whether in bed, on the couch, or while multitasking, without needing to physically touch your screen. Its silent button design ensures a quiet reading environment, and its wide compatibility makes it a versatile accessory for many devices.

Beyond e-reading, the remote also functions as a trigger for camera and video recording on compatible smartphones and tablets, offering greater flexibility for content creation.

WHAT'S IN THE BOX

- 1 x RF Remote Control Page Turner (Remote Unit)
- 1 x Screen Sensor Clip (Receiver Unit)
- 1 x USB-C Charging Cable
- 1 x Lanyard
- 1 x User Manual

SETUP

1. Charging the Device

Before first use, ensure both the remote control and the screen sensor clip are fully charged. Use the provided USB-C cable to connect them to a power source. A full charge provides extended usage time.

2. Pairing the Remote Control and Clip

1. **Activate the Screen Sensor Clip:** Click the button on the screen sensor clip. The indicator light on the

clip will show a blue light, indicating it is powered on and ready for pairing.

2. **Activate the Remote Control:** Click the button on the RF remote control. The indicator light on the remote will flash blue three times, confirming successful connection between the remote and the clip.

Instructions for use


step1

Click the screen sensor clip button and the indicator shows blue light on



step2

Click the RF remote control button.
The screen sensor clip indicator light flashes blue three times
Connection successful

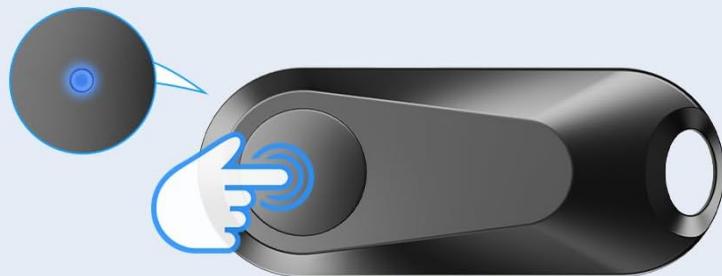

step3

Clip the screen sensor clip on the kindle to the green area,select one position which you like,different phone,different tablet with different area.just insure the inductive point in right positon.Press the RF remote control button to turn the next page



Image: Step-by-step instructions for pairing the remote control and screen sensor clip.

3. Attaching the Screen Sensor Clip to Your Device

Careful placement of the screen sensor clip is crucial for optimal performance. The clip's silicone pad must make direct contact with the screen to simulate a touch. Ensure the clip is positioned correctly to avoid obstructing text or menus.

- **Correct Placement:** Clip the screen sensor onto the side of your e-reader or tablet. The silicone pad should touch the active reading area of the screen.
- **Avoid Incorrect Placement:** Do not clamp the clip upside down, or on areas that display menus or non-text content, as this may interfere with functionality.
- **Device Thickness:** The thickness of your device, including any case, should not exceed 0.45 inches (approximately 1.14 cm) for the clip to function properly.



Image: Illustration showing the correct placement of the screen sensor clip for effective page turning.



Image: Diagram illustrating the maximum device thickness (0.45 inches) for proper clip function.

OPERATING INSTRUCTIONS

1. Page Turning Function

Once the clip is attached and the remote is paired, you can begin hands-free reading:

- **Forward Page Turn:** Press the main button on the remote control to advance to the next page.
- **Backward Page Turn:** Some models may support backward page turning by pressing a specific side button or a different gesture. Refer to your device's settings if this feature is desired.
- **Silent Operation:** The remote features a silent button design, allowing you to turn pages discreetly without disturbing others, ideal for quiet environments or nighttime reading.



Image: Visual guide for clipping the device to enable both forward and backward page turning.

2. Camera and Video Recording Remote Trigger

The remote control can also act as a trigger for your smartphone or tablet's camera and video recording functions. This allows for hands-free photo taking and video recording, which is useful for group photos, vlogging, or remote control of your device's camera.



Image: A user demonstrating hands-free camera operation with the remote control.

COMPATIBILITY

The Sycelu FYQ-K2 Remote Page Turner is compatible with a wide range of touch-screen e-readers, tablets, and smartphones. This includes:

- Kindle (Kindle 10, Kindle 11, Kindle Scribe (KS), Kindle Paperwhite (KPW, KPW2, KPW3, KPW4, KPW5), Kindle Oasis (KO, KO2, KO3), Kindle Kids Edition, Kindle Voyage, Kindle App)
- Kobo e-readers
- iPad and iPhone devices
- Android Tablets and Smartphones
- Microsoft Surface devices

Incompatible Devices: Please note that the Amazon Fire HD 10 (10th/11th generation) and Kindle 8th Generation are incompatible with this device.



Image: A visual representation of the wide range of devices compatible with the page turner.

MAINTENANCE

- Keep the device clean by wiping it with a soft, dry cloth.
- Store in a cool, dry place when not in use.
- Avoid exposing the device to extreme temperatures or direct sunlight for prolonged periods.

- Do not attempt to disassemble or repair the device yourself, as this will void the warranty.

TROUBLESHOOTING

Device Not Turning Pages:

- Ensure both the remote and the clip are charged.
- Verify that the remote and clip are successfully paired (blue light on clip, flashing blue light on remote).
- Check that the screen sensor clip's silicone pad is making firm and correct contact with the screen's active reading area.
- Confirm your device's screen thickness (including case) does not exceed 0.45 inches.
- If using a Kindle, ensure the margins are adjusted so the clip does not cover any text or activate menus.
- Try re-pairing the remote and clip by turning both off and then repeating the pairing steps.

Remote Not Responding:

- Check battery levels of both units.
- Ensure there are no obstructions between the remote and the clip.
- Re-pair the devices.

SPECIFICATIONS

Feature	Detail
Product Dimensions	4 x 1.3 x 5.5 inches
Item Weight	4.8 ounces
Item Model Number	FYQ-K2
Batteries	1 Lithium Polymer battery (included)
Special Feature	Rechargeable
Color	Black
Max Number of Supported Devices	1

WARRANTY AND SUPPORT

Sycelu products are designed for reliability and performance. For warranty information, technical support, or customer service inquiries, please refer to the contact details provided with your purchase or visit the official Sycelu website. Please retain your proof of purchase for warranty claims.

PRODUCT VIDEOS

A Cool Remote for Your Kindle

Your browser does not support the video tag.

Video: This video demonstrates the Sycelu FYQ-K2 remote

page turner in action with a Kindle, showcasing its ease of use for turning pages.

Honest review for kindle page turner!

Your browser does not support the video tag.

Video: An unboxing and initial review of the Kindle page turner, highlighting its features and setup process.

E-Reader Page Turner

Your browser does not support the video tag.

Video: A demonstration of the e-reader page turner's functionality, showing how it simplifies reading.