

Ussixchare Ussixchare 61-Key Mechanical Gaming Keyboard

Ussixchare 61-Key Mechanical Gaming Keyboard User Manual

INTRODUCTION

Welcome to the Ussixchare 61-Key Mechanical Gaming Keyboard user manual. This guide provides detailed instructions for setting up, operating, and maintaining your new compact mechanical keyboard. Designed for PC and laptop gamers, this keyboard features responsive red mechanical switches and customizable LED backlighting to enhance your gaming and typing experience.

PRODUCT FEATURES

- **Ultra-Compact 60% Layout:** A 61-key design for a minimalist desktop setup, optimizing space without sacrificing essential functionality.
- **Ergonomic Design:** Features a scientific stair-up keycap design for maximum comfort, reducing hand fatigue during extended use and minimizing typing errors.
- **Mechanical Red Switches:** Equipped with quiet click red mechanical switches, offering fast action with minimal resistance and no tactile bump, ideal for rapid keystrokes.
- **Classic Blue LED Backlight:** Customize your experience with approximately 18 distinct static and dynamic backlight modes.
- **Detachable USB-A to USB-C Cable:** Ensures easy plug-and-play connectivity without requiring software installation.
- **Wide Compatibility:** Compatible with Windows 98 / 2000 / 7 / 8 / 10 / XP / Vista operating systems.



Image: Key features of the Ussixhare 61-key mechanical gaming keyboard, including LED backlighting, USB wired connection, red switches, and N-key rollover.

SETUP

1. **Unpack the Keyboard:** Carefully remove the keyboard and its accessories from the packaging.
2. **Connect the USB Cable:** Insert the USB-C end of the provided cable into the port on the back of the keyboard.
3. **Connect to Computer:** Plug the USB-A end of the cable into an available USB port on your PC or laptop.
4. **Automatic Recognition:** The keyboard is plug-and-play and should be automatically recognized by your operating system without the need for additional drivers.



Image: Close-up view of the USB-C connection port on the keyboard, illustrating how to connect the detachable cable.

OPERATING INSTRUCTIONS

Key Functions

The Ussixchare 61-key keyboard utilizes a compact layout. Many standard functions are accessed via the **Fn** key in combination with other keys.

- **Fn + A/S/D/W**: Typically used for arrow key functions (depending on specific model configuration).
- **Fn + P**: Print Screen (PrtSc)
- **Fn + [**: Home
- **Fn +]**: End
- **Fn + ;**: Page Up (PgUp)
- **Fn + '**: Page Down (PgDn)
- **Fn + **: Delete (Del)
- **Fn + Enter**: Right Shift (if applicable)
- **Fn + Spacebar**: Lock/Unlock Fn key (some models)

Refer to the keycap legends for specific secondary functions indicated on each key.

Backlight Modes

The keyboard features multiple LED backlight modes. Use the following key combinations to adjust the lighting:

- **Fn + **: Cycle through approximately 18 different backlight effects.
- **Fn + [**: Decrease backlight brightness.
- **Fn +]**: Increase backlight brightness.
- **Fn + ;**: Decrease backlight speed (for dynamic modes).
- **Fn + '**: Increase backlight speed (for dynamic modes).



N-key Rollover

Image: The keyboard in use, illustrating its compact design and N-key rollover capability for precise input during gaming.

Mechanical Red Switch



Image: A close-up of the keyboard's red mechanical switches, highlighting their design and construction.

MAINTENANCE

Cleaning the Keyboard

- Disconnect the keyboard from your computer before cleaning.
- Use a soft, dry cloth to wipe down the keycaps and keyboard surface.
- For deeper cleaning, use a can of compressed air to remove dust and debris from between the keys.
- Avoid using harsh chemicals or abrasive materials, as these can damage the keyboard's finish or keycap legends.

Keycap Removal

A keycap puller is included with your keyboard for easy removal of keycaps, allowing for thorough cleaning or customization.

1. Gently place the keycap puller over the keycap you wish to remove.
2. Apply even pressure and pull upwards until the keycap detaches from the switch.
3. To reattach, align the keycap with the switch stem and press down firmly until it clicks into place.

TROUBLESHOOTING

Issue	Solution
Keyboard not responding	<ul style="list-style-type: none"> • Ensure the USB cable is securely connected to both the keyboard and the computer. • Try connecting the keyboard to a different USB port on your computer. • Restart your computer. • Test the keyboard on another computer to rule out system-specific issues.
Backlight not working or inconsistent	<ul style="list-style-type: none"> • Check backlight brightness settings using Fn + [{} and Fn + {}]. • Cycle through different backlight modes using Fn + \ . • Ensure the keyboard is receiving sufficient power from the USB port.
Keys are not registering or double-typing	<ul style="list-style-type: none"> • Clean under the affected keycap using compressed air. • If the issue persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Product Dimensions	11.46 x 3.98 x 1.54 inches (29.1 x 10.1 x 3.9 cm)
Item Weight	1.65 pounds (0.75 kg)
Brand	Ussixchare
Connectivity Technology	USB-A (Wired)
Keyboard Description	Mechanical
Switch Type	Red Switch
Backlight	LED Backlit (Blue, approx. 18 modes)
Compatible Devices	Laptop, PC
Special Feature	Ergonomic
Included Components	Wired mechanical gaming keyboard, keycaps puller



Ergonomic Design

Image: Side profile of the keyboard, showcasing its ergonomic angle and adjustable feet for user comfort.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Ussixchare customer service through the retailer's platform where the product was purchased. Keep your purchase receipt for warranty claims.