

PRETTYCARE V1

PRETTYCARE V1 Cordless Vacuum Cleaner

USER MANUAL

1. Introduction

Thank you for choosing the PRETTYCARE V1 Cordless Vacuum Cleaner. This powerful and versatile vacuum is designed to make your cleaning tasks easier and more efficient. Featuring a 420W brushless motor, 33000Pa strong suction, and a long runtime of up to 55 minutes, it is ideal for various surfaces including hardwood floors and pet hair. The intuitive LED touch screen provides smart control and monitoring. Please read this manual thoroughly before use to ensure proper operation and maintenance.

2. Safety Information

- Always ensure the vacuum cleaner is turned off and unplugged before performing any maintenance or assembly.
- Do not use the vacuum cleaner to pick up water or any other liquids, hot ashes, sharp objects, or flammable/combustible materials.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only the charger provided by the manufacturer to charge the battery.
- Do not operate the vacuum cleaner if it has been dropped, damaged, left outdoors, or dropped into water.
- Regularly check the filters and clean them as recommended to maintain optimal suction and prevent overheating.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. Package Contents

Please check the box for the following components:



PRETTYCARE V1

Cordless Vacuum Cleaner



33KPA



420W



LED Touch

Image: All components included in the PRETTYCARE V1 package.

1. Main Engine
2. Power Adapter
3. Removable Battery (7*2500mAh)
4. 2* Filters (one pre-installed, one spare)
5. Wall Bracket
6. Adjustable Metal Tube
7. Powerful Brush (main floor brush with LED lights)
8. 2-in-1 Brush (combination tool)
9. Crevice Nozzle

4. Product Overview

The PRETTYCARE V1 Cordless Vacuum Cleaner consists of several key components designed for efficient cleaning.



Image: Overview of the PRETTYCARE V1 Cordless Vacuum Cleaner and its main components.

- **Main Unit:** Houses the motor, dustbin, and LED touch screen.
- **Detachable Battery:** Provides power and can be removed for charging.
- **Adjustable Metal Tube:** Connects the main unit to the floor brush or other attachments, allowing for adjustable length.
- **Powerful Brush (Floor Brush):** Equipped with LED lights and an anti-tangle comb for effective cleaning on various floor types.
- **LED Touch Screen:** Displays battery status, suction mode, and troubleshooting alerts.

5. Setup

5.1 Assembly

1. Insert the adjustable metal tube into the main engine until it clicks into place.
2. Attach the powerful brush (floor brush) to the other end of the metal tube until it clicks.

3. Ensure the detachable battery is securely inserted into the main unit.

5.2 Charging the Battery

Before first use, fully charge the battery. The detachable battery allows for flexible charging options.



Image: Detachable battery and charging information.

- Connect the power adapter to the charging port on the main unit or directly to the detachable battery.
- Plug the adapter into a power outlet.
- The LED display will indicate charging status. A full charge typically takes approximately 4 hours.
- Once fully charged, the vacuum can run for up to 55 minutes depending on the suction mode used.

6. Operating Instructions

6.1 Power On/Off

Press the power button on the main unit to turn the vacuum cleaner on or off.

6.2 Adjusting Suction Modes

The PRETTYCARE V1 offers multiple suction levels to suit different cleaning needs.



Image: LED Smart Control Panel showing battery and suction modes.

- Use the touch controls on the LED panel to cycle through the 3 manual suction levels: 15KPa, 25KPa, and 33KPa (Max).

- The LED display will show the current suction mode and remaining battery power.

6.3 Using Attachments

The vacuum comes with various attachments for specialized cleaning tasks.



Image: Various attachments and their uses.

- **Crevice Nozzle:** Ideal for narrow gaps, corners, and hard-to-reach areas.
- **2-in-1 Brush:** Use the brush mode for dusting delicate surfaces like keyboards or curtains, and the flat nozzle for upholstery or car interiors.
- Simply detach the metal tube and attach the desired accessory directly to the main unit for handheld cleaning.

6.4 Flexible Cleaning Design

The floor brush is designed for enhanced maneuverability.

Flexible LED Electric Rotary Floor Brush

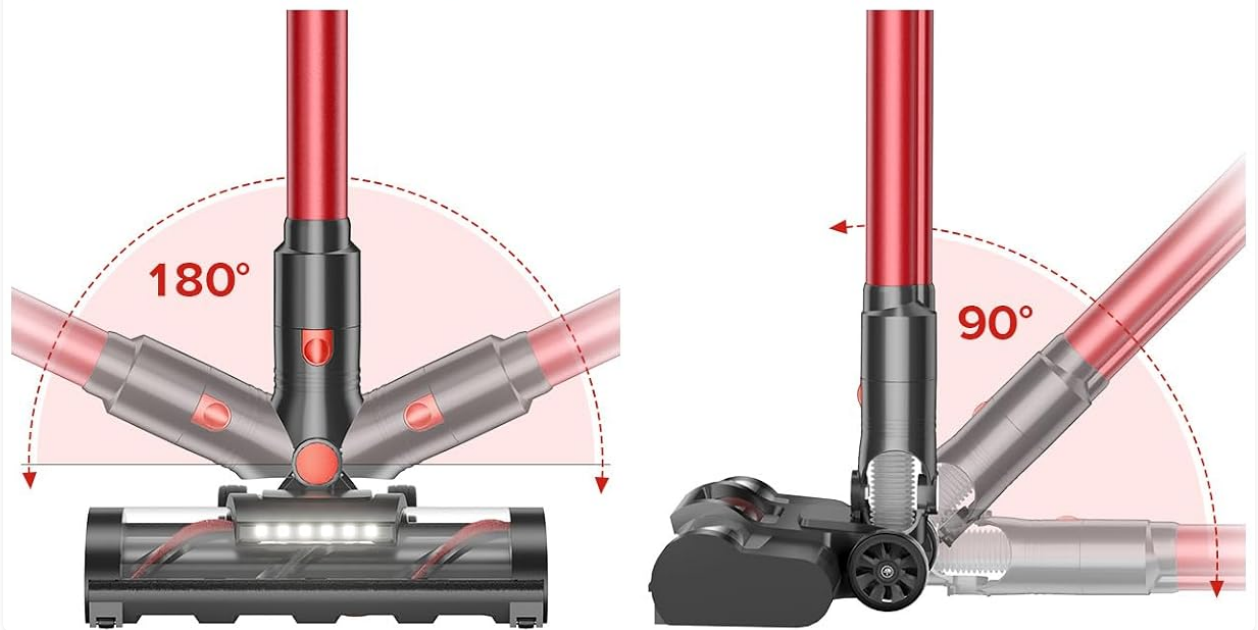


Image: Flexible movement of the floor brush.

- The 270° swivel LED floor nozzle and 180° flexible hose allow you to clean underneath furniture and around obstacles without excessive bending.
- The integrated LED lights illuminate dark areas, ensuring no dust is missed.

6.5 Self-Standing Design

For convenience during cleaning breaks, the vacuum can stand on its own.



Image: Vacuum cleaner in self-standing position.

- When resting, the vacuum cleaner can stand upright on its own, providing temporary storage.
- For long-term storage, use the included wall bracket to mount the vacuum cleaner securely.

7. Maintenance

Regular maintenance ensures the longevity and optimal performance of your vacuum cleaner.

7.1 Emptying the Dustbin

Empty the dustbin regularly to maintain strong suction.

One-Touch Entleerung



Image: One-touch dustbin emptying.

- Press the dustbin release button (indicated by a red arrow in the image) to open the bottom flap and empty debris directly into a trash can.
- For thorough cleaning, the dustbin can be detached and rinsed with water. Ensure it is completely dry before reattaching.

7.2 Cleaning the Filtration System

The 5-stage filtration system captures 99.99% of allergens. Regular cleaning is crucial.

Remove 99.99% of Allergens to 0.1 Microns

5 Stage Filtration System

Sponge Filter

High-Density Filtration System

Dust Separation Technology

Cyclone Centrifugation
Technology

Stainless Steel
Honeycomb Filter



Image: 5-stage filtration system diagram.

- Remove the dustbin and then carefully remove the filter components (Sponge Filter, High-Density Filtration System, Stainless Steel Honeycomb Filter).
- Rinse the filters under running water until clean. Do not use detergent.
- Allow all filter components to air dry completely for at least 24 hours before reassembling. Using wet filters can damage the motor.
- It is recommended to clean or replace the filter regularly to protect your health and extend the life of the brushless motor.

7.3 Cleaning the Brush Roll

The LED electric brush features an anti-tangle comb to minimize hair wrapping.

Intelligent display touch control

Show the Remaining Power and Make the Plan Reasonable



Image: LED electric brush with anti-tangle comb.

- To remove the roller brush, locate the release tab on the side of the brush head and unlock it.
- Carefully pull out the roller brush.
- Remove any tangled hair or debris from the brush roll and the brush head cavity using scissors or a cleaning tool.
- Reinsert the roller brush and secure the release tab.

8. Troubleshooting

If you encounter any issues with your PRETTYCARE V1, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum not turning on	Battery not charged or not properly inserted.	Ensure battery is fully charged and securely clicked into place.
Weak suction power	Dustbin full, filters clogged, or brush roll tangled.	Empty dustbin. Clean or replace filters. Remove tangled hair from brush roll.
LED panel displays an alert	Indicates a blockage in the vacuum cleaner.	Check for blockages in the tube, brush head, or dustbin inlet. Clear any obstructions.
Brush roll not spinning	Brush roll tangled or obstructed.	Turn off the vacuum, remove the brush roll, and clear any obstructions. Reinsert securely.
Short runtime	Battery not fully charged or battery degradation.	Ensure battery is fully charged. If runtime significantly decreases over time, consider replacing the battery.

If the problem persists after trying these solutions, please contact customer support.

9. Specifications

Feature	Specification
Brand	PRETTYCARE
Model	V1
Power/Wattage	420 watts
Suction Power	Up to 33000Pa
Battery Capacity	7*2500mAh (Detachable)
Runtime	Up to 55 minutes
Charging Time	Approx. 4 hours
Dustbin Capacity	1.5 Litres
Filtration System	5-stage, HEPA filter, 99.99% purification rate

Feature	Specification
Noise Level	62 dB
Item Weight	2.85 kg
Special Features	LED Touch Screen, Brushless Motor, Lightweight, Self-supporting Design, Foldable Telescopic Pole, LED Floor Nozzle

10. Warranty and Support

PRETTYCARE is committed to providing high-quality products and excellent customer service.

- For any product-related inquiries, technical support, or warranty claims, please contact our customer service team.
- We offer 7*24 hours timely customer service support to ensure your satisfaction.
- Please retain your proof of purchase for warranty purposes.