

## BGJOY T10

# BGJOY Mini Retro Music Speaker (Model T10) Instruction Manual

## INTRODUCTION

---

This manual provides comprehensive instructions for the operation and maintenance of your BGJOY Mini Retro Music Speaker, Model T10. Please read this manual carefully before using the product to ensure proper function and longevity. Keep this manual for future reference.

## PRODUCT OVERVIEW

---

### Key Features:

- Retro design suitable for office or home decoration.
- Wireless portable speaker for outdoor activities.
- Bluetooth 5.0 for instant wireless connection up to 33 feet.
- Automatic reconnection to the last used device.
- Built-in microphone for clear hands-free calling.
- Clear and loud stereo sound.
- Mini size with magnetic base for attachment to metal surfaces.
- Easy-to-operate retro toggle switch and knob controls.

### What's in the Box:

- BGJOY Mini Retro Music Speaker (Model T10)
- USB Charging Cable

## PRODUCT COMPONENTS

---

Familiarize yourself with the speaker's controls and features.

## Retro Buttons Classic Design



*Image: Front and side view of the BGJOY Mini Retro Music Speaker, highlighting the speaker grille and control knobs.*



Pause/play, mode switch,  
hands-free call



Rotate to start/off,  
adjust the volume



Magnet



Last song



Next song



Power, TF card socket

*Image: Diagram illustrating the functions of the speaker's buttons and knobs, including Pause/Play, Mode Switch, Hands-free Call, Rotate to start/off/adjust volume, Last song, Next song, Power, TF card socket, and Magnet.*

## SETUP

### Charging the Speaker:

1. Connect the provided USB charging cable to the charging port on the speaker.
2. Connect the other end of the USB cable to a compatible USB power adapter (5V-1A/2A) or a computer's USB port.
3. The charging indicator light will illuminate during charging.
4. A full charge takes approximately 2 hours. The indicator light will change or turn off once charging is complete.

Ensure the speaker is fully charged before first use for optimal battery life.

### Powering On/Off:

- To power on, rotate the volume knob clockwise until you hear an audible indication.
- To power off, rotate the volume knob counter-clockwise until you hear an audible indication or the power indicator light turns off.

## OPERATING INSTRUCTIONS

### Bluetooth Pairing:

1. Ensure the speaker is powered on. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED light.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "T10" from the list of available devices to pair.
4. Once successfully paired, you will hear an audible confirmation, and the LED light will stop flashing and remain solid.
5. The speaker will automatically reconnect to the last paired device when powered on, if the device's Bluetooth is active and within range.

Your browser does not support the video tag.

*Video: Demonstrates the quick Bluetooth connection process for the BGJOY Mini Retro Music Speaker.*

### Music Playback:

- **Play/Pause:** Press the **Play/Pause/Mode** button once to play or pause music.
- **Volume Control:** Rotate the volume knob to adjust the playback volume.
- **Next Track:** Press the **Next Song** button to skip to the next track.
- **Previous Track:** Press the **Last Song** button to go to the previous track.

Your browser does not support the video tag.

*Video: Shows the speaker playing music and demonstrating track switching and volume adjustment.*

### Hands-Free Calling:

- When a call comes in, the music will pause. Press the **Play/Pause/Mode** button to answer the call.
- To end a call, press the **Play/Pause/Mode** button again.
- To reject an incoming call, press and hold the **Play/Pause/Mode** button.

### TF Card Playback:

- Insert a TF (MicroSD) card with MP3 audio files into the TF card socket.
- The speaker will automatically switch to TF card mode and begin playing music.
- Use the **Play/Pause/Mode**, **Next Song**, and **Last Song** buttons, and the volume knob for control.

### Magnetic Adhesion:

The speaker features a magnetic base, allowing it to be attached to metal surfaces like refrigerators or magnetic boards. Ensure the surface is clean and dry for optimal adhesion.



# Crisp Sound Music for kitchen

*Image: The speaker attached to a refrigerator, demonstrating its magnetic feature.*

## MAINTENANCE

- Keep the speaker dry. Do not expose it to water or excessive moisture.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid extreme temperatures. Store the speaker in a cool, dry place.
- Do not disassemble the speaker. This will void the warranty and may cause damage.
- Charge the speaker regularly, even if not in use, to maintain battery health.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker using the provided USB cable.
Cannot pair via Bluetooth.	Bluetooth is off on your device or speaker is not in pairing mode. Device is out of range.	Ensure Bluetooth is enabled on your device and the speaker. Move device closer to the speaker (within 33 feet). Restart both devices.

Problem	Possible Cause	Solution
No sound or low volume.	Volume too low on speaker or connected device. Speaker is paused.	Increase volume on both the speaker and your connected device. Press the Play/Pause button to ensure music is playing.
Sound distortion.	Volume too high. Device too far from speaker.	Reduce volume on both the speaker and your connected device. Move device closer to the speaker.
TF card not playing.	TF card not inserted correctly or unsupported file format.	Reinsert the TF card. Ensure audio files are in a supported format (e.g., MP3).

## SPECIFICATIONS

Feature	Detail
Model Name	T10
Brand	BGJOY
Connectivity Technology	Wireless (Bluetooth)
Wireless Communication Technology	Bluetooth
Bluetooth Range	10 Meters (33 Feet)
Speaker Type	Outdoor
Special Feature	Portable
Material	Metal
Product Dimensions	2.87"D x 1.37"W x 2.2"H
Item Weight	0.26 Kilograms (9.1 ounces)
Power Source	Battery Powered
Battery Type	1 Lithium Ion battery (included)
Battery Capacity	500 Milliamp Hours
Input Voltage	3.7 Volts
Charging Time	2 Hours
Speaker Maximum Output Power	3 Watts
Frequency Response	280 Hz
Signal-to-Noise Ratio	85 dB
Audio Output Mode	Stereo
Is Waterproof	FALSE

## WARRANTY AND SUPPORT

---

This product comes with a Limited Warranty. For specific details regarding warranty coverage and claims, please refer to the product packaging or contact the manufacturer directly.

For technical support or further assistance, please refer to the contact information provided with your purchase or on the manufacturer's official website.