

[Manuals.plus](#) /

› [WaLDor](#) /

› XDOBO Xiduobao X5 Outdoor Portable Waterproof Bluetooth Speaker and Subwoofer User Manual

WaLDor X5

XDOBO Xiduobao X5 Outdoor Portable Waterproof Bluetooth Speaker User Manual

Model: X5 (Xiduobao) | Brand: WaLDor

INTRODUCTION

Thank you for purchasing the XDOBO Xiduobao X5 Outdoor Portable Waterproof Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. Please read this manual thoroughly before use and retain it for future reference.



Front view of the XDOBO Xiduobao X5 Portable Bluetooth Speaker, showcasing its sleek, rectangular design and front grille.


SETUP

1. Unboxing

Carefully remove all components from the packaging. Ensure you have the XDOBO X5 speaker, a charging cable, and this user manual. Inspect the speaker for any signs of damage.

2. Charging the Speaker

Before first use, fully charge the speaker. Connect the provided charging cable to the speaker's charging port and the other end to a compatible USB power source (e.g., wall adapter, computer USB port). The charging indicator light will illuminate during charging and turn off or change color when fully charged. A full charge provides up to 10 hours of playback time.

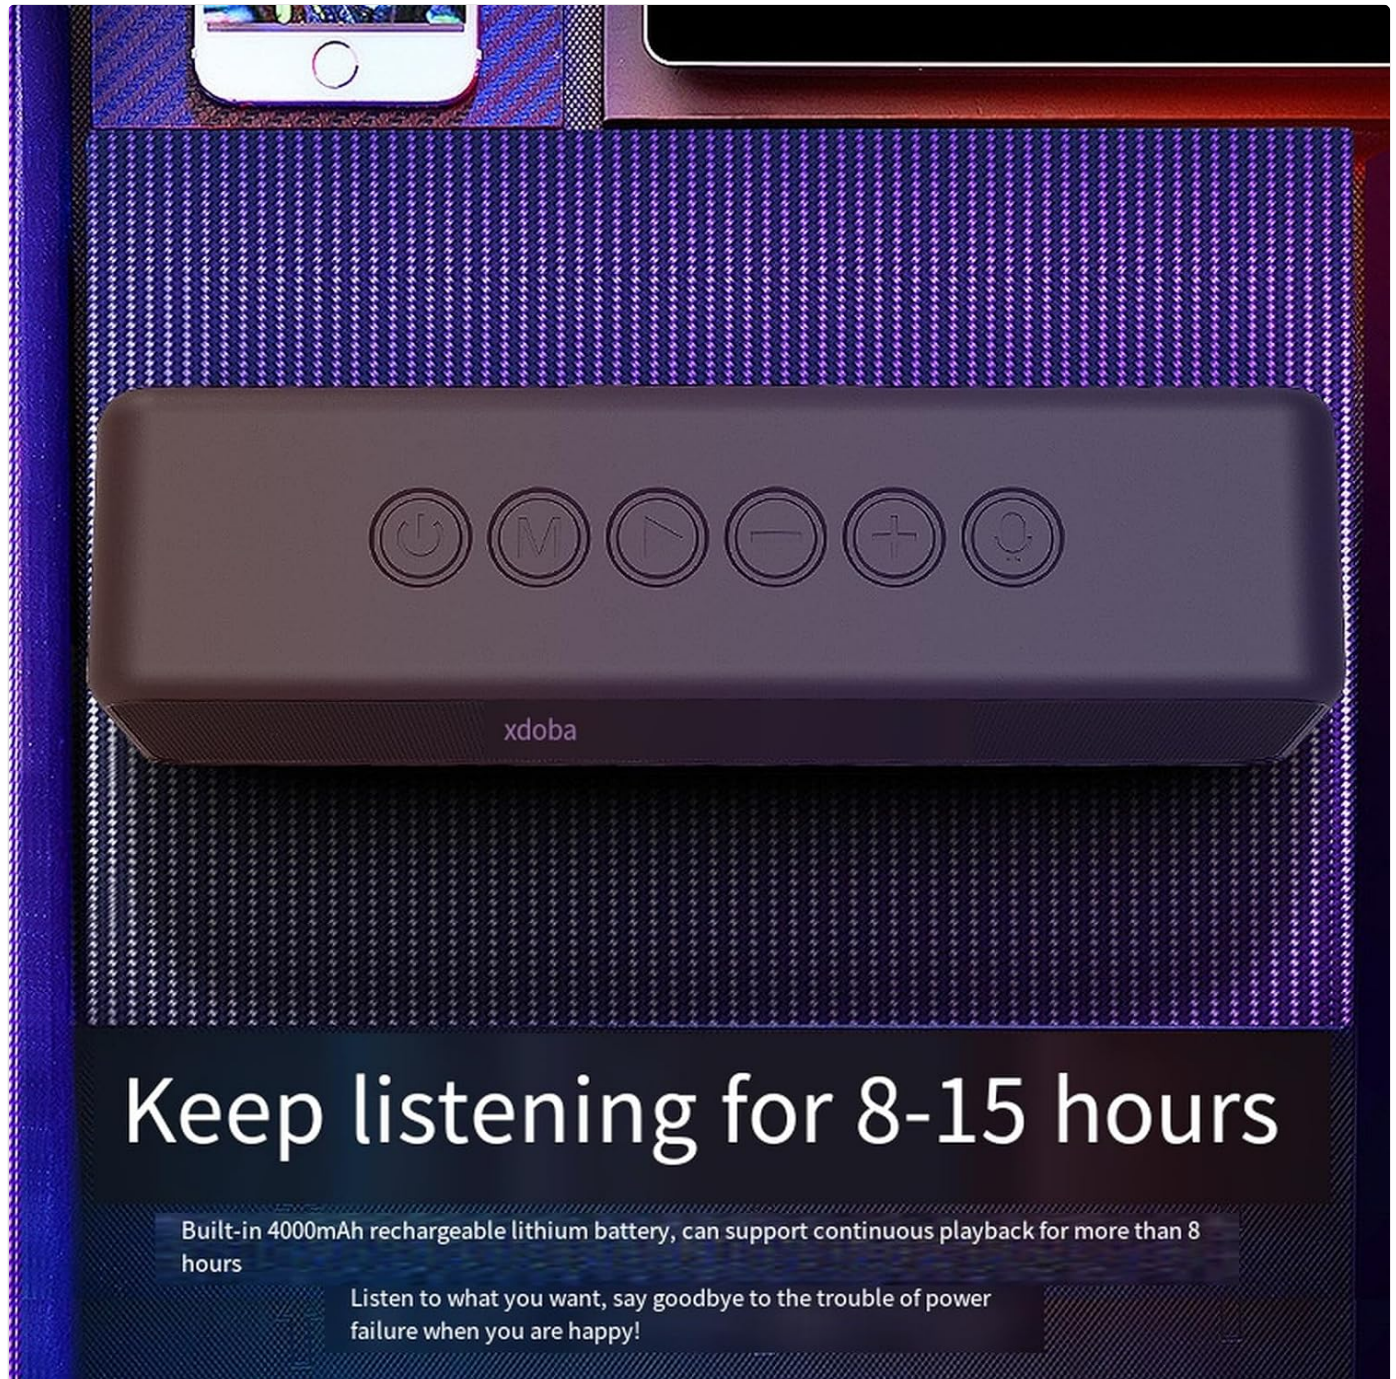

The XDOBO X5 speaker, illustrating its long battery life of 8-15 hours, powered by a built-in 4000mAh rechargeable lithium battery.

3. Power On/Off

To power on, press and hold the Power button (usually marked with a power symbol) located on the top panel until you hear an audible prompt or see an indicator light. To power off, press and hold the Power button again until the speaker shuts down.

OPERATING INSTRUCTIONS

1. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth pairing mode (indicated by a flashing LED). If not, briefly press the Bluetooth button (often marked with a Bluetooth symbol).
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "XDOBO X5" or a similar name from the list of found devices.
4. Once paired, the speaker will provide an audible confirmation, and the Bluetooth indicator light will become solid.

2. Controls

The XDOBO X5 features intuitive button controls on its top panel:

- **Power Button:** Press and hold to power on/off.
- **Mode Button (M):** Press to switch between input modes (e.g., Bluetooth, AUX, TF card, if supported).
- **Play/Pause Button:** Press to play or pause audio.
- **Volume Up (+):** Press to increase volume. Press and hold for next track.
- **Volume Down (-):** Press to decrease volume. Press and hold for previous track.
- **Call Button:** Press to answer/end calls (when connected to a phone). Press and hold to reject calls.

30W high power subwoofer

DSP Sound processing Bluetooth 5.0

9:41 Monday,
March 21



Top view of the XDOBO X5 speaker, clearly showing the control buttons for power, mode, playback, volume, and call management. This model features DSP Sound processing and Bluetooth 5.0.

3. Audio Playback

Once paired via Bluetooth, your device's audio will automatically play through the speaker. Use the speaker's volume buttons or your device's volume controls to adjust the sound level. The speaker delivers powerful and clear sound quality with deep bass and crisp treble.

30W high power subwoofer

Treble transparent midrange sweet bass deep

IPX6 waterproof is not afraid of wading music non-stop carnival



The XDOBO X5 speaker positioned on sand, emphasizing its 30W high-power subwoofer and IPX6 waterproof rating, making it suitable for outdoor use.

A gorgeous collision of technology and aesthetics

Slim body with 30W loudspeaker

30W loudspeaker

Bluetooth 5.0

15 hours playback time



The XDOBO X5 speaker, showcasing its slim body, 30W loudspeaker, Bluetooth 5.0 connectivity, and an impressive 15 hours of playback time.

4. Hands-Free Calling

With its built-in microphone, the speaker supports hands-free calling when connected to your smartphone. Press the Call button to answer an incoming call, and press it again to end the call. Press and hold to reject an incoming call.

5. Waterproof Usage

The XDOBO X5 speaker is designed with a waterproof structure (IPX6 rated), making it resistant to splashing water, rain, and accidental immersion. It is suitable for use by the pool, at the beach, or in the shower. However, avoid prolonged submersion or exposure to high-pressure water jets.

MAINTENANCE

1. Cleaning

Wipe the speaker with a soft, damp cloth. Do not use abrasive cleaners, alcohol, or chemical solvents, as these may damage the

surface or internal components. Ensure the charging port cover is securely closed before cleaning with water.

2. Storage

Store the speaker in a cool, dry place away from direct sunlight, extreme temperatures, and excessive humidity. If storing for an extended period, charge the battery to approximately 50% every few months to maintain battery health.

3. Water Resistance Care

To maintain the speaker's waterproof integrity, ensure the charging port cover is always firmly sealed when not charging. Do not expose the speaker to saltwater or chlorinated water for extended periods. If exposed, rinse with fresh water and dry thoroughly before charging.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker fully.
Cannot pair with Bluetooth device.	Speaker not in pairing mode; device Bluetooth off; too far apart.	Ensure speaker is in pairing mode. Turn device Bluetooth off/on. Move devices closer. Forget device on phone and re-pair.
No sound or low volume.	Volume too low on speaker or device; incorrect input mode.	Increase volume on both speaker and device. Press 'M' button to cycle modes.
Sound distortion.	Volume too high; low battery; interference.	Reduce volume. Charge speaker. Move away from other electronic devices.

SPECIFICATIONS

- Model Name: Xiduobao X5
- Brand: WaLDor
- Connectivity Technology: Bluetooth
- Special Features: Wireless, Bluetooth, Waterproof (IPX6)
- Compatible Devices: Laptop, Tablet, Smartphone
- Controller Type: Button
- Speaker Type: Subwoofer, Outdoor
- Battery Life: Up to 10 hours (continuous playback)
- Manufacturer: WaLDor
- ASIN: B0CQLRWD71

WARRANTY AND SUPPORT

This product is manufactured by WaLDor. For warranty information, technical support, or service inquiries, please refer to the contact information provided with your purchase documentation or visit the official WaLDor website. Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question