

[Manuals.plus](#) /

› [BLAUPUNKT](#) /

› Blaupunkt CyberSound G2 Series 43-inch Full HD LED Smart Android TV (Model 43CSG7105) User Manual

BLAUPUNKT 43CSG7105

Blaupunkt CyberSound G2 Series 43-inch Full HD LED Smart Android TV (Model 43CSG7105) User Manual

Model: 43CSG7105

INTRODUCTION

This manual provides essential information for the setup, operation, maintenance, and troubleshooting of your Blaupunkt CyberSound G2 Series 43-inch Full HD LED Smart Android TV. Please read this manual thoroughly before using your television to ensure proper and safe operation.

 
WHAT'S IN THE BOX

Carefully unpack the box and ensure all the following items are present:

- 1N LED TV
- 1N Remote Control
- 1N User Manual (this document)
- 2N AAA Batteries (for remote)
- 1N Wall Mounting Bracket (Fixed)
- Base Stands (2 units)
- Stand Screws (4 units)
- Power Cord




IN THE BOX

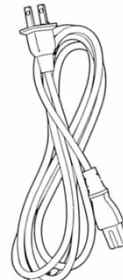


Power
Cord



 Base Stand

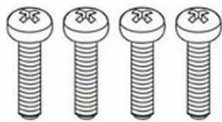

Stand Screw x 4

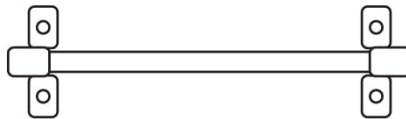 

Wall Mount



REMOTE WITH
2 AAA BATTERIES

Wall Mount & Stand Options

(Provided Free During The Installation Process)

32"–65"
Fixed Wall Mount Bracket

Image: Contents of the TV packaging, showing the television, remote control, power cord, base stands, stand screws, and wall mount bracket.

SETUP

1. Attaching the Stand or Wall Mounting

You can either place the TV on a flat surface using the provided base stands or mount it on a wall. Ensure the TV is placed on a stable surface or securely mounted to prevent accidental falls.

1. For Stand Installation:

- Carefully place the TV face down on a soft, clean surface to prevent screen damage.
- Align the base stands with the corresponding screw holes on the bottom of the TV.
- Secure each stand with the provided screws.

10000+ APPS & GAMES



Image: Front view of the Blaupunkt TV with its base stands installed.

2. For Wall Mounting:

- Refer to the instructions provided with the wall mounting bracket.
- Ensure the wall can support the weight of the TV and the mount.
- The VESA mount standard for this TV is 200 x 200 mm.

2. Connecting Peripherals

Connect your external devices to the TV using the available ports.



48 Watt
Speakers



android 11



 
1 GB RAM




Dual Band
Wi-Fi



3 HDMI
+
2 USB

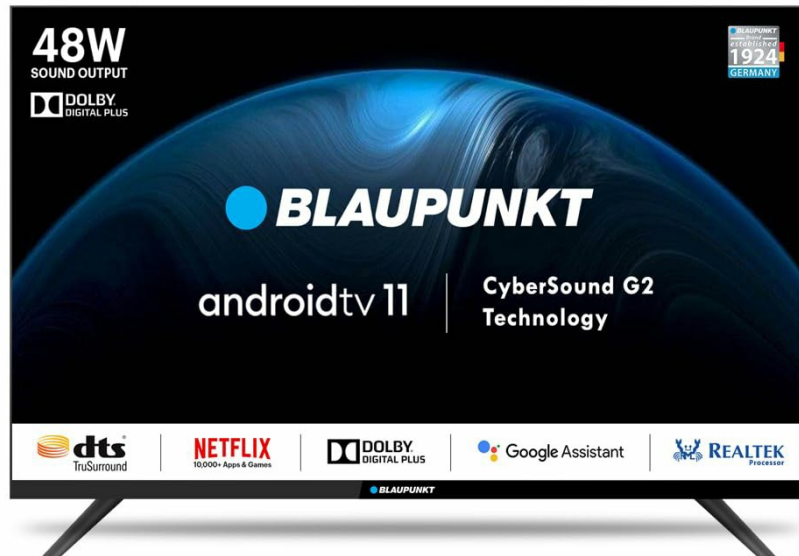

10000+ Apps
& Games

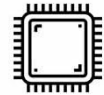 

Cortex A53
Processor



Google Assistant



BEZEL-LESS DESIGN



Image: Back panel of the TV displaying HDMI, USB, and other connectivity ports.

- **HDMI:** Connect gaming consoles, set-top boxes, or Blu-ray players to the 3 HDMI ports.
- **USB:** Connect hard drives or other USB devices to the 2 USB ports.
- **Ethernet:** For a wired internet connection.
- **Power:** Connect the power cord to the TV and then to a power outlet.

3. Initial Power-On and Setup

After connecting all necessary cables, plug the TV into a power source and press the power button on the remote control or TV. Follow the on-screen instructions for initial setup, including language selection, network connection, and Google account login.

OPERATING THE TV

Remote Control Functions

The provided remote control allows you to navigate the TV's features. Insert the two AAA batteries into the remote, ensuring correct polarity.



Image: The TV remote control, highlighting buttons for power, home, back, navigation, volume, Google Assistant, Netflix, Prime Video, YouTube, and Google Play.

- **Power Button:** Turns the TV on or off.
- **Navigation Pad (OK button):** Used to navigate menus and confirm selections.
- **Volume Buttons (+/-):** Adjusts the volume level.
- **Google Assistant Button:** Activates voice control for commands and searches.
- **Dedicated App Buttons:** Quick access to Netflix, Prime Video, YouTube, and Google Play.
- **Home Button:** Returns to the main Android TV home screen.
- **Back Button:** Returns to the previous screen or menu.

Smart TV Features (Android 11 OS)

Your TV runs on Android 11 OS, providing access to a wide range of smart features:

- **In-Built Wi-Fi:** Connect to your home wireless network for internet access.
- **Screen Mirroring:** Cast content from your mobile devices to the TV.
- **Supported Apps:** Access popular streaming services like Netflix, Prime Video, YouTube, Disney+Hotstar, Apple TV, and more.

- **Google Assistant:** Use voice commands for hands-free control, search, and information.
- **Chromecast Built-in:** Stream content directly from compatible apps on your phone or tablet.



Image: An astronaut holding the TV remote, demonstrating voice command functionality with Google Assistant.



Image: A visual representation of the TV's seamless connectivity, showing content mirrored from a laptop and a smartphone to the television screen.

Display and Audio Settings

Access the TV settings menu to customize your viewing and listening experience.

- **Picture Modes:** Adjust brightness, contrast, color, and sharpness.
- **Sound Modes:** Select from various audio presets or customize equalizer settings. The TV features 48 Watts output with Dolby Digital Plus and DTS TruSurround for enhanced audio.

MAINTENANCE

Cleaning the TV

- Always unplug the TV before cleaning.
- Use a soft, dry, lint-free cloth to gently wipe the screen and cabinet.
- For stubborn marks, lightly dampen the cloth with water or a mild, non-abrasive screen cleaner. Do not spray cleaner directly onto the screen.
- Avoid using harsh chemicals, abrasive pads, or solvents as they can damage the TV's surface.

Software Updates

Your Android TV may receive software updates periodically. It is recommended to keep your TV connected to the internet to receive these updates, which can improve performance and add new features. You can usually check for updates in the TV's settings menu.

TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common solutions before contacting support.

Problem	Possible Solution
No Power	Ensure the power cord is securely plugged into both the TV and a working power outlet. Check if the power outlet is active.
No Picture, but Sound is Present	Check the input source. Ensure the connected device (e.g., set-top box) is powered on and functioning correctly. Try a different HDMI cable.
No Sound, but Picture is Present	Check the volume level and ensure the TV is not muted. Verify audio settings and external audio device connections if applicable.
Remote Control Not Responding	Replace the batteries in the remote control. Ensure there are no obstructions between the remote and the TV's IR sensor.
Cannot Connect to Wi-Fi	Ensure your Wi-Fi router is on and working. Re-enter the Wi-Fi password. Try restarting both the TV and the router.
Picture Quality Issues (e.g., Mura, light bleeding)	Minor light bleeding and Mura issues on certain grey scales are considered acceptable as per industry standards and are not covered under warranty as panel defects.

SPECIFICATIONS

Feature	Detail
Model Name	CyberSound G2
Model Number	43CSG7105
Screen Size	43 Inches (108 cm)
Display Technology	LED
Resolution	Full HD (1920 x 1080)
Refresh Rate	60 Hz
Sound Output	48 Watts
Audio Technology	Dolby Digital Plus, DTS TruSurround
Operating System	Android 11 OS
Connectivity	Dual Band Wi-Fi, 3 HDMI ports, 2 USB ports, Ethernet, Bluetooth
Special Features	Google Assistant, Chromecast built-in, Screen Mirroring, 10000+ Apps & Games

Feature	Detail
Memory Storage Capacity	8 GB
Power Consumption	150 Watts
Annual Energy Consumption	65 kWh
Product Dimensions (D x W x H)	12D x 97W x 57H Centimeters
VESA Mount Standard	200 x 200 mm



Image: Dimensional drawing of the 43-inch TV, indicating width, height, and depth measurements.

WARRANTY AND SUPPORT

Warranty Information

This product comes with a **1-year warranty** on the product and **6 months on remote accessories**, provided by the manufacturer from the date of purchase. To avail warranty service, please retain your purchase invoice.

Warranty Exclusions: Light bleeding and dot issues (Mura issues) occurring on a certain Grey scale are considered acceptable as per the Mura Inspection standard and are not considered a panel defect. As per ND (Neutral Density) Filter 2% guideline, these are not covered.

Customer Support

For assistance, technical support, or warranty claims, please contact Blaupunkt customer care:

- **Toll-Free Number:** 1800-274-4342

- **Email ID:** consumercare@blaupunkttv.in

- When contacting support, please provide the product's model name (43CSG7105) and seller's details mentioned on your invoice.

Manufacturer/Packer/Importer Address: B-29,30,31, Phase-II, Noida, Gautam Buddha Nagar, Uttar Pradesh, 201301, India.