



[Manuals.plus](#) /

> [USX MOUNT](#) /

> USX MOUNT Universal Full Motion TV Wall Mount for 10-26 Inch Displays Instruction Manual

USX MOUNT USX-WM1026

USX MOUNT Universal Full Motion TV Wall Mount

Model: USX-WM1026

1. INTRODUCTION

Thank you for choosing the USX MOUNT Universal Full Motion TV Wall Mount. This manual provides detailed instructions for safe installation, operation, and maintenance of your new wall mount. Please read this manual thoroughly before installation and keep it for future reference.

This mount is designed to securely hold 10-26 inch displays with a maximum weight of 10kg (22 lbs). It supports VESA mounting patterns of 50x50mm, 75x75mm, and 100x100mm.



Figure 1.1: USX MOUNT Universal Full Motion TV Wall Mount

2. PRODUCT SPECIFICATIONS


Feature	Specification
Model	USX-WM1026
Screen Size Compatibility	10 - 26 inches
Maximum Load Capacity	10 kg (22 lbs)
VESA Compatibility	50x50mm, 75x75mm, 100x100mm
Tilt Angle	+30° / -30°
Swivel Angle (Wall Plate)	±45° (depending on TV size)

Wall Distance	62mm
Material	Cold-rolled Steel
Color	Black

Note: Always verify your TV's weight, screen size, and VESA pattern before installation to ensure compatibility.

確認してください...

対応サイズ

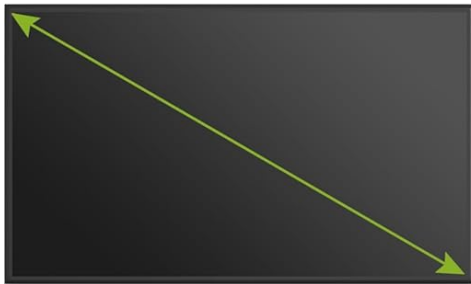

10"-26"

VESA規格



50x50mm-100x100mm

耐荷重



10kg

壁の種類



木製間柱
コンクリートの壁

※ご注意※必ずコンクリートの壁か、もしくは壁の内部に木製の芯材がある場所に取り付けてください。

Figure 2.1: Compatibility Check for TV Size, VESA, Weight, and Wall Type



Figure 2.2: Supported VESA Mounting Patterns

3. SAFETY INFORMATION

Please read and understand all instructions before installation. If you have any questions, contact customer support. Improper installation may result in property damage or personal injury.

- Do not install this product on drywall or plasterboard alone. It must be mounted to a solid concrete wall or a wooden stud.
- Ensure the wall structure can safely support the combined weight of the mount and your display.
- Do not exceed the maximum load capacity of 10kg (22 lbs).
- Use only the provided hardware. If any parts are missing or damaged, contact customer support.
- Always have two people for installation, especially when lifting the TV.
- Keep children and pets away during installation.

4. PACKAGE CONTENTS

Verify that all components are present and undamaged before proceeding with installation. If any parts are missing or defective, please contact USX MOUNT customer service.

The package typically includes:

- Wall Plate Assembly
- TV Bracket
- Mounting Hardware (screws, anchors, washers for various TV and wall types)
- Instruction Manual

5. INSTALLATION GUIDE

Follow these steps carefully for a secure installation.


5.1. Choose Your Wall Type

This mount is suitable for installation on solid concrete walls or wooden studs. **Do NOT install on drywall or plasterboard without securing to a stud.**


対応可能な壁型



ボルト + アンカー

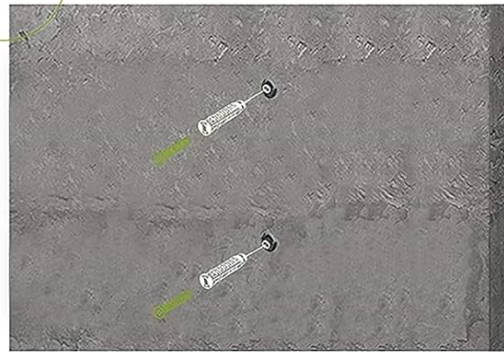

コンクリートの壁

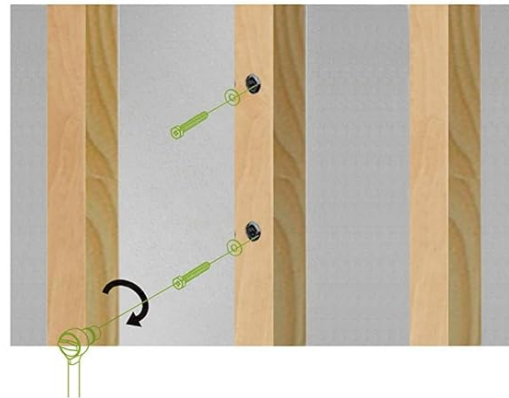

ボルト

※ご注意：乾式壁・石膏ボードのみへの設置はお止めください！

Figure 5.1: Compatible Wall Types

5.2. Step-by-Step Installation

- 1. Attach the Wall Plate:** Position the wall plate on your chosen wall location. Mark the drilling points. Drill pilot holes and secure the wall plate using appropriate screws and anchors for your wall type. Ensure it is level and firmly attached.
- 2. Attach TV Bracket to TV:** Secure the TV bracket to the back of your television using the provided VESA screws and washers that match your TV's VESA pattern. Ensure the bracket is centered and tightened securely.
- 3. Hang TV on Wall Plate:** Carefully lift the TV (with the bracket attached) and hook it onto the wall plate. Ensure the TV is properly seated and locked into place.
- 4. Adjust Angle:** Adjust the TV to your desired viewing angle using the tilt and swivel mechanisms.



Figure 5.2: Simplified Installation Steps

6. OPERATION AND ADJUSTMENTS

This full motion mount allows for flexible positioning of your display.

6.1. Tilt Adjustment

The TV bracket allows for a tilt range of +30 degrees upward and -30 degrees downward. Loosen the tilt adjustment knobs on the side of the TV bracket, set the desired angle, and then tighten the knobs to secure the position.

6.2. Swivel Adjustment

The wall-side attachment allows for a swivel of up to 45 degrees left or right. The actual range of motion may vary depending on the size of your television. Gently push the TV to the desired left or right angle.



Figure 6.1: Tilt Adjustment and Wall Distance

7. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your TV wall mount.

- **Periodically Check:** Every few months, check that all screws and connections are tight and secure.
- **Cleaning:** Wipe the mount with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Lubrication:** The moving parts are designed for smooth operation and generally do not require lubrication. If movement becomes stiff, contact customer support.

8. TROUBLESHOOTING

If you encounter any issues, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
TV is not level	Wall plate or TV bracket not installed level.	Carefully adjust the wall plate or TV bracket. Ensure all screws are tightened after adjustment.
Mount feels unstable	Screws are loose or incorrect wall anchors used.	Re-check all mounting screws for tightness. Ensure appropriate anchors were used for your wall type. Do not exceed weight capacity.
Difficulty adjusting tilt/swivel	Adjustment knobs are too tight or mechanism is stiff.	Loosen adjustment knobs slightly before attempting to move. If still stiff, contact customer support.

For issues not listed here, or if problems persist, please contact USX MOUNT customer support.

9. WARRANTY AND SUPPORT

USX MOUNT provides a **10-year quality warranty** from the date of purchase for this product. This warranty covers manufacturing defects and ensures the product is free from defects in material and workmanship under normal use.

For warranty claims, technical support, or any questions regarding your USX MOUNT product, please contact our customer service team. Please have your purchase information and model number (USX-WM1026) ready when contacting support.