

## Smoby 810917

# Smoby 810917 Electronic Doorbell Instruction Manual

Model: 810917 | Brand: Smoby

Enhance your Smoby playhouse experience with this realistic electronic doorbell.

## 1. INTRODUCTION

The Smoby 810917 Electronic Doorbell is designed to add a realistic touch to compatible Smoby playhouses. This accessory features authentic ringing sounds, enhancing imaginative play for children aged 2 years and above.

### Key Features:

- **Increased Realism:** Specifically designed for Smoby homes to provide an immersive play experience.
- **Authentic Ringing Noise:** Features a real ringing sound, allowing children to hear "visitors" and enriching role-playing games.
- **Easy to Use:** Simple setup for immediate integration into play.
- **Smoby Houses Compatible:** Guaranteed to fit seamlessly with any Smoby playhouse structure.
- **Age Suitability:** Recommended for toddlers aged 2 years and up, promoting creative development and social interaction.

## 2. SAFETY INFORMATION

- **Minimum Age:** Suitable for children aged 24 months and older.
- **Battery Safety:** Ensure batteries are inserted correctly with the correct polarity. Do not mix old and new batteries, or different types of batteries. Remove exhausted batteries promptly.
- **Adult Supervision:** Adult supervision is recommended during installation and initial use.

## 3. WHAT'S IN THE BOX

- 1 x Smoby Electronic Doorbell

*Note: 2 x AAA (LR03) batteries are required and not included.*

## 4. SETUP AND INSTALLATION

### 4.1 Battery Installation

1. Locate the battery compartment on the back of the doorbell unit.
2. Using a small screwdriver (not included), open the battery compartment cover.
3. Insert 2 x AAA (LR03) batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

#### 4.2 Attaching to a Smoby Playhouse

The doorbell is designed for easy attachment to compatible Smoby playhouses. Specific mounting instructions may vary slightly depending on the playhouse model. Generally, the doorbell can be affixed using screws or adhesive pads (not included, check playhouse instructions for recommended method).



*Image: A child's hand interacting with the Smoby Electronic Doorbell, which is securely mounted on the side of a playhouse.*

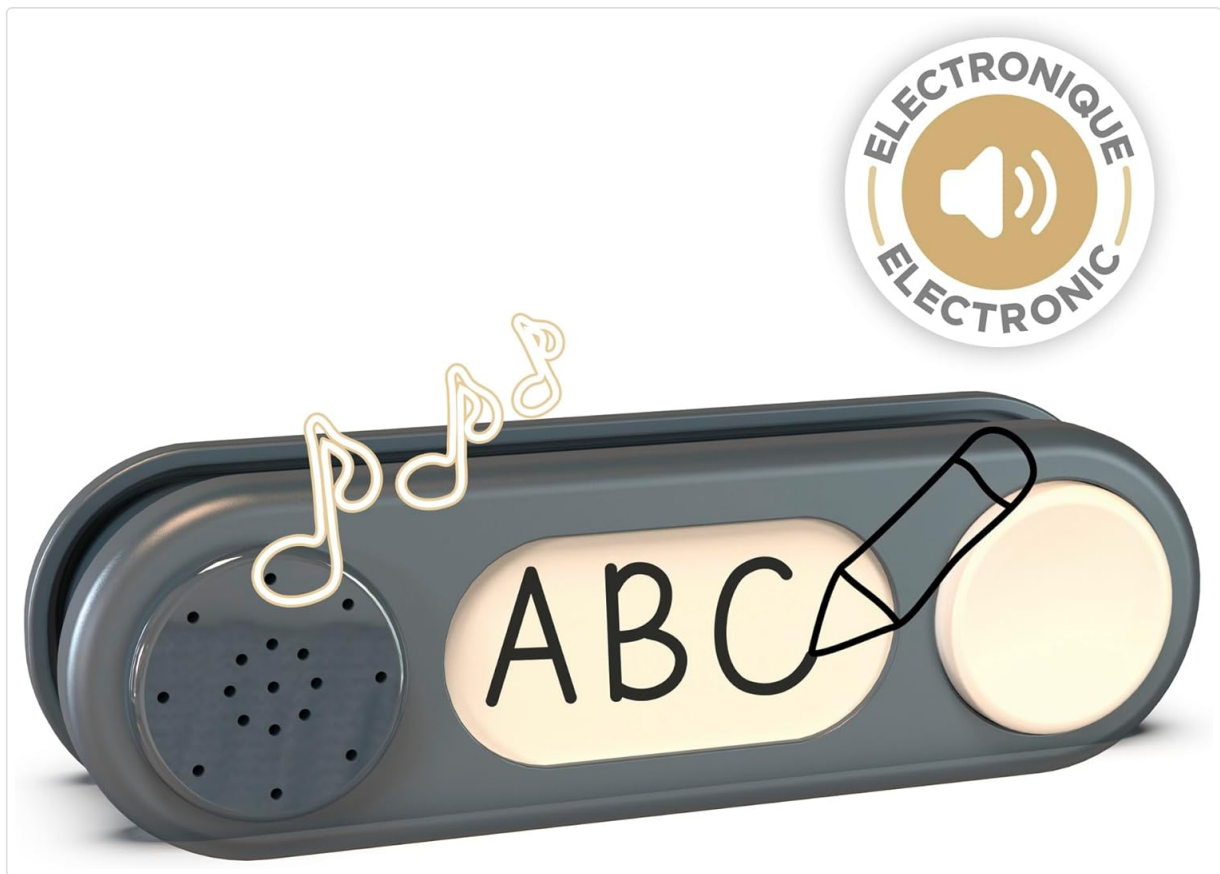 


Image: A close-up front view of the Smoby Electronic Doorbell, highlighting its grey casing and prominent white push button.

## 5. OPERATING INSTRUCTIONS

To activate the doorbell sound, simply press the large white button on the unit. The doorbell will emit a realistic ringing sound.

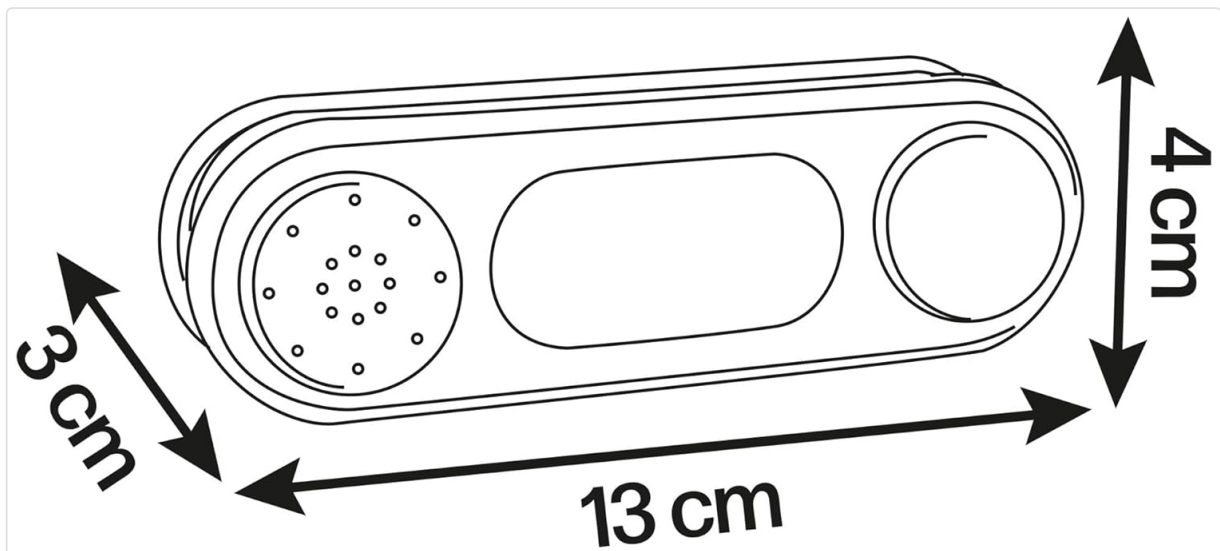 


Image: The Smoby Electronic Doorbell featuring decorative musical notes and 'ABC' text, symbolizing its sound capabilities.

## 6. MAINTENANCE

- Clean the doorbell unit with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Ensure the battery compartment remains dry and free from moisture.
- If the doorbell is not used for an extended period, remove the batteries to prevent leakage.

7. TROUBLESHOOTING

7.1 No Sound

- Check if the batteries are correctly installed with the proper polarity.
- Replace the batteries with new AAA (LR03) batteries.
- Ensure the button is pressed firmly.

7.2 Sound is Distorted or Weak

- Replace the batteries with new AAA (LR03) batteries.
- Ensure the speaker area is not obstructed.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions	5.51 x 1.97 x 1.57 inches
Item Weight	2.82 ounces
Item Model Number	7600810917
Manufacturer Recommended Age	24 months - 10 years
Batteries Required	2 AAA batteries (not included)
Manufacturer	SMOBY

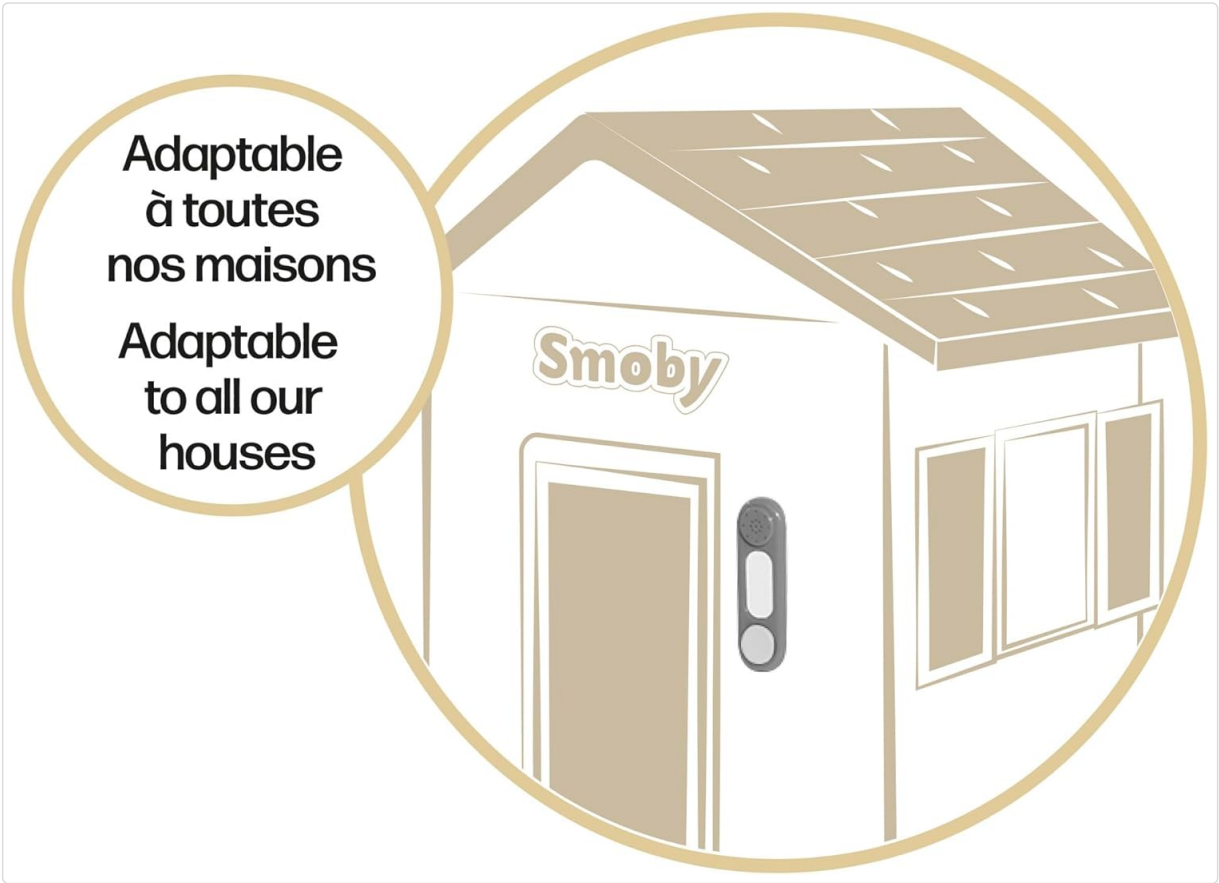 

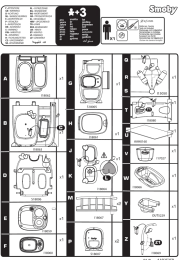 

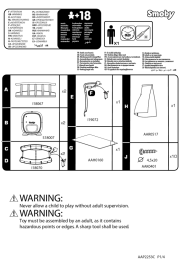 

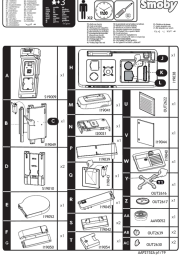 


Image: A side profile of the Smoby Electronic Doorbell, illustrating its compact design.

Related Documents - 810917

	<p><a href="#">Smoby Baby Nurse Toilet Assembly Instructions and Safety Guide</a></p> <p>Comprehensive assembly instructions and safety warnings for the Smoby Baby Nurse Toilet toy. Learn how to assemble the play toilet with clear steps and component identification.</p>
	<p><a href="#">Smoby Baby Nurse Large Doll's Play Centre Assembly Instructions</a></p> <p>Detailed step-by-step assembly guide for the Smoby Baby Nurse Large Doll's Play Centre, including part identification and safety warnings. This manual helps users assemble the toy safely and correctly.</p>
	<p><a href="#">Smoby Playhouse Accessories &amp; Configuration Guide - Floor Slabs and Modular Sets</a></p> <p>Explore Smoby's range of playhouses and discover how to configure them using modular floor slabs (Ref 810907) and various accessory sets. Find the right combination for your Smoby garden house.</p>
	<p><a href="#">Smoby Bercelonnette Assembly Instructions and Safety Guide</a></p> <p>Detailed assembly instructions and safety information for the Smoby Bercelonnette toy. Includes part identification, step-by-step assembly guides, and important warnings for safe use.</p>
	<p><a href="#">Smoby Pushchair + Pram Assembly Instructions</a></p> <p>Step-by-step guide for assembling the Smoby Pushchair + Pram (Model 03291X0/15). Includes important safety information, part identification, and assembly procedures.</p>
	<p><a href="#">Smoby 7600312303 Chef's Kitchen 2-in-1 with Dining Area User Manual</a></p> <p>Comprehensive user manual for the Smoby 7600312303 Chef's Kitchen 2-in-1 with Dining Area. This guide provides detailed assembly instructions, safety warnings, and usage information for this children's play kitchen.</p>