

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [GOBOULT](#) /

› [GOBOULT Y1 Wireless Ear Buds Instruction Manual](#)

GOBOULT Y1

GOBOULT Y1 Wireless Ear Buds Instruction Manual

Model: Y1

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your GOBOULT Y1 Wireless Ear Buds. Please read it thoroughly before using the product and retain it for future reference.



Image: GOBOULT Y1 Wireless Ear Buds and their charging case. The earbuds are white with grey tips and red GOBOULT logos, resting beside the matching white charging case.

2. WHAT'S IN THE BOX

Verify that all items are present in the packaging:

- Y1 Earphones (Left and Right)
- Y1 Charging Case
- USB Type-C Charging Cable
- Additional Eartips (various sizes)
- User Manual (this document)

3. SETUP

3.1 Initial Charging

Before first use, fully charge the ear buds and the charging case.

1. Place the ear buds into the charging case. Ensure they are correctly seated.

2. Connect the provided USB Type-C cable to the charging port on the case and to a compatible USB power source (e.g., wall adapter, computer USB port).
3. The indicator light on the charging case will show charging status. A full charge typically takes approximately 90 minutes.
4. A 10-minute charge provides approximately 100 minutes of playtime.

Lightning Fast™

Type-C 
Fast charging

10 mins = **100** mins
Charge playtime



Charge up, groove on!

Image: GOBOULT Y1 Ear Buds and their charging case, illustrating the Type-C fast charging port and cable connection. Text indicates "10 mins = 100 mins playtime".

3.2 Bluetooth Pairing

The GOBOULT Y1 Ear Buds feature Blink & Pair™ Bluetooth 5.3 for fast and stable connection.

1. Ensure the ear buds are charged.
2. Open the lid of the charging case. The ear buds will automatically enter pairing mode, indicated by flashing LED lights.
3. On your device (smartphone, tablet, laptop), enable Bluetooth.
4. Search for "GOBOULT Y1" in the list of available Bluetooth devices.
5. Select "GOBOULT Y1" to connect. Once connected, a voice prompt will confirm successful pairing, and the LED lights on the ear buds will stop flashing.
6. For subsequent use, the ear buds will automatically connect to the last paired device when removed.

from the case.



Image: GOBOULT Y1 Ear Buds and case with a smartphone displaying music, highlighting Bluetooth v5.3, Blink & Pair, Stable Connection, and Power efficient features.

4. OPERATING INSTRUCTIONS

4.1 Touch Controls

The GOBOULT Y1 Ear Buds feature intuitive touch controls on each ear bud. The specific functions are as follows:

Touch Controls



Image: A detailed diagram showing the touch control functions for the GOBOULT Y1 Ear Buds. It illustrates single taps, double taps, triple taps, and long presses for various actions like music playback, call management, and voice assistant activation.

- **Single Tap (Left/Right Bud):** Play/Pause Music, Answer Call
- **Double Tap (Left Bud):** Previous Song
- **Double Tap (Right Bud):** Next Song
- **Triple Tap (Left Bud):** Volume Down
- **Triple Tap (Right Bud):** Volume Up
- **Long Press (Left/Right Bud):** Activate Voice Assistant (Google Assistant/Siri), Reject Call, End Call
- **Four Taps (Left/Right Bud):** Activate Combat Mode (Low Latency Gaming)

4.2 Voice Assistant

Activate your device's voice assistant (Google Assistant or Siri) by long-pressing either ear bud.

AI Voice Assistant

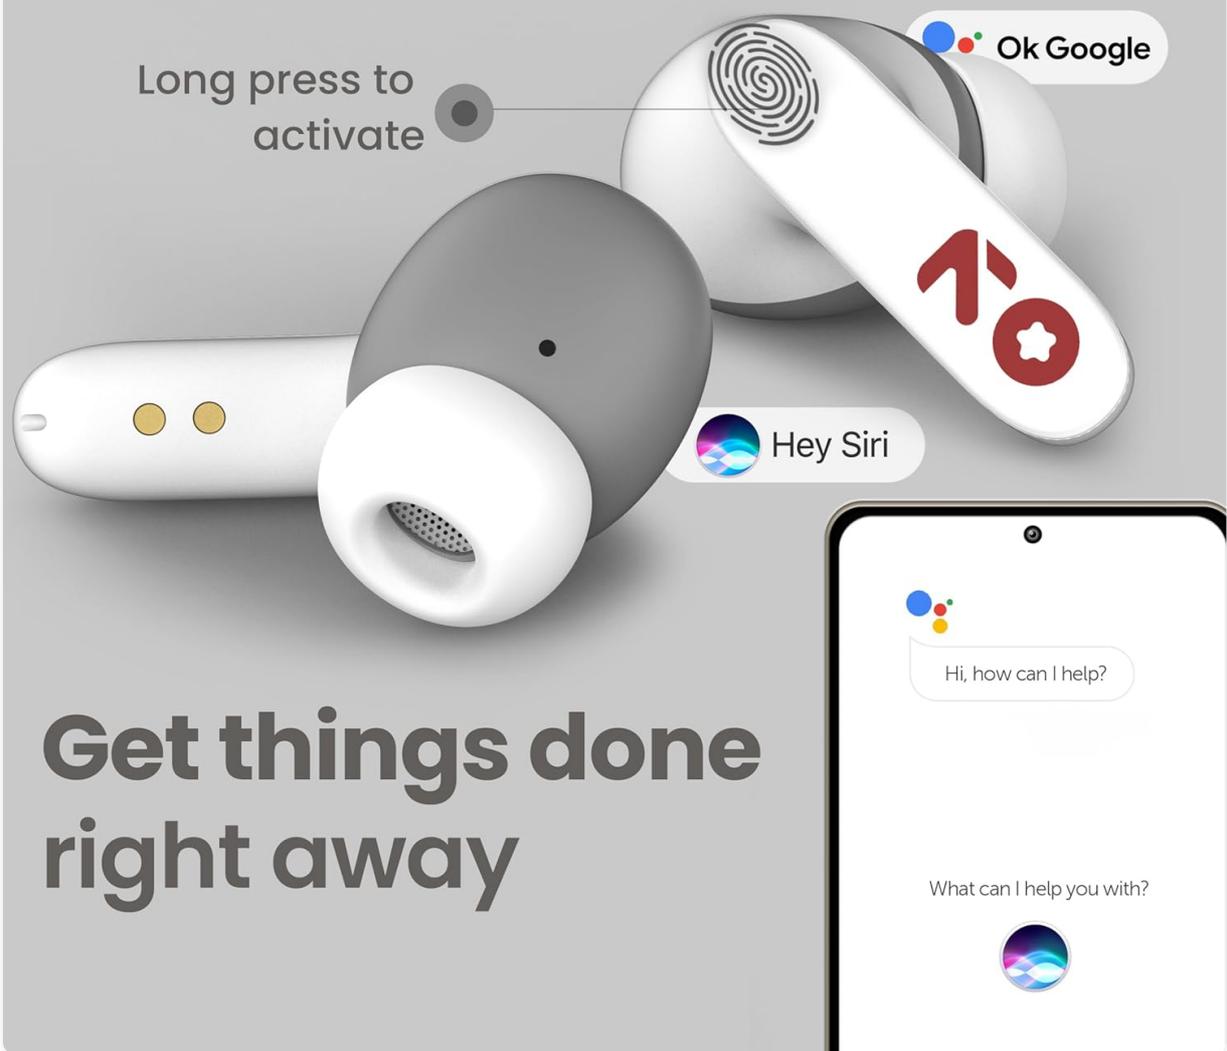


Image: GOBOULT Y1 Ear Buds with an illustration of a long press gesture activating a voice assistant like Google Assistant or Siri on a smartphone.

4.3 Calling with Zen ENC Mic

The GOBOULT Y1 Ear Buds are equipped with a Zen ENC (Environmental Noise Cancellation) microphone for clear call quality.

- **Answer Call:** Single tap either ear bud.
- **Reject Call:** Long press either ear bud.
- **End Call:** Long press either ear bud during a call.

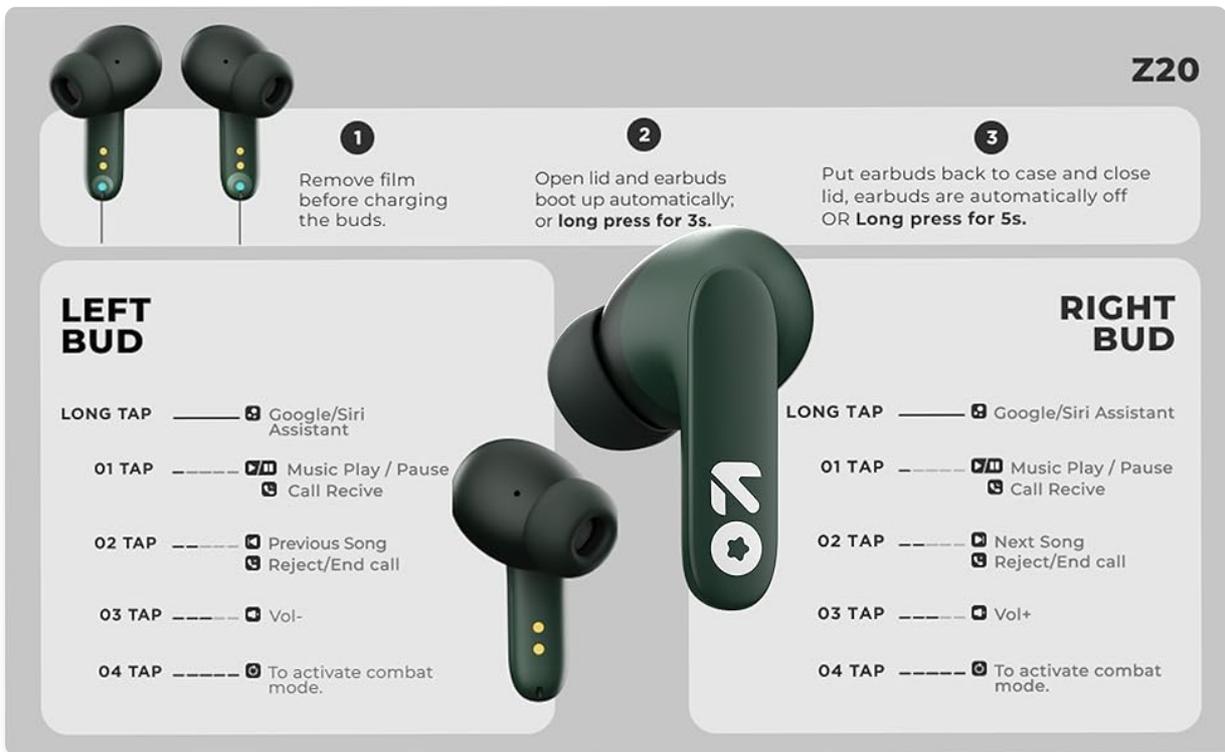


Image: A diagram illustrating how Environmental Noise Cancellation (ENC) works, showing a user's voice being filtered from environmental noise for clear communication. A detailed view of an earbud highlights the ENC microphone.

4.4 Low Latency Gaming Mode

Activate Combat Mode for a low-latency gaming experience, ensuring audio sync with minimal delay.

- **Activate Gaming Mode:** Four taps on either ear bud.
- **Deactivate Gaming Mode:** Four taps on either ear bud again.

5. MAINTENANCE

5.1 Cleaning

To maintain optimal performance and hygiene:

- Gently wipe the ear buds and charging case with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, solvents, or aerosol sprays.
- Remove ear tips and clean them separately with mild soap and water if necessary, ensuring they are completely dry before reattaching.
- Clean the charging contacts on both the ear buds and the case periodically with a dry cotton swab.

5.2 Water Resistance (IPX5)

The GOBOULT Y1 Ear Buds are IPX5 water-resistant, meaning they are protected against low-pressure water jets from any direction. This makes them suitable for workouts and light rain.



Image: GOBOULT Y1 Ear Buds shown with water droplets, indicating IPX5 water resistance. Icons for sweatproof, rainproof, and splashproof are also displayed.

Important:

- Do not submerge the ear buds in water.
- The charging case is not water-resistant.
- Avoid exposing the ear buds to saltwater, chlorinated water, or other chemicals.
- If the ear buds get wet, dry them thoroughly before placing them back in the charging case.

6. TROUBLESHOOTING

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
Ear buds not pairing	<ul style="list-style-type: none"> ◦ Ensure ear buds are charged. ◦ Place ear buds back in the case, close the lid, then open again to re-enter pairing mode. ◦ Turn off and on Bluetooth on your device. ◦ Forget "GOBOULT Y1" from your device's Bluetooth list and try pairing again.
No sound or low volume	<ul style="list-style-type: none"> ◦ Check volume levels on both your device and the ear buds. ◦ Ensure ear buds are properly connected to your device. ◦ Clean any debris from the ear bud speaker mesh.
Ear buds not charging	<ul style="list-style-type: none"> ◦ Ensure the charging cable is securely connected. ◦ Check if the charging case has power. ◦ Clean the charging contacts on both the ear buds and the case.
Call quality issues	<ul style="list-style-type: none"> ◦ Ensure the microphone is not obstructed. ◦ Move closer to your paired device. ◦ Check for strong environmental noise that might exceed ENC capabilities.

7. SPECIFICATIONS

Feature	Detail
Brand	GOBOULT
Model Name	Y1 (also referred to as Airbass)
Bluetooth Version	5.3
Bluetooth Range	Up to 10 meters (33 feet)
Ear Placement	In Ear
Audio Driver Type	Dynamic Driver (10mm Bass Drivers)
Impedance	32 Ohms
Frequency Response	20 Hz
Sensitivity	117 dB
Noise Control	Environmental Noise Cancellation (ENC)
Battery Life (Total)	Up to 51 Hours (with charging case)
Battery Charge Time	Approx. 90 Minutes

Feature	Detail
Charging Port	USB Type-C
Water Resistance	IPX5 (Ear Buds only)
Control Method	Touch, Voice
Compatible Devices	Android, Cellphones, Desktops, Laptops, Tablets
Material	Plastic
Weight (Carrying Case)	65 Grams
Country of Origin	India

8. WARRANTY AND SUPPORT

8.1 Manufacturer Warranty

The GOBOULT Y1 Wireless Ear Buds come with a **1-year manufacturer warranty** from the date of purchase. This warranty covers manufacturing defects. Please retain your proof of purchase for warranty claims.

For warranty service or support, please contact the manufacturer or authorized service center.

8.2 Contact Information

Manufacturer: Exotic Mile Private Limited

Address: B-67 Wazirpur Industrial Area, New Delhi 110052, India

Importer: Exotic Mile Pvt. Ltd.

For further assistance, please refer to the contact details provided on the product packaging or the official GOBOULT website.