

charmast W1115

Charmast Portable Charger User Manual

Model: W1115

INTRODUCTION

Thank you for choosing the Charmast Portable Charger. This device is designed to provide convenient and fast charging for your mobile devices on the go. Featuring built-in cables and a wall plug, it offers versatile recharging and output options, making it an ideal travel companion. Please read this manual carefully to ensure proper use and maintenance of your portable charger.

WHAT'S IN THE BOX

- Charmast Portable Charger with Built-in Cables
- User Manual (this document)
- Mesh Pouch

PRODUCT OVERVIEW

The Charmast Portable Charger (Model W1115) is a compact and powerful 10000mAh power bank designed for ultimate convenience. It integrates multiple charging solutions into one sleek device.



Figure 1: Front and back view of the Charmast Portable Charger, highlighting its integrated cables and foldable wall plug.

6-in-1 Portable Charger



Wall Plug



USB A Port



USB C Port
(Recharge Only)



USB C & Micro



For iPhone



Figure 2: The 6-in-1 functionality of the portable charger, demonstrating its ability to charge multiple devices including phones, earbuds, and tablets using its various ports and built-in cables.

Ultra-Slim Portable Design



Figure 3: Illustration of the ultra-slim portable design, showing the compact dimensions of the charger in comparison to a typical smartphone.

Why Choose This



Built-in Wall Plug



VS



Cables Integrated



LED Screen



Figure 4: Key features highlighted: the convenient built-in wall plug, integrated charging cables, and a clear LED digital display for battery status.

Key Features:

- **Built-in Cables:** Includes integrated cables for various devices (USB-C, Lightning, Micro-USB) eliminating the need for extra cables.
- **Built-in Wall Plug:** Allows direct recharging from any standard wall outlet without an adapter.
- **10000mAh Capacity:** Provides multiple charges for smartphones and other small devices.

- **Fast Charging:** Supports up to 15W fast charging output.
- **Digital Display:** Clear LED screen shows precise battery percentage.
- **Compact and Slim Design:** Easy to carry and store, ideal for travel.
- **Multiple Safety Protections:** Built-in safeguards against over-discharge, short-circuit, over-current, and over-voltage.

SETUP

Before first use, it is recommended to fully charge your Charmast Portable Charger.

1. **Unpack:** Remove the portable charger and all accessories from the packaging.
2. **Initial Charge:**
 - **Using Built-in Wall Plug:** Fold out the integrated wall plug and insert it directly into a standard AC wall outlet. The LED display will show the charging progress.
 - **Using USB-C Input:** Alternatively, connect a USB-C cable (not included) to the USB-C input port on the power bank and plug the other end into a compatible USB wall adapter (5V-2.6A recommended for faster charging).
3. **Full Charge Indication:** The LED display will show "100" when the power bank is fully charged.

Two Recharging Options

6 hrs

Buil-in Wall plug



5 hrs

5V-2.6A Charger



Figure 5: Demonstrates the two convenient methods for recharging the power bank: directly via the built-in wall plug or through the USB-C input port using an external adapter.

OPERATING INSTRUCTIONS

Charging Your Devices:

The Charmast Portable Charger offers multiple ways to charge your electronic devices.

1. Using Built-in Cables:

- Identify the correct built-in cable for your device (USB-C, Lightning, or Micro-USB).
- Gently pull out the desired cable from its storage slot.
- Connect the cable to your device's charging port. The power bank will automatically begin charging your device.

2. Using USB-A or USB-C Output Ports:

- For devices requiring a different cable or for simultaneous charging, use your own USB-A or USB-C cable.
- Plug one end of your cable into the appropriate output port on the power bank (USB-A or USB-C).
- Connect the other end to your device.

3. Checking Battery Level:

The LED display will show the remaining battery percentage of the power bank.



Figure 6: A user charging their smartphone with the Charmast Portable Charger, demonstrating its ease of use in a typical setting.

Recharging the Power Bank:

When the power bank's battery level is low, recharge it using one of the following methods:

- **Direct Wall Charging:** Extend the built-in AC wall plug and insert the power bank directly into a wall socket. This is the most convenient method for recharging.
- **USB-C Input Charging:** Connect a USB-C cable to the power bank's USB-C input port and plug the other end into a USB wall adapter or computer USB port.

Wake up, Ready to Go

Wake up with a fully charged portable charger and phone



Figure 7: The portable charger plugged into a wall outlet, simultaneously recharging itself and a connected smartphone, illustrating its "Wake up, Ready to Go" convenience.

MAINTENANCE

Proper care and maintenance will extend the lifespan of your Charmast Portable Charger.

- **Storage:** Store the power bank in a cool, dry place away from direct sunlight and extreme temperatures.

- Cleaning:** Use a soft, dry cloth to clean the surface of the power bank. Do not use liquid cleaners or abrasive materials.
- Avoid Drops:** While the rubberized cover offers some protection, avoid dropping the device to prevent internal damage.
- Regular Use:** If not used for extended periods, charge and discharge the power bank at least once every three months to maintain battery health.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|----------------------------------|---|--|
| Power bank not charging devices. | Power bank battery is depleted. Cable connection is loose or incorrect. Device is not compatible or charging port is faulty. | Recharge the power bank fully. Ensure cables are securely connected to both the power bank and the device. Try a different device or cable to isolate the issue. |
| Power bank not recharging. | Wall outlet is not active. Wall plug or USB-C cable is not fully inserted. Faulty wall adapter or cable (if using USB-C input). | Test the wall outlet with another appliance. Ensure the wall plug or USB-C cable is firmly connected. Try a different wall adapter or USB-C cable. |
| Slow charging. | Device requires higher charging input than provided. Using a non-fast charging cable or adapter. | Ensure your device supports 15W charging. Use a high-quality, fast-charging compatible cable and adapter (if applicable). |

SPECIFICATIONS

| | |
|--------------------------|--|
| Model Number | W1115 |
| Battery Capacity | 10000mAh (37Wh) |
| Product Dimensions | 5.95 x 2.76 x 0.72 inches (15.1 x 7.0 x 1.8 cm) |
| Item Weight | 8 ounces (227 grams) |
| Input (AC Wall Plug) | 100-240V~50/60Hz 0.3A |
| Input (USB-C) | 5V-2.6A |
| Output (USB-A) | 5V-3A |
| Output (USB-C) | 5V-3A |
| Output (Built-in Cables) | 5V-3A (Max 15W) |
| Special Features | Built-in Cables, Built-in Wall Plug, Digital Display, Fast Charging, Slim Design |
| Battery Type | Lithium Polymer |

SAFETY INFORMATION

Please read and follow these safety guidelines to prevent injury or damage to the device.

- Do not expose the power bank to extreme temperatures (hot or cold), direct sunlight, or high humidity.
- Do not disassemble, modify, or repair the device yourself. Contact customer support if service is required.
- Keep out of reach of children.
- Do not drop, puncture, or apply excessive force to the power bank.
- Avoid contact with water or other liquids.
- Dispose of the power bank responsibly according to local regulations. Do not dispose of it in household waste.
- This power bank is allowed in carry-on bags for air travel but not in checked bags. Always check airline regulations before flying.



Plane Allowed



Carry On Bags



Checked Bags



Figure 8: Visual guide indicating that the portable charger is permitted in carry-on luggage but prohibited in checked baggage for air travel, in compliance with airline safety regulations.

Multiple Safety Protection



Over-Discharge Protection



Short-Circuit Protection



Over Current Protection



Over Voltage Protection

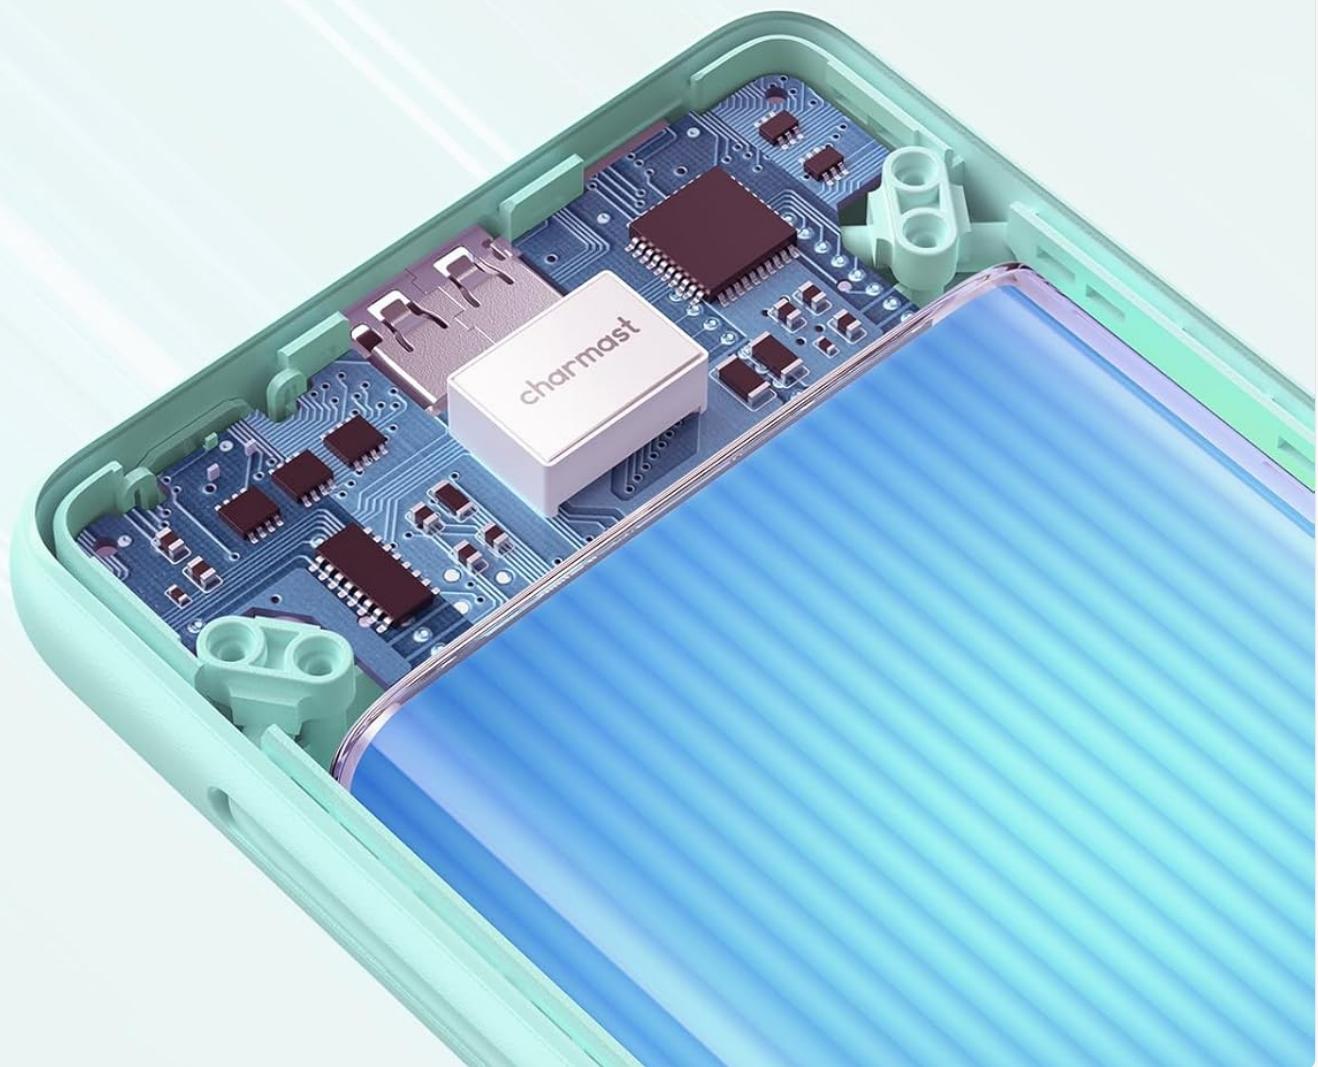


Figure 9: Diagram illustrating the multiple safety protection features integrated into the power bank, including safeguards against over-discharge, short-circuit, over-current, and over-voltage.

WARRANTY AND SUPPORT

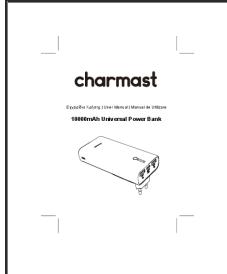
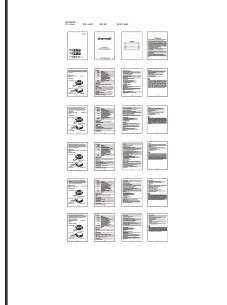
Charmast products come with a standard manufacturer's warranty. For detailed warranty information, product support, or technical assistance, please contact Charmast customer service through the retailer where you purchased the product or visit the official Charmast website.

Manufacturer: Dong guan Utopia-Originality Technology Co., Ltd

Brand Store: [Visit Charmast Store on Amazon](#)

© 2023 Charmast. All rights reserved.

Related Documents

| | |
|--|--|
|  | <p>Charmast 10000mAh Universal Power Bank User Manual</p> <p>User manual for the Charmast C1146L 10000mAh Universal Power Bank, covering specifications, package contents, product diagram, getting started instructions, product care, warranty information, and environmental compliance.</p> |
|  | <p>Charmast 10000mAh Universal Power Bank C10 User Manual</p> <p>User manual for the Charmast C10 10000mAh Universal Power Bank, detailing specifications, features, usage instructions, safety guidelines, and warranty information.</p> |
|  | <p>Charmast 5000mAh Portable Charger CMP User Manual Specs & Guide</p> <p>Comprehensive user manual for the Charmast 5000mAh Portable Charger CMP. Find specifications, getting started instructions, maintenance tips, troubleshooting guide, FAQs, and safety warnings.</p> |
|  | <p>Charmast C2065 20000mAh Power Bank User Manual and Specifications</p> <p>Comprehensive guide to the Charmast C2065 portable power bank, featuring 20000mAh capacity, USB-A and Type-C ports, and digital display for battery status. Learn how to recharge and use your power bank.</p> |