

VJIANGER W05

VJIANGER 4K Digital Camera Model W05 User Manual

Model: W05

1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your VJIANGER 4K Digital Camera Model W05. Please read this manual thoroughly before using the camera to ensure proper function and to maximize your photographic experience. This camera is designed for capturing high-resolution photos and 4K videos, featuring a dual-camera system, Wi-Fi connectivity, and a 4.0-inch touch screen.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any items are missing or damaged, please contact customer support.

- VJIANGER 4K Digital Camera Body
- Lens Hood
- 3000mAh Rechargeable Battery
- 32GB SD Card
- Charger
- Type-C Cable
- Protective Case
- Lanyard
- User Manual (this document)



390g 
5.12*3.94*2 inch 

What's in the Box:

1.Lens Hood

2.Camera Body

3.Camera Bag

4.Battery

5.Charger

6.32GB SD Card

7.Lanyard

8.Type C Cable

Image: Contents of the VJANGER 4K Digital Camera package, including the camera body, lens hood, battery, SD card, charger, Type-C cable, protective case, and lanyard.

3. PRODUCT OVERVIEW

Familiarize yourself with the main components and controls of your VJANGER 4K Digital Camera.

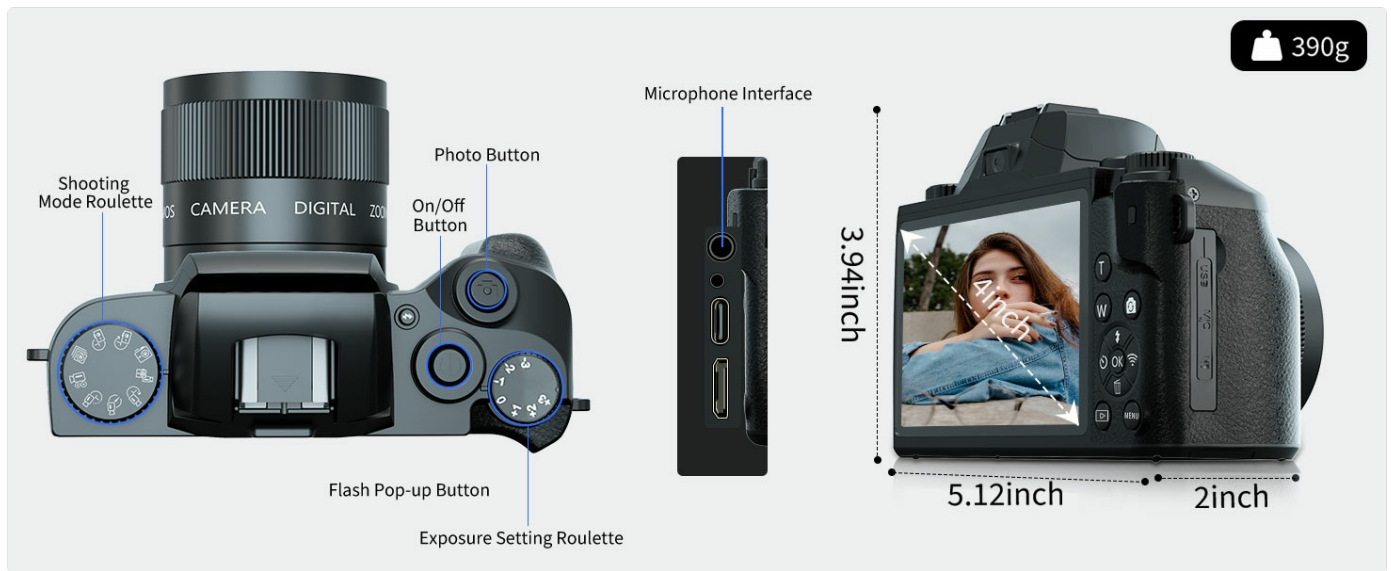


Image: Top, side, and rear views of the VJIANGER 4K Digital Camera with key components labeled, including the shooting mode roulette, photo button, on/off button, flash pop-up button, exposure setting roulette, microphone interface, and 4-inch touch screen.

- **Shooting Mode Roulette:** Selects various shooting modes (Photo, Video, Burst, Timer, etc.).
- **Photo Button:** Captures still images.
- **On/Off Button:** Powers the camera on or off.
- **Flash Pop-up Button:** Activates the built-in flash.
- **Exposure Setting Roulette:** Adjusts exposure compensation.
- **Microphone Interface:** For connecting an external microphone.
- **4.0-inch Touch Screen:** Displays live view, menus, and playback.
- **Dual Cameras:** Features both front and rear cameras for versatile shooting.

4. SETUP

4.1. Battery Installation and Charging

1. Open the battery compartment cover located at the bottom of the camera.
2. Insert the 3000mAh lithium-ion battery, ensuring the correct orientation according to the diagram inside the compartment.
3. Close the battery compartment cover securely.
4. To charge, connect the camera to the charger using the provided Type-C cable. The charging indicator will illuminate. A full charge typically takes 3-4 hours.



Image: The VJIANGER camera next to its 3000mAh rechargeable battery, illustrating the power source and charging details.

4.2. SD Card Installation

1. Locate the SD card slot on the side of the camera.
2. Insert the included 32GB micro SD card with the gold contacts facing the front of the camera until it clicks into place.
3. To remove, gently press the card until it springs out.

4.3. Powering On/Off

Press and hold the **On/Off Button** for a few seconds to power the camera on or off.

5. OPERATING THE CAMERA

5.1. Basic Photography and Video Recording

- **Taking Photos:** Rotate the Shooting Mode Roulette to the photo icon. Frame your shot using the 4.0-inch touch screen, then press the **Photo Button** to capture.
- **Recording Videos:** Rotate the Shooting Mode Roulette to the video icon. Press the **Photo Button** to start recording, and press it again to stop.

5.2. Dual Camera Function (Front and Rear)

The camera features both a front and rear lens. To switch between them, locate the quick switch button on the camera body or the corresponding icon on the touch screen. This allows for easy selfies and vlogging.

Upgrade 4K Front and Rear Cameras Easy to take a selfie and Vlog

[4K] 3840X2160P

[2.7K] 2688X1520P

[1080P] 1920X1080P

[720P] 1280X720P



Image: The rear of the VJIANGER camera displaying its 4-inch screen with a person on it, indicating the quick switch function for dual cameras.

5.3. Digital Zoom

The camera supports up to 16X digital zoom. Use the zoom controls (often marked 'W' for Wide and 'T' for Telephoto) on the camera body or the touch screen to adjust the zoom level. Note that digital zoom may reduce image quality at higher magnifications.

16X Digital Zoom Camera

The device is able to zoom in up to 16 times using digital zoom



Image: A husky dog photographed at different digital zoom levels (2X, 8X, 16X) demonstrating the camera's 16X digital zoom capability.

5.4. Touch Screen Operation

The 4.0-inch ultra HD touch screen allows for intuitive navigation through menus, settings, and image playback. Tap icons to select options, swipe to browse photos, and pinch to zoom during playback.

6. ADVANCED FEATURES

6.1. Shooting Modes

Your camera offers various shooting modes accessible via the Shooting Mode Roulette:

- **Photo:** Standard still image capture.
- **Video:** Standard video recording.
- **Burst:** Captures a rapid sequence of photos.
- **Timer:** Sets a delay before taking a photo.

- **Slow Motion:** Records video at a higher frame rate for slow-motion playback.
- **Loop:** Records video in a continuous loop, overwriting older footage.
- **Time-Lapse:** Captures images at set intervals to create a time-lapse video.
- **Auto:** Automatically adjusts settings for optimal results.
- **Video + Photo:** Captures both video and still images simultaneously.



Image: The VJIANGER camera surrounded by icons representing its 9 multi-function modes: Video, Slowly, Loop, Lapse, Photo, Video+Photo, Auto, Burst, and Timer.

6.2. Built-in Fill Light

The camera features an upgraded built-in flash that functions as a fill light to enhance photography in low-light conditions or at night. Activate it using the **Flash Pop-up Button** or through the camera's menu settings.

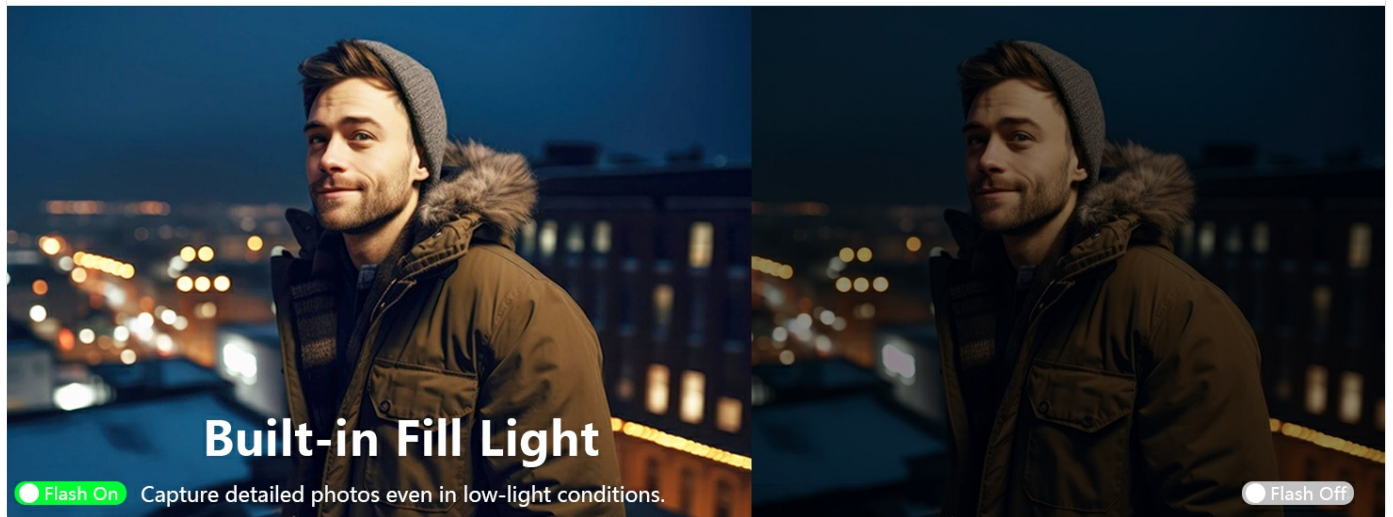


Image: A side-by-side comparison showing a man photographed in low light, with one image demonstrating the effect of the built-in fill light (Flash On) and the other without (Flash Off).

6.3. Exposure Settings

Adjust the exposure compensation using the **Exposure Setting Roulette** or through the camera's menu. This allows you to brighten or darken your images to achieve the desired effect, with settings ranging from EV -3 to EV +3.

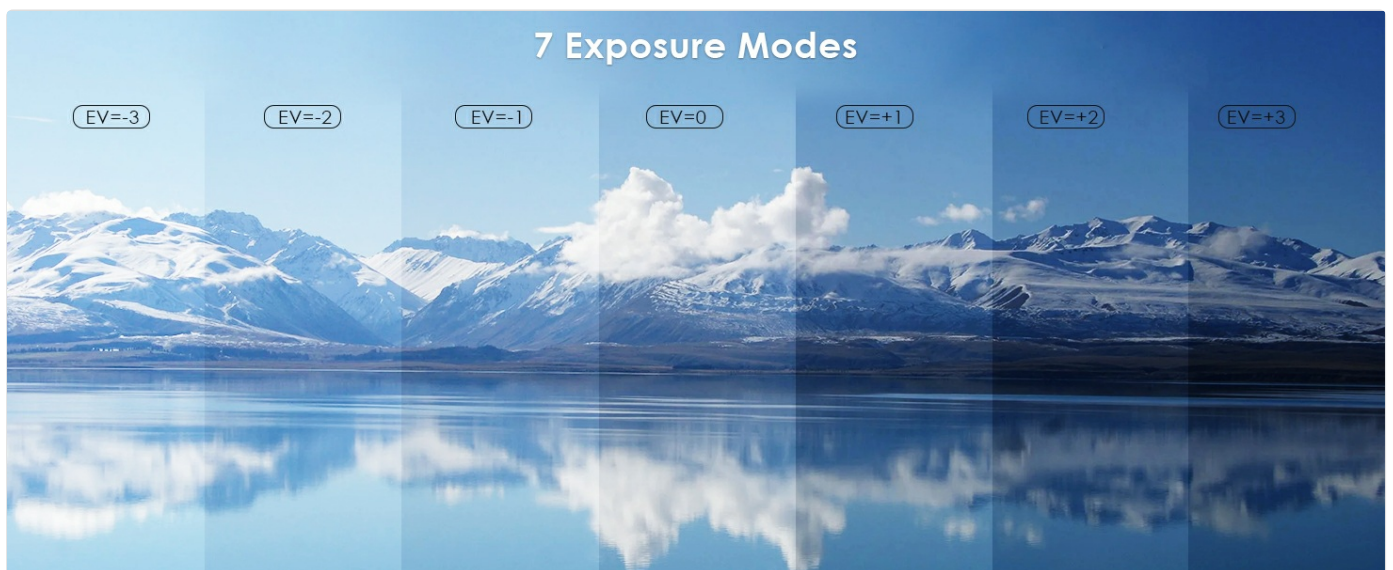


Image: A landscape scene displayed across seven panels, each showing a different exposure value (EV) from -3 to +3, illustrating the effect of exposure compensation.

6.4. Color Filters

The camera includes 19 built-in filters, including 6 primary color filters (Negative, Gray, Red, Antique, Blue, Green) to add creative effects to your photos. Access these filters through the camera's menu.



Image: A woman's portrait shown with six different color filters applied: Negative, Gray, Red, Antique, Blue, and Green.

7. CONNECTIVITY

7.1. Wi-Fi Connection

The camera's built-in Wi-Fi allows you to connect to a smartphone or tablet. This enables remote control of the camera and wireless transfer of photos and videos to your device for easy sharing. Refer to the camera's menu for Wi-Fi setup instructions and app compatibility.

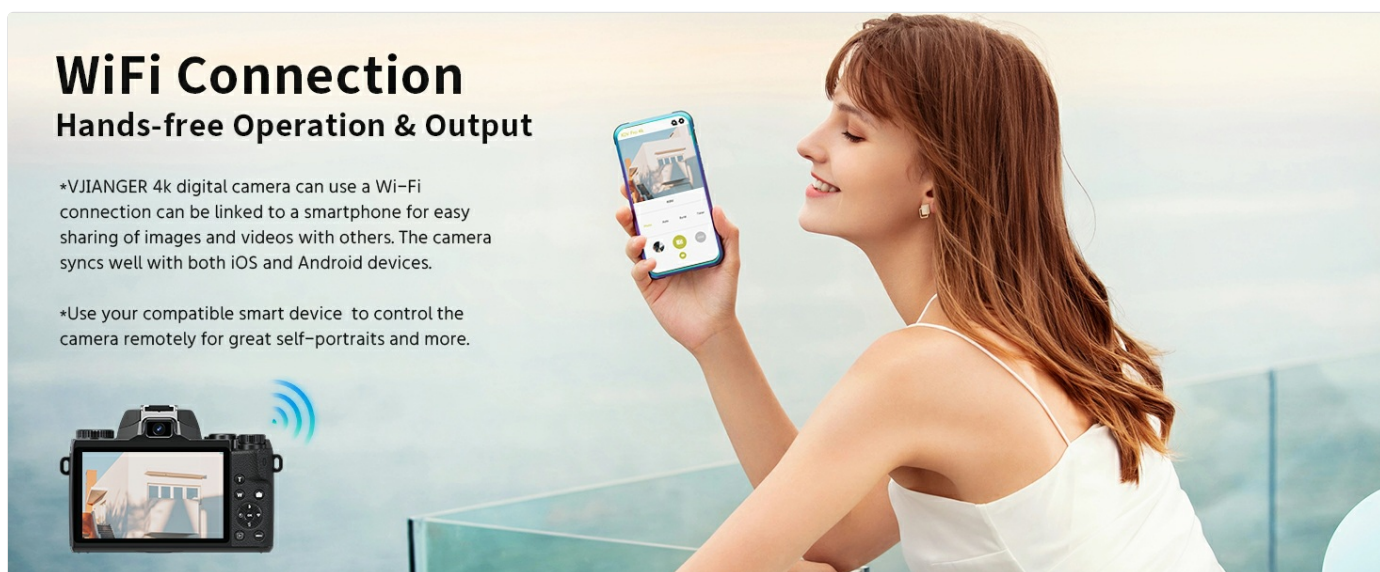


Image: A woman using a smartphone to remotely control the VJIANGER camera, demonstrating the Wi-Fi connectivity feature for hands-free operation and file transfer.

7.2. Webcam Function

Connect the camera to a computer using the Type-C cable to utilize it as a webcam. This feature is suitable for live streaming or video conferencing services, providing high-quality video input.

Camera Function

You can connect a computer, etc. to the camera and use the camera video and audio for livestreaming or web-conferencing services.



Image: A VJANGER camera connected to a laptop, illustrating its use as a webcam for live streaming or web conferencing, with a woman cooking in the background.

8. MAINTENANCE

- **Cleaning the Camera:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Avoid harsh chemicals.
- **Battery Care:** Store the battery in a cool, dry place when not in use. Avoid fully discharging the battery for extended periods.
- **Storage:** When not in use, store the camera in its protective case in a dry, dust-free environment away from direct sunlight and extreme temperatures.

9. TROUBLESHOOTING

If you encounter issues with your camera, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Camera does not power on.	Battery may be depleted or incorrectly installed. Ensure battery is charged and properly inserted.
Images are blurry or out of focus.	Ensure the lens is clean. Check focus settings. Digital zoom at higher magnifications can reduce clarity.
Flash is not working.	Check if the flash is enabled in the camera settings. Ensure the flash pop-up mechanism is functioning correctly.
Burst photo mode not functioning.	Verify that the camera is set to the correct 'Burst' mode via the Shooting Mode Roulette. Ensure sufficient space on the SD card.
Wi-Fi connection issues.	Ensure Wi-Fi is enabled on both the camera and your smart device. Check app compatibility and follow in-app instructions for connection.
SD card error.	Ensure the SD card is correctly inserted and not full. Try formatting the SD card (this will erase all data). Use a Class 10 or UHS Class 1 SD card.

10. SPECIFICATIONS

Key technical specifications for the VJIANGER 4K Digital Camera Model W05:

Feature	Specification
Model Name	W05
Effective Still Resolution	64 MP
Video Resolution	4K UHD 2160p, 1080p
Digital Zoom	16x
Screen Size	4 Inches
Display Type	LCD Touch Screen
Photo Sensor Technology	CMOS
Image Stabilization	Digital
Connectivity Technology	USB, Wi-Fi
Supported File Format	JPEG, MP4
External Memory Size	32 GB (SD Card included)
Battery Type	Lithium Ion (3000mAh)
Battery Average Life	2 Hours (recording)
Item Weight	0.7 Kilograms (approx. 0.86 LB)
Dimensions (approx.)	3.9 x 3.9 x 5.0 inches (camera body)
Water Resistance Level	Not Water Resistant

11. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact VJIANGER customer service directly. Keep your proof of purchase for any warranty claims.

© 2024 VJIANGER. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question