



[Manuals.plus](#) /

› [Silver Crest](#) /

› Silver Crest 8-Liter 2400W High-Performance Air Fryer User Manual

## Silver Crest 6221353002433

# Silver Crest 8-Liter 2400W High-Performance Air Fryer User Manual

MODEL: 6221353002433

## Introduction

Welcome to the world of healthier cooking with your new Silver Crest 8-Liter Air Fryer. This appliance utilizes rapid air heating technology to cook your favorite foods with significantly less oil, offering a crispy texture and delicious results. Please read this manual thoroughly before first use to ensure safe and optimal operation of your air fryer.

## Important Safety Instructions

- Always place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to allow for proper ventilation.
- Do not immerse the main unit, cord, or plug in water or any other liquid.
- Ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Keep children and pets away from the appliance during operation. The surface can become very hot.
- Do not block any ventilation openings.
- Unplug the air fryer from the outlet when not in use and before cleaning. Allow it to cool down completely before handling.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Only use accessories recommended by the manufacturer.
- Exercise extreme caution when removing the hot basket and crisper plate.

## Product Overview



Figure 1: Front view of the Silver Crest Air Fryer, highlighting the digital control panel with English labels for various functions and settings.



Figure 2: The air fryer with its frying basket and removable crisper plate, demonstrating the ease of access for cleaning and food placement.

### Components:

- Main Unit (Housing)
- Digital Control Panel
- Frying Basket with Handle
- Removable Crisper Plate
- Air Outlet Vent (rear)

### Dimensions:



Figure 3: Dimensional diagram of the air fryer and its internal components. The overall dimensions are approximately 35 cm (Depth) x 30 cm (Width) x 30 cm (Height).

## Setup

1. **Unpacking:** Carefully remove all packaging materials and promotional labels from the air fryer.
2. **Initial Cleaning:** Before first use, wash the frying basket and crisper plate thoroughly with hot water, dish soap, and a non-abrasive sponge. Wipe the inside and outside of the main unit with a damp cloth. Ensure all parts are completely dry before use.
3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is at least 10 cm (4 inches) of free space on the back and sides, and 10 cm (4 inches) above the appliance to allow for proper air circulation.
4. **Power Connection:** Plug the power cord into a grounded wall outlet.

## Operating Instructions

### Basic Operation:

1. Place the crisper plate inside the frying basket.
2. Place your ingredients into the frying basket. Do not overfill the basket.
3. Slide the frying basket back into the air fryer until it clicks into place.
4. Press the **ON/OFF** button to turn on the appliance.
5. Use the temperature and time control buttons (+ and -) to set your desired cooking temperature and time.
6. Alternatively, select a preset function by pressing the **Preset** or **Function** button and cycling through the options.
7. Press the **Start/Pause** button to begin cooking.

8. Some recipes require shaking ingredients halfway through cooking. The air fryer may beep to remind you. Carefully remove the basket, shake the contents, and reinsert.
9. Once cooking is complete, the air fryer will beep. Carefully pull out the basket and empty the cooked food.

### Cooking Guide (Approximate Values):

Food Item	Temperature (°C)	Time (Minutes)	Notes
Frozen Fries	180-200	15-25	Shake halfway
Chicken Wings	180	18-22	Flip halfway
Steak	180	8-12	Depends on thickness
Vegetables	160-180	10-15	Lightly oil

*Note: Cooking times and temperatures are approximate and may vary based on food quantity, size, and desired crispiness. Always ensure food is cooked thoroughly.*

## Maintenance and Cleaning

Clean the air fryer after every use. Allow the appliance to cool completely before cleaning.

1. **Basket and Crisper Plate:** These parts are dishwasher safe. For hand washing, use hot water, dish soap, and a non-abrasive sponge. For stubborn residue, soak in warm soapy water for 10-15 minutes.
2. **Interior:** Wipe the interior with a damp cloth and mild detergent. Do not use abrasive cleaners or steel wool.
3. **Exterior:** Wipe the exterior with a damp cloth. Never immerse the main unit in water.
4. **Heating Element:** Use a cleaning brush to remove any food residue from the heating element.

## Troubleshooting

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; Power outlet issue; Appliance malfunction.	Ensure plug is securely in outlet; Check circuit breaker; Contact customer support if issue persists.
Food is not crispy.	Basket overloaded; Insufficient oil; Temperature too low; Cooking time too short.	Cook in smaller batches; Lightly coat food with oil; Increase temperature or cooking time.
White smoke coming from appliance.	Grease residue from previous use; High-fat food cooking.	Clean the basket and crisper plate thoroughly; Drain excess fat from food.
Appliance smells during first use.	Normal for new appliances.	This will dissipate after a few uses. Ensure good ventilation.

## Specifications

Feature	Detail
Brand	Silver Crest
Model Number	6221353002433
Color	Black
Product Dimensions (D x W x H)	35 x 30 x 30 cm
Capacity	8 Liters
Power / Wattage	2400 Watts
Voltage	220 Volts
Material	Stainless Steel
Special Features	Temperature Control
Item Weight	6 Kilograms

## Warranty and Support

Your Silver Crest Air Fryer is designed for durability and performance. For information regarding warranty coverage, please refer to the warranty card included with your purchase or contact your retailer. For technical support or service inquiries, please reach out to Silver Crest customer service through their official website or the contact information provided in your product packaging.

Keep your purchase receipt as proof of purchase for any warranty claims.