

ALLIMITY AXD7710

Allimity AXD7710 Remote Control User Manual

For Pioneer DVD Systems: X-HM21, X-HM211, XH-HM31, X-HM41

[Setup](#)[Operation](#)[Maintenance](#)[Troubleshooting](#)[Specifications](#)[Warranty & Support](#)

INTRODUCTION

This manual provides instructions for the Allimity AXD7710 replacement remote control. This remote is designed to be compatible with various Pioneer DVD systems, including models X-HM21, X-HM211, XH-HM31, and X-HM41. It requires no programming and operates by simply installing batteries.

SETUP

Battery Installation

The Allimity AXD7710 remote control requires two (2) AAA alkaline batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Image: Rear view of the remote control with the battery cover removed, illustrating the correct orientation for AAA battery insertion.

Initial Use

Once batteries are installed, the remote control is ready for immediate use. No programming or pairing is required for compatible Pioneer DVD systems.

OPERATING INSTRUCTIONS

This section details the primary functions of the buttons on your Allimity AXD7710 remote control. Refer to the image below for button layout.



Image: Front view of the remote control, displaying the layout and labels of all operational buttons.

Key Functions

- **STANDBY/ON:** Powers the device on or off (standby mode).
- **OPEN/CLOSE:** Opens or closes the disc tray.
- **DVD/CD, USB, TUNER, AUDIO IN/LINE:** Selects the input source.
- **CLOCK/TIMER, SLEEP:** Accesses clock, timer, or sleep functions.
- **AUDIO, SUBTITLE, ANGLE, EQUALIZER:** Controls audio settings, subtitle tracks, viewing angles, and equalizer

presets.

- **ZOOM, MEMORY, PROGRAM, P.BASS:** Activates zoom, memory functions, program playback, or adjusts bass.
- **Number Buttons (0-9):** Used for direct track selection, channel input, or menu navigation.
- **CLEAR:** Clears current input or selection.
- **RPT/RDM, DISPLAY:** Controls repeat/random playback modes or changes display information.
- **TOP MENU, MENU/PBC:** Accesses the disc's top menu or playback control menu.
- **Navigation Buttons (Up, Down, Left, Right, ENTER):** Used to navigate menus and confirm selections.
- **RETURN:** Returns to the previous menu or screen.
- **HOME/MENU:** Accesses the main home menu.
- **PRESET (+/-):** Navigates through radio presets.
- **TUNE (+/-):** Adjusts radio tuning frequency.
- **VOLUME (+/-):** Increases or decreases the audio volume.
- **MUTE:** Mutes or unmutes the audio output.
- **DIMMER:** Adjusts display brightness.
- **PTY, DISPLAY:** Accesses Program Type or changes display information.
- **SHIFT, RDS, ASPM, OPTION:** Accesses secondary functions, Radio Data System (RDS), Automatic Sound Program Memory (ASPM), or other options.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind, Skip Forward, Skip Back):** Standard media playback functions.

MAINTENANCE

Cleaning the Remote Control

To maintain the remote control's appearance and functionality:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.

Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries simultaneously with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

TROUBLESHOOTING

If you experience issues with your remote control, refer to the following common solutions:

Problem	Solution
---------	----------

Problem	Solution
Remote control is not responding.	• Check if the batteries are inserted correctly with the correct polarity (+/-). • Replace both batteries with new AAA alkaline batteries. • Ensure there are no obstructions between the remote control and the Pioneer DVD system's infrared sensor. • Confirm the remote is pointed directly at the device.
Certain buttons are not working.	• Ensure the remote is clean and free from debris that might be jamming buttons. • Try replacing the batteries, as low power can sometimes affect specific functions. • Verify that the function you are trying to use is supported by your specific Pioneer DVD system model.
Remote works intermittently.	• This often indicates low battery power. Replace the batteries. • Check for strong light sources (e.g., direct sunlight, fluorescent lights) that might interfere with the infrared signal.

SPECIFICATIONS

- **Model:** Allimity AXD7710
- **Compatibility:** Pioneer DVD Systems (X-HM21, X-HM211, XH-HM31, X-HM41)
- **Battery Type:** 2 x AAA Alkaline Batteries (not included)
- **Dimensions:** Approximately 5.9 x 1.9 x 0.5 inches (15 x 4.8 x 1.3 cm)
- **Item Weight:** Approximately 2.34 ounces (66 grams)
- **Special Feature:** Ergonomic design
- **Color:** Black

WARRANTY AND SUPPORT

Warranty Information

Specific warranty details for the Allimity AXD7710 remote control are not provided in this manual. Please refer to your purchase documentation or contact the seller directly for information regarding warranty coverage.

Customer Support

For further assistance or inquiries, please contact the retailer or manufacturer from whom you purchased this product. Ensure you have your product model number (AXD7710) and purchase details available when seeking support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question