

[Manuals.plus](#) /

› [Vibemo](#) /

› Vibemo Beach Tent User Manual

Vibemo VB-SS03

Vibemo Beach Tent User Manual

Model: VB-SS03

1. INTRODUCTION

Thank you for choosing the Vibemo Beach Tent. This 10 x 10ft sun shelter is designed to provide UPF 50+ sun protection for up to 8 people, making it ideal for various outdoor activities such as beach trips, camping, fishing, backyard fun, and picnics. Its lightweight and portable design ensures easy transport and quick setup.



Image: The Vibemo Beach Tent providing shade on a sunny beach.

2. SAFETY INFORMATION

Please read and understand all safety instructions before setting up and using your Vibemo Beach Tent. Failure to follow these instructions may result in injury or damage to the product.

- **Secure Anchoring:** Ensure the shelter is securely anchored using the provided sandbags or ground pegs. Proper anchoring is crucial for stability, especially in varying weather conditions.
- **Weather Conditions:** Avoid using the tent in strong winds, heavy rain, or thunderstorms. While designed for sun protection, it is not intended for severe weather. Disassemble and store the tent if adverse weather is expected.
- **Pole Handling:** When inserting poles, hold the middle of the pole to maintain stability. Avoid inserting poles at a slant, as this may compromise the tent's structure.
- **UV Protection:** The tent offers UPF 50+ sun protection. However, prolonged exposure to direct sunlight should still be minimized, and additional sun protection measures (sunscreen, hats) are recommended.
- **Children:** Keep children supervised around the tent during setup and use.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:



Image: Visual representation of the Vibemo Beach Tent package contents.

- 1 x Beach Tent Fabric (Navy Blue)
- 2 x Support Poles (Aluminum, 1.5mm thickness)
- 4 x Sandbags (integrated with fabric)
- 2 x Bungee Cord Ties
- 2 x Sand Shovels
- 4 x Ground Pegs
- 1 x Carry Bag (17-inch)

4. SETUP INSTRUCTIONS

The Vibemo Beach Tent is designed for quick and easy setup, often achievable by one person in about 5 minutes. Follow these steps for optimal stability:

Build Your Own Castle

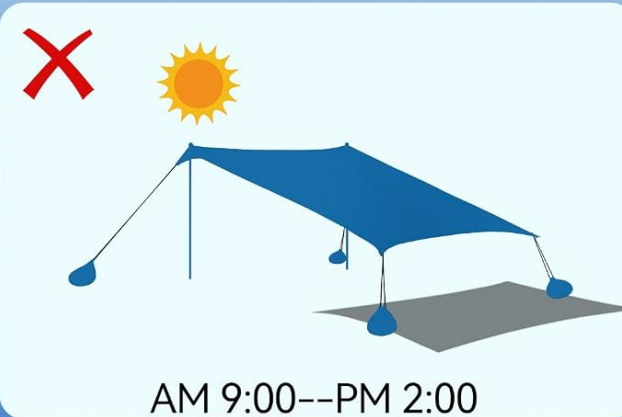


Image: Illustrated guide for quick and easy tent setup.

1. **Lay Out Tent:** Lay the beach tent fabric flat on your desired location. Ensure the fabric is stretched out evenly.
2. **Fill Sandbags/Use Pegs:** Fill the four integrated sandbags with sand. If setting up on grass or soft ground, use the provided ground pegs to secure the corners instead of sandbags.
3. **Unfold and Position Poles:** Unfold the support poles. Depending on the desired shade area and group size, you can prop up 2 or 4 corners of the tent. Insert the top of the pole into the fabric loop at the corner.
4. **Insert Poles into Sand:** Hold the middle of each pole and firmly insert the bottom end into the sand. Avoid inserting poles at a slant, as this can make them unstable. Rotating the rod slightly can help with insertion.
5. **Bury Sandbags (if applicable):** For maximum stability on sand, dig a deep hole and bury the filled sandbags. This provides a strong anchor point.
6. **Adjust and Secure:** Adjust the tension of the fabric by pulling the corners outwards and ensuring the poles are upright. The bungee cord ties can be used to further secure the poles to the sandbags/pegs if needed.

4.1 Anchoring Choices

Your Vibemo Beach Tent offers versatile anchoring options for different terrains:

Compact & Spacious

Carry with you everywhere for the whole family

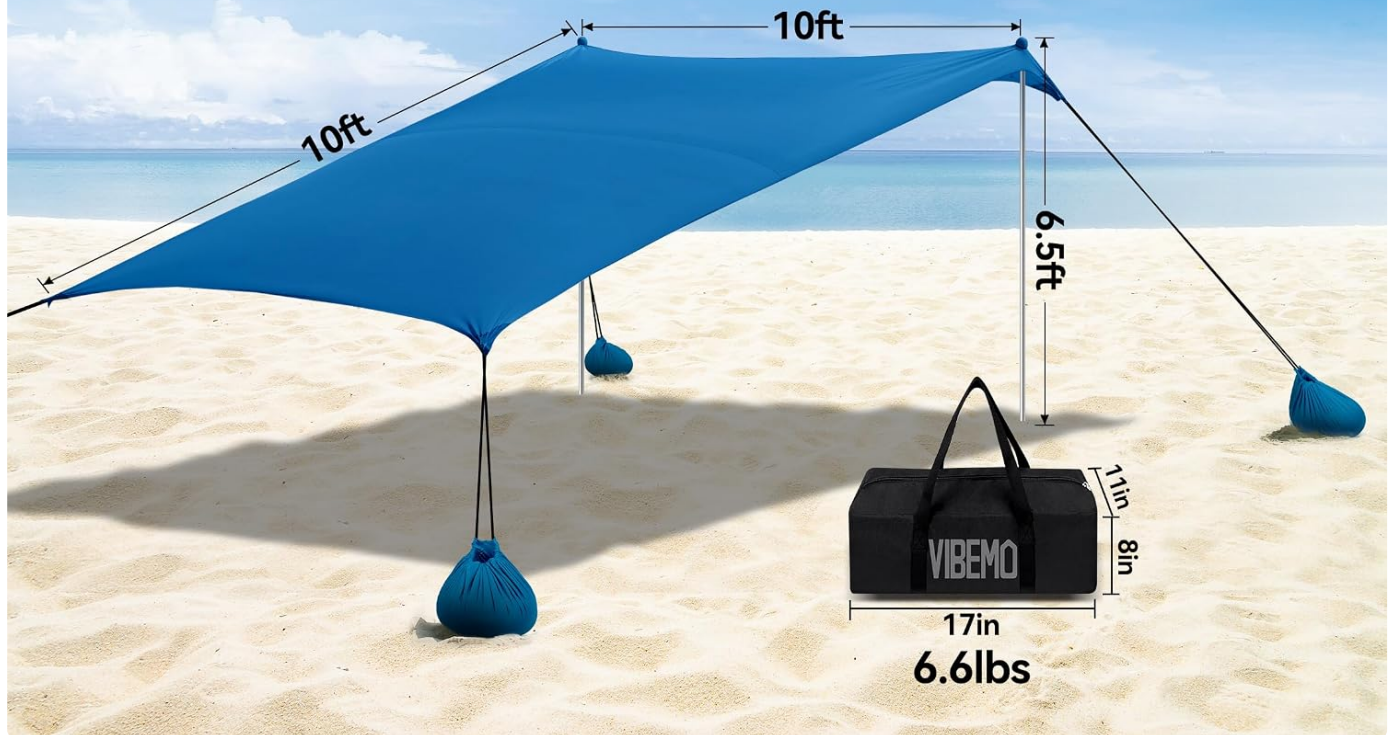


Image: Demonstrating the two available anchoring methods for the tent.

- **Sand Bags:** Ideal for beach environments. Fill the integrated bags with sand for a secure anchor.
- **Grass Pegs:** Use the provided ground pegs when setting up on grassy areas, parks, or other soft ground.

4.2 Optimal Shade Positioning

To maximize shade throughout the day, adjust the tent's orientation and pole configuration:

2 Anchoring Choices

Quick setup on any terrain



Image: Guide for adjusting tent setup to optimize shade based on sun position.


- For morning to early afternoon (approx. 9:00 AM - 2:00 PM), position the tent to block the sun from the east/southeast.
- For afternoon to evening (approx. 2:00 PM - 6:00 PM), adjust the tent to block the sun from the west/southwest.
- Experiment with using two or four poles to create the desired shade angle and coverage.

5. OPERATING THE BEACH TENT

Once set up, the Vibemo Beach Tent provides a comfortable and protected space for your outdoor activities.

- **Shade and UV Protection:** Enjoy the ample shade and UPF 50+ protection from harmful UV rays.
- **Ventilation:** The open design allows for excellent airflow, preventing the interior from becoming too hot.
- **Versatility:** Use the tent for relaxing, picnicking, reading, or as a base for your outdoor adventures.


Quick & Easy Set Up

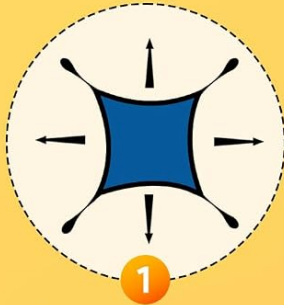


Lay out your tent



Fill the sandbags with sand

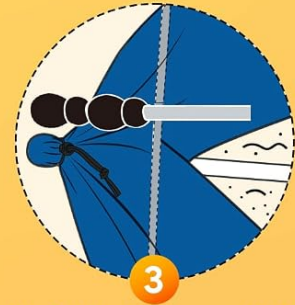

Unfold poles, prop 2-4 under the tent depending on group size and tie the ball

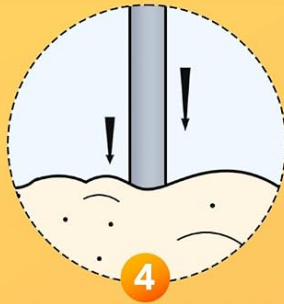

Insert the poles into the sand



Dig a deep hole and bury the sandbag in the sand



Sit back, relax and enjoy the shade

Image: People enjoying the shade provided by the Vibemo Beach Tent.

6. MAINTENANCE AND CARE

Proper maintenance will extend the life of your Vibemo Beach Tent:

- **Cleaning:** After each use, especially on the beach, shake off any sand or debris. The Lycra fabric is designed to resist sand sticking. If necessary, wipe down the fabric with a damp cloth and mild soap. Do not use harsh chemicals or abrasive cleaners.
- **Drying:** Ensure the tent fabric and poles are completely dry before packing away to prevent mold, mildew, and corrosion.
- **Storage:** Store the tent in its carry bag in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Pole Inspection:** Periodically check the aluminum poles for any signs of damage or bending. While the poles are thicker for enhanced stability, proper handling is still important.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Tent is unstable or collapses easily.	Insufficient anchoring; poles not inserted correctly; strong winds.	Ensure sandbags are fully filled and buried deep, or ground pegs are firmly in place. Insert poles vertically, holding the middle. Do not use in strong winds.
Not enough shade.	Incorrect tent orientation relative to the sun.	Adjust the tent's position and pole angles throughout the day to maximize shade coverage (refer to Section 4.2).
Sand sticking to fabric.	Fabric is wet or not properly shaken.	Ensure fabric is dry before packing. Shake vigorously to remove sand. The Lycra material is designed to minimize sand adhesion.


8. SPECIFICATIONS

Feature	Detail
Brand	Vibemo
Model Number	VB-SS03
Dimensions (L x W x H)	120" x 120" x 78" (10ft x 10ft x 6.5ft)
Floor Area	100 Square Feet
Capacity	Up to 8 people
Color	Navy Blue
Item Weight	6.6 lbs (approx. 7.08 lbs as per some specs)
Fabric Material	Lycra
Pole Material	Aluminum (1.5mm thickness)
UV Protection	UPF 50+
Water Resistance Level	Not Water Resistant (designed for sun protection)
Assembly Required	Yes

Stable With 2 Thicker Poles



1.5mm

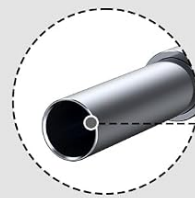

1.2mm

Hold the middle of the pole to stand it up

Image: Key dimensions and portability features of the tent.

Make Your Own Sun Shelter

Enjoy the perfect shelter outdoor



Image: Detail showing the enhanced thickness of the support poles.

9. WARRANTY AND SUPPORT

For warranty information or product support, please contact Vibemo customer service. Keep your purchase receipt as proof of purchase.

Visit the official Vibemo store for more products and information: [Vibemo Store](#)

© 2024 Vibemo. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CQNT7NH3>

More documents and user manuals: <https://manuals.plus/>