

- Manuals.plus /
- › CHROX /
- › CHROX HK1 RBOX K8 Android 13.0 TV Box User Manual

CHROX HK1 RBOX K8

CHROX HK1 RBOX K8 Android 13.0 TV Box User Manual

Model: HK1 RBOX K8

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your CHROX HK1 RBOX K8 Android 13.0 TV Box. This device is designed to transform your television into a smart entertainment hub, offering access to various streaming services, applications, and media playback capabilities. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.



Image 1.1: CHROX HK1 RBOX K8 Android TV Box, standard remote control, and wireless mini keyboard.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any items are missing or damaged, please contact customer support.

- 1x CHROX HK1 RBOX K8 Android 13.0 TV Box
- 1x Remote Control
- 1x HD Cable (HDMI Cable)
- 1x Power Adapter (DC 5V/2.5A)
- 1x User Manual (this document)
- 1x Wireless Mini Keyboard

Package Contents



Power Supply



HD Cable



Remote Control



User Manual

Image 2.1: Visual representation of the CHROX HK1 RBOX K8 package contents.

3. PRODUCT OVERVIEW

3.1. Device Features

The CHROX HK1 RBOX K8 is equipped with advanced features for a superior media experience:

- **Operating System:** Android 13.0
- **Processor:** RK3528 Quad-Core 64bit Cortex-A53 CPU
- **Graphics:** Mali-450 Penta-Core GPU
- **Memory:** 4GB SDRAM
- **Storage:** 32GB ROM FLASH (expandable via Micro SD card)
- **Wireless Connectivity:** Dual-band 2.4G/5G WiFi 6 (802.11 a/b/g/n), Bluetooth 5.0
- **Video Decoding:** Supports 4K VP9, H.265/H.264, 8K video decoding, HDR10
- **Ethernet:** 10/100M Standard RJ-45



Image 3.1: Key features of the HK1 RBOX K8 Android TV Box.

3.2. Ports and Interfaces

Familiarize yourself with the various ports on your TV Box:

- **USB 3.0:** 1 port for high-speed data transfer.
- **USB 2.0:** 1 port for connecting peripherals.
- **HDMI 2.0a:** 1 port for video output up to 4K@60Hz.
- **AV:** 1 port for analog audio/video output.
- **Micro SD Card Reader:** 1 slot for expandable storage.
- **Power DC 5V/2.5A:** 1 port for power input.
- **LAN (Ethernet):** 1 port for wired network connection.
- **SPDIF:** 1 port for digital audio output.

HDR+ High Dynamic Range

Make the picture display more vivid and beautiful

NO HDR10

HDR10



Image 3.2: Overview of the CHROX HK1 RBOX K8 interfaces.

4. SETUP GUIDE

4.1. Connecting the TV Box

1. **Connect to TV:** Use the provided HDMI cable to connect the HDMI port on the TV Box to an HDMI input port on your television.
2. **Connect Power:** Plug the power adapter into the DC 5V port on the TV Box, then plug the adapter into a wall outlet.
3. **Power On:** The TV Box should automatically power on, or you may need to press the power button on the remote control.
4. **Select Input:** On your television, select the correct HDMI input source using your TV's remote control.

4.2. Initial Setup and Network Connection

1. **Language Selection:** Follow the on-screen prompts to select your preferred language.

2. Network Connection:

- **Wi-Fi:** Go to *Settings > Network & Internet > Wi-Fi*. Select your Wi-Fi network from the list, enter the password, and connect. The device supports dual-band 2.4G/5G WiFi 6 for faster and more reliable connections.
- **Ethernet (Wired):** Connect an Ethernet cable from your router to the LAN port on the TV Box. The device will automatically detect and connect to the wired network.

3. **Time Zone:** Set the correct time zone for your location.

4. **Google Account:** Sign in with your Google account to access the Google Play Store and other Google services.



Image 4.1: The TV Box supports WiFi 6 and Bluetooth 5.0 for enhanced connectivity.

5. OPERATING INSTRUCTIONS

5.1. Using the Remote Control and Mini Keyboard

The TV Box comes with a standard IR remote control and a wireless mini keyboard for navigation.

- **Standard Remote:** Use the directional pad (up, down, left, right) and the "OK" button to navigate menus. The "Back" button returns to the previous screen, and the "Home" button returns to the main interface.
- **Wireless Mini Keyboard:** Connect the USB dongle of the mini keyboard to one of the USB ports on the TV Box. This keyboard provides a full QWERTY layout and a touchpad for easier text input and navigation, especially useful for web browsing and app searches.

5.2. Media Playback

The CHROX HK1 RBOX K8 supports a wide range of media formats and resolutions.

- **Video Formats:** Avi, Ts, Vob, Mkv, Mov, ISO, wmv, asf, flv, dat, mpg, mpeg.
- **Audio Formats:** MP3, WMA, AAC, WAV, OGG, DDP, HD, FLAC, APE.
- **Photo Formats:** HD JPEG, BMP, GIF, PNG, TIFF.
- **High Resolution Support:** Enjoy content in 4K, 8K, and with HDR10 for enhanced visual quality. The device utilizes H.265 decoding for efficient playback of high-definition content.



Image 5.1: The TV Box supports 8K video decoding for superior image quality.

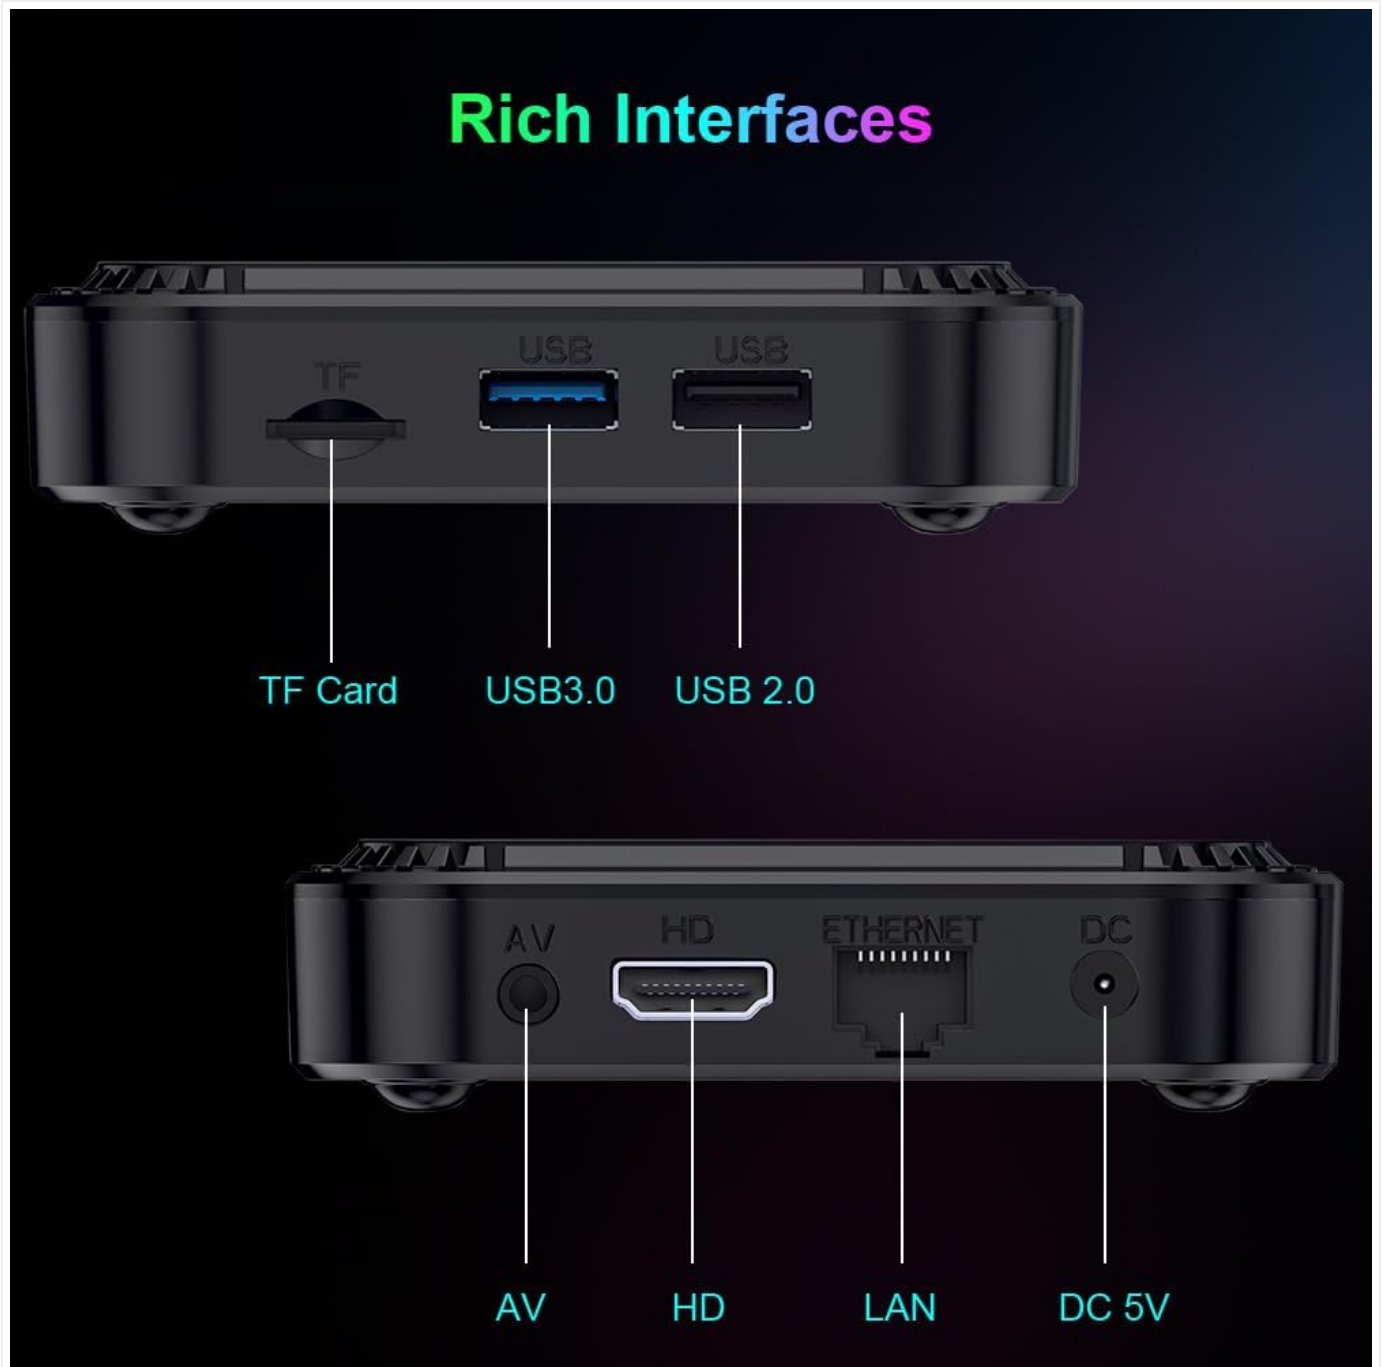


Image 5.2: HDR10 support provides a wider range of colors and deeper contrast.

5.3. Installing Applications

Access the Google Play Store to download and install a variety of applications, including streaming services, games, and utilities.

1. From the home screen, navigate to the *Google Play Store* icon.
2. Browse or search for your desired application.
3. Select the app and click *Install*.
4. Once installed, the app will appear on your home screen or in the app drawer.

6. SPECIFICATIONS

Detailed technical specifications for the CHROX HK1 RBOX K8 Android 13.0 TV Box:

Feature	Specification
Operating System	Android 13.0
CPU	RK3528 Quad-Core 64bit Cortex-A53
GPU	Mali-450 Penta-Core
SDRAM	4GB
ROM FLASH	32GB
Wi-Fi	2.4G/5G Dual-band WiFi 6 (802.11 a/b/g/n)
Bluetooth	4.0 (Note: Product description states 5.0, but specifications list 4.0. Please refer to product packaging for definitive version.)
LAN Ethernet	10/100M Standard RJ-45
USB Ports	1x USB 3.0, 1x USB 2.0
HDMI Output	HDMI 2.0a for 4K@60Hz
Video Decoder	4K VP9, H.265/H.264, 1080P (VC-1, MPEG-1/2/4, VP6/8)
Power Supply	DC 5V/2.5A
Supported Languages	English, French, German, Spanish, Italian, etc.

Rockchip RK3528

Strong performance, providing you with the best experience



Quad Core
Cortex-A53



Mali-450



2G+16G
4G+32/64G/128G



Image 6.1: Internal components and memory configurations of the HK1 RBOX K8.

7. MAINTENANCE

To ensure the longevity and optimal performance of your CHROX HK1 RBOX K8 TV Box, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the device. Avoid using liquid cleaners or abrasive materials.
- **Ventilation:** Ensure the TV Box is placed in a well-ventilated area to prevent overheating. Do not block ventilation openings.
- **Software Updates:** Periodically check for system updates in the *Settings* menu to ensure you have the latest features and security patches.
- **Power Cycle:** If the device becomes unresponsive, disconnect the power adapter, wait 10 seconds, and then reconnect it to perform a power cycle.
- **Storage Management:** Regularly clear cache and uninstall unused applications to free up storage space and improve performance.

8. TROUBLESHOOTING

If you encounter issues with your TV Box, refer to the following common problems and solutions:

Problem	Solution
No Power	<ul style="list-style-type: none">◦ Ensure the power adapter is securely connected to the TV Box and a working power outlet.◦ Verify the power outlet is functional.◦ Try pressing the power button on the remote control.
No Picture on TV	<ul style="list-style-type: none">◦ Check if the HDMI cable is securely connected to both the TV Box and the TV.◦ Ensure your TV is set to the correct HDMI input source.◦ Try a different HDMI cable or HDMI port on your TV.
No Wi-Fi Connection	<ul style="list-style-type: none">◦ Go to <i>Settings > Network & Internet > Wi-Fi</i> and ensure Wi-Fi is enabled.◦ Verify you have entered the correct Wi-Fi password.◦ Restart your router and the TV Box.◦ Ensure the TV Box is within range of your Wi-Fi router.
Remote Control Not Working	<ul style="list-style-type: none">◦ Check and replace the batteries in the remote control.◦ Ensure there are no obstructions between the remote and the TV Box.◦ For the wireless mini keyboard, ensure its USB dongle is properly inserted into a USB port on the TV Box.
Slow Performance / Freezing	<ul style="list-style-type: none">◦ Close unused applications running in the background.◦ Clear the cache of frequently used applications (<i>Settings > Apps > [App Name] > Clear Cache</i>).◦ Consider performing a factory reset if issues persist (<i>Settings > System > Reset options > Erase all data (factory reset)</i>). Note: This will delete all user data.

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or contact CHROX customer service directly.

Online Support: Visit the official CHROX website for FAQs, software updates, and additional support resources.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CQP3WGXJ>

More documents and user manuals: <https://manuals.plus/>