

[Manuals.plus](#) /

> [UPBRIGHT](#) /

> UpBright 18V AC/DC Adapter User Manual for JVC RD-HA3 Series

UPBRIGHT UpBright 18V AC/DC Adapter

UpBright 18V AC/DC Adapter User Manual

Compatible with JVC RD-HA3, RD-HA3B, RD-HA3W Series

1. INTRODUCTION

This manual provides instructions for the safe and effective use of your UpBright 18V AC/DC Adapter. This adapter is designed to provide reliable power to compatible devices, including JVC RD-HA3, RD-HA3B, RD-HA3W CD Portable Systems, USB Disc Digital Audio Players, Radio Boomboxes, and JVC AA-R1807, AA-R1802 power supplies. Please read this manual thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

- Ensure the adapter's voltage and current ratings match your device's requirements.
- Do not expose the adapter to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the adapter to strong impacts.
- Do not attempt to disassemble or modify the adapter. This may void the warranty and pose a safety risk.
- Unplug the adapter from the power outlet when not in use for extended periods.
- Keep out of reach of children.
- If the adapter or cable is damaged, discontinue use immediately and seek a replacement.

3. PACKAGE CONTENTS


Verify that all items are present in your package:

- 1 x UpBright 18V AC/DC Adapter
- 1 x Appropriate regional power plug (if applicable for international orders)



Image: The UpBright 18V AC/DC Adapter featuring a standard US plug and attached power cord with a barrel round connector.

Come With A Suitable Outlet Adapter (Only One) to Fit Your Country/Area For International Order

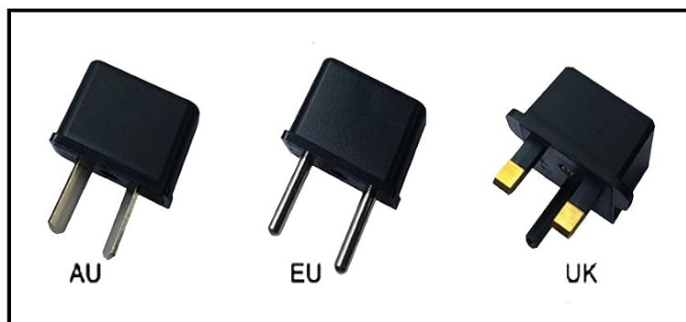

THIS PRODUCT COMES WITH A UPBRIGHT®

LIMITED WARRANTY CERTIFICATE
+ UPBRIGHT® LIMITED WARRANTY



Image: Examples of international power plugs (AU, EU, UK) that may be included with the adapter for international orders, alongside a representation of the UpBright Limited Warranty Certificate.

4. SETUP

Follow these steps to connect your UpBright AC/DC Adapter to your device:

1. **Identify the Power Input:** Locate the DC power input port on your JVC RD-HA3 series device. This port is typically a round socket.
2. **Connect the Adapter to the Device:** Carefully insert the barrel round connector of the UpBright adapter into the DC power input port of your JVC device. Ensure a firm and secure connection.
3. **Connect to Power Outlet:** Plug the AC end of the adapter into a standard wall power outlet (100-240VAC, 50/60Hz).
4. **Verify Connection:** Once connected, your device should receive power. Refer to your device's manual for specific power indicator lights or startup procedures.



Image: A side view of the UpBright 18V AC/DC Adapter, showing the compact design of the power brick and the attached cable.

5. OPERATING INSTRUCTIONS

Once properly connected, the UpBright 18V AC/DC Adapter will continuously supply 18V DC power to your compatible JVC device. No further operation is required for the adapter itself. The adapter is designed for continuous use within its specified voltage and current limits.

- The adapter features Over Voltage Protection (OVP), Over Current Protection (OCP), and Short Circuit Protection (SCP) to

safeguard both the adapter and your connected device.

- Ensure adequate ventilation around the adapter during operation to prevent overheating.

6. MAINTENANCE

To ensure the longevity and optimal performance of your UpBright AC/DC Adapter:

- **Cleaning:** Disconnect the adapter from both the power outlet and your device before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or solvents.
- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures when not in use. Avoid tightly coiling the cable to prevent damage.
- **Inspection:** Periodically inspect the cable and connector for any signs of wear, cuts, or damage. If damage is observed, discontinue use.

7. TROUBLESHOOTING

If you encounter issues with your adapter, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Device not powering on	Adapter not properly connected to device or outlet.	Ensure both ends of the adapter are securely plugged in. Try a different power outlet.
Device not powering on	Power outlet is not functional.	Test the power outlet with another known working appliance.
Device not powering on	Adapter or device is faulty.	If possible, test the adapter with another compatible device, or test your device with another known working adapter. If the adapter is faulty, refer to warranty information.
Adapter feels hot	Normal operation or lack of ventilation.	A slight warmth is normal. Ensure the adapter is in a well-ventilated area and not covered. If it's excessively hot, unplug it immediately and contact support.

8. SPECIFICATIONS

- **Input Voltage:** 100-240VAC, 50/60Hz
- **Output Voltage:** 18V DC
- **Connector Type:** Barrel Round Connector
- **Protection Features:** Over Voltage Protection (OVP), Over Current Protection (OCP), Short Circuit Protection (SCP)
- **Product Dimensions:** Approximately 4 x 3 x 2 inches
- **Item Weight:** Approximately 4 ounces
- **Compatible Devices:** JVC RD-HA3, RD-HA3B, RD-HA3W, RDHA3, RDHA3B, RDHA3W CD Portable System USB Disc Digital Audio Player Radio Boombox, JVC AA-R1807, AA-R1802 Power Supplies

9. WARRANTY AND SUPPORT

Your UpBright 18V AC/DC Adapter comes with the following warranty and support:

- **Refund Policy:** 30 days refund period from the date of purchase.
- **Exchange Policy:** 24 months exchange period from the date of purchase for manufacturing defects.

For technical support or warranty claims, please contact UpBright customer service through your retailer or the official UpBright website.

© 2026 UpBright. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CQP5S218>

More documents and user manuals: <https://manuals.plus/>