

Manuals.plus /

› Smoby /

› Smoby 4 Seasons Playhouse (Model 7600810731) Instruction Manual

## Smoby 7600810731

# Smoby 4 Seasons Playhouse (Model 7600810731) Instruction Manual

Brand: Smoby

## INTRODUCTION

---

This manual provides essential information for the assembly, operation, and maintenance of your Smoby 4 Seasons Playhouse, model 7600810731. Please read these instructions carefully before assembly and retain them for future reference.

## SAFETY INFORMATION

---

- **Adult Supervision Required:** Always ensure children are supervised by an adult while playing with the playhouse.
- **Age Recommendation:** Suitable for children aged 2 years and older.
- **Outdoor Use Only:** This playhouse is designed for outdoor use.
- **Stable Surface:** Assemble the playhouse on a flat, level, and stable surface to prevent tipping.
- **Clear Area:** Ensure there is sufficient clear space around the playhouse to prevent injuries.
- **Regular Inspection:** Periodically check all parts for wear, damage, or loose connections. Replace damaged parts immediately.
- **Small Parts Warning:** Keep small parts away from young children during assembly to avoid choking hazards.

## PARTS LIST

---

Before beginning assembly, verify that all components are present and undamaged. Refer to the packaging for a complete list of parts. The main components include:

- Wall panels (various designs)

- Roof panels
- Door and window elements
- Weathervane assembly
- Rain gauge
- Wind chimes
- Weather board (playful chart)
- Fasteners and connectors



Figure 1: Overview of the Smoby 4 Seasons Playhouse with its interactive features.

## ASSEMBLY INSTRUCTIONS

Assembly requires adult supervision and may be easier with two people. Follow the steps below carefully.

1. **Prepare the Area:** Choose a flat, level, and clear outdoor space for assembly.
2. **Assemble Wall Panels:** Connect the wall panels according to the diagrams provided in the

manufacturer's detailed instructions (refer to the packaging or manufacturer's website for specific diagrams). Ensure all connections are secure.

3. **Install Door and Windows:** Attach the door and window elements to their designated openings. The playhouse features a half-door and sliding shutters for windows.
4. **Attach Roof:** Secure the roof panels to the top of the assembled walls.
5. **Install Weathervane and Anemometer:** Mount the weathervane and anemometer assembly onto the peak of the roof. This allows children to observe wind direction and speed.
6. **Attach Rain Gauge:** Secure the rain gauge to the designated spot on the playhouse, typically near the roof edge, to collect and measure rainfall.
7. **Hang Wind Chimes:** Attach the wind chimes to the designated hooks on the playhouse.
8. **Mount Weather Board:** Install the interactive weather board on the exterior wall. This board allows children to manually indicate the current weather conditions.
9. **Final Check:** Ensure all parts are securely fastened and the playhouse is stable before allowing children to play.



Figure 2: Detailed view of the interactive weather features.

Your browser does not support the video tag.

Video 1: This video demonstrates the various interactive features of the Smoby 4 Seasons Playhouse, including the

## OPERATING INSTRUCTIONS (FEATURES)

---

The Smoby 4 Seasons Playhouse is designed with several interactive elements to engage children in learning about weather and seasons.

- **Weathervane and Anemometer:** The weathervane on the roof indicates wind direction, while the cups of the anemometer spin with wind speed. Encourage children to observe and discuss these changes.
- **Rain Gauge:** The transparent rain gauge collects rainwater, allowing children to measure precipitation. Explain how to read the measurements.
- **Wind Chimes:** The wind chimes produce gentle sounds when the wind blows, adding an auditory element to outdoor play.
- **Weather Board:** The interactive weather board features sliders or indicators that children can adjust to represent the current weather (e.g., sunny, cloudy, rainy) and season.
- **Door and Windows:** The half-door allows easy entry and exit, while the sliding shutters on the windows can be opened or closed for imaginative play and ventilation.

## MAINTENANCE

---

- **Cleaning:** Clean the playhouse regularly with a damp cloth and mild soap. Avoid abrasive cleaners or solvents.
- **Inspection:** Periodically check all screws, bolts, and connections to ensure they are tight. Inspect plastic parts for cracks or damage.
- **UV Protection:** The plastic is treated with anti-UV to ensure color durability over time. However, prolonged exposure to extreme weather conditions may still affect its appearance.
- **Winter Storage:** While designed for outdoor use, consider storing the playhouse indoors or covering it during harsh winter conditions to extend its lifespan.

## TROUBLESHOOTING

---

If you encounter any issues with your Smoby 4 Seasons Playhouse, refer to the following common solutions:

- **Unstable Structure:** Ensure the playhouse is assembled on a completely flat surface. Recheck all connections and tighten any loose fasteners.
- **Parts Not Fitting:** Double-check the assembly instructions and diagrams. Ensure you are using the correct parts for each step. Do not force parts together.
- **Weathervane/Anemometer Not Moving:** Check for any obstructions or debris. Ensure the parts are correctly installed and can rotate freely.
- **Missing Parts:** If any parts are missing upon unboxing, contact Smoby customer service immediately.

## SPECIFICATIONS

---

Feature	Detail
Model Number	7600810731
Brand	Smoby
Dimensions (L x W x H)	102.7 x 121.8 x 143.4 cm (40.4 x 48 x 56.5 inches)
Weight	1 kg (2.2 lbs) <i>Note: This weight seems unusually low for a playhouse. Please verify with product packaging.</i>
Material	Plastic (Anti-UV treated)
Age Recommendation	24 months - 2 years (or 2+ years)
Educational Objectives	Learning about seasons and weather
Assembly Required	Yes
Batteries Required	No
Country of Origin	France

**Vérifiez la compatibilité**  Compatible  Déjà inclus  Incompatible

<input checked="" type="checkbox"/> Sonnette 810917	<input checked="" type="checkbox"/> Set de 6 dalles 810907	<input checked="" type="checkbox"/> Douchette 810914	<input checked="" type="checkbox"/> Table Pique-Nique 810920
<input checked="" type="checkbox"/> Jardinière Eden 810915	<input checked="" type="checkbox"/> Bac Square Garden 850208	<input checked="" type="checkbox"/> Kit Météo 810916	<input checked="" type="checkbox"/> Parasol 810911
<input checked="" type="checkbox"/> Cuisine d'été 810918	<input checked="" type="checkbox"/> Récupérateur d'eau 810909	<input checked="" type="checkbox"/> Lampe solaire nomade 810910	<input checked="" type="checkbox"/> Set tiroir jeux 810913

Figure 3: Dimensional diagram of the playhouse.

## OPTIONAL ACCESSORIES

The Smoby 4 Seasons Playhouse can be enhanced with various compatible accessories (sold separately). Please check compatibility before purchasing.

# LES ACCESSOIRES DE MAISONS SMOBY



Figure 4: Compatibility chart for Smoby playhouse accessories.

## WARRANTY AND SUPPORT

For warranty information, customer support, or to order replacement parts, please refer to the contact details provided on the product packaging or visit the official Smoby website. Keep your proof of purchase for warranty claims.