

## Theefun T29-6634N-10

# Theefun Bubble Machine

MODEL: T29-6634N-10

## Introduction

This manual provides instructions for the safe and efficient operation of your Theefun Bubble Machine (Model T29-6634N-10). Please read all instructions carefully before use to ensure proper functionality and to prevent damage or injury. This automatic bubble blower is designed to produce a high volume of bubbles for various indoor and outdoor events.

## Safety Information

- Keep the bubble machine away from water or other liquids, except for the bubble solution in the designated reservoir.
- Do not ingest bubble solution. In case of accidental ingestion, seek medical attention immediately.
- Always supervise children and pets when the bubble machine is in operation.
- Use only the recommended power sources (4 AA batteries or USB power).
- Keep hands and foreign objects clear of the spinning wands and fan during operation.
- The machine is constructed from high-quality ABS material for durability and rust protection, and holds official certification for safety.

## Package Contents

Verify that all items are present in your package:

- 1 x Theefun Bubble Machine
- 1 x USB Cable
- 1 x User Manual

*Note: 4 AA batteries, a USB power adapter, and bubble solution are not included and must be purchased separately.*

## Setup

### 1. Install Batteries or Connect USB:

Open the battery compartment on the bottom of the unit. Insert 4 AA batteries (not included), ensuring correct polarity. Alternatively, connect the provided USB cable to the machine and a USB power source (e.g., power bank, USB adapter, car charger).



Image: Steps for installing batteries or connecting the USB cable.

### 2. Add Bubble Solution:

Carefully pour bubble solution into the reservoir. The machine has a 500ml capacity. Ensure at least 180ml of solution is added to cover the bubble wands for optimal performance.



Image: Pouring bubble solution into the reservoir.

### 3. Placement:

Place the bubble machine on a stable, level surface to prevent tipping and solution leakage.

## Operating Instructions

### 1. Turn On:

Locate the ON/OFF switch on the side of the machine. Flip the switch to the "ON" position.

# Safe for Kids



## Anti-Pinch Design

Image: Turning the power switch to the ON position.

### 2. Bubble Generation:

The internal motor will activate, and the 16 spinning wands will begin to produce bubbles automatically. The machine can generate up to 15,000 bubbles per minute.

## Portable Size



Image: The bubble machine in operation, producing a high volume of bubbles.

### 3. Turn Off:

To stop bubble generation, flip the ON/OFF switch to the "OFF" position.

### Official Product Video: Setup and Operation

Video: Demonstrates the setup process, including battery/USB connection, adding solution, and turning the machine on to generate bubbles.

## Power Options

The Theefun Bubble Machine offers versatile power options:

- **Battery Operated:** Requires 4 AA batteries (not included) for portable use in locations without access to power outlets.
- **USB Plug-in:** Can be powered directly via a USB cable (included) connected to a USB adapter (not included) for continuous operation.
- **Power Bank:** Connect the USB cable to a power bank (not included) for extended portable use.

Note: The USB cable is for direct power supply, not for charging internal batteries. The machine is not rechargeable.

## Powered in 3 Ways

- Note:** 1. The plug-in mode provides the strongest and most consistent bubble performance.  
2. The bubble machine is **non-rechargeable**.



USB Plug-in ( Adapter Not Included )



USB with Power Bank ( Power Bank Not Included )



4 AA Battery ( Batteries Not Included )

*Image: Visual representation of the three available power methods.*

## Maintenance

Proper maintenance ensures the longevity and optimal performance of your bubble machine:

- After each use, turn off the machine and disconnect the power source.
- Carefully wipe out any remaining bubble solution residue from the reservoir and external surfaces using a dry towel. This prevents erosion and buildup.
- Store the machine in a dry, cool place when not in use.
- No special care instructions are required beyond regular cleaning.

## Troubleshooting

Problem	Possible Cause	Solution
No bubbles or low output	Insufficient bubble solution; depleted batteries; loose USB connection.	Ensure bubble solution covers the wands (min. 180ml). Replace batteries or check USB connection.

Problem	Possible Cause	Solution
Machine not turning on	No power; switch in OFF position.	Check batteries or USB power. Ensure the ON/OFF switch is in the "ON" position.
Solution leakage	Improper installation or overfilling of reservoir; machine tilted or shaken.	Carefully inspect the container to ensure it is properly installed. Do not overfill. Keep the machine on a stable, level surface.

## Specifications

Feature	Detail
Brand	Theefun
Model Number	T29-6634N-10
Material Type	Plastic
Color	Black
Power Source	4 x AA Batteries (not included) or USB (cable included)
Operation Mode	Automatic
Reservoir Capacity	500ml (approx. 17oz)
Max Bubble Output	15,000 bubbles per minute
Continuous Use Time (500ml)	Up to 45+ minutes
Item Dimensions (L x W x H)	6.69" x 6.69" x 7.87"
Additional Features	Leak-Proof, Lightweight
Assembly Required	No

## Warranty and Support

For warranty information or technical support, please refer to the contact details provided on the product packaging or the official Theefun website. Keep your purchase receipt as proof of purchase.