

Farberware FMR12LPSS

Farberware Over-the-Range Microwave Oven User Manual

Model: FMR12LPSS

1. IMPORTANT SAFETY INFORMATION

Read all instructions carefully before using the microwave oven to prevent the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Always supervise children when the microwave is in use. The Child Safety Lock feature can be activated to prevent unintended operation.

2. PRODUCT OVERVIEW

The Farberware Over-the-Range Microwave Oven (Model: FMR12LPSS) is a compact and powerful appliance designed to maximize kitchen space while providing efficient cooking capabilities. With a 1.2 cubic feet capacity and 1000 watts of power, it offers a range of features for convenient meal preparation.



Figure 2.1: Front view of the Farberware Over-the-Range Microwave Oven, showcasing its sleek stainless steel design and control panel.

Key Features:

- **Space-Saving Design:** Compact 1.2 cu. ft. size, ideal for Over-the-Range installation, maximizing kitchen space.
- **High-Efficiency Cooking:** Delivers 1000W of power for fast, uniform heating and cooking.
- **Intelligent Sensor Technology:** Auto-adjusts settings for various foods, ensuring perfect cooking and reheating.
- **Diverse Cooking Modes:** Includes user-friendly options for popcorn, potatoes, scrambled eggs, and quick snacks.
- **Quick Melt/Soften Feature:** Simplifies preparing ingredients like butter and chocolate.
- **Targeted Defrosting Options:** Provides efficient defrosting by weight or time, plus an auto defrost setting.
- **Integrated Stovetop Light:** Offers additional visibility for safer cooking.
- **Powerful Vent Fan:** Effectively removes smoke and odors, keeping your kitchen environment fresh.
- **Adjustable Volume & Child Lock:** Customizable settings for alerts and added kitchen safety.
- **Modern LED Display:** Enhances the kitchen's look while providing vital cooking information.

10


POWER LEVELS



COOKTOP LIGHTING

10

COOKING PROGRAMS

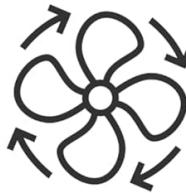

VENTILATION SYSTEM

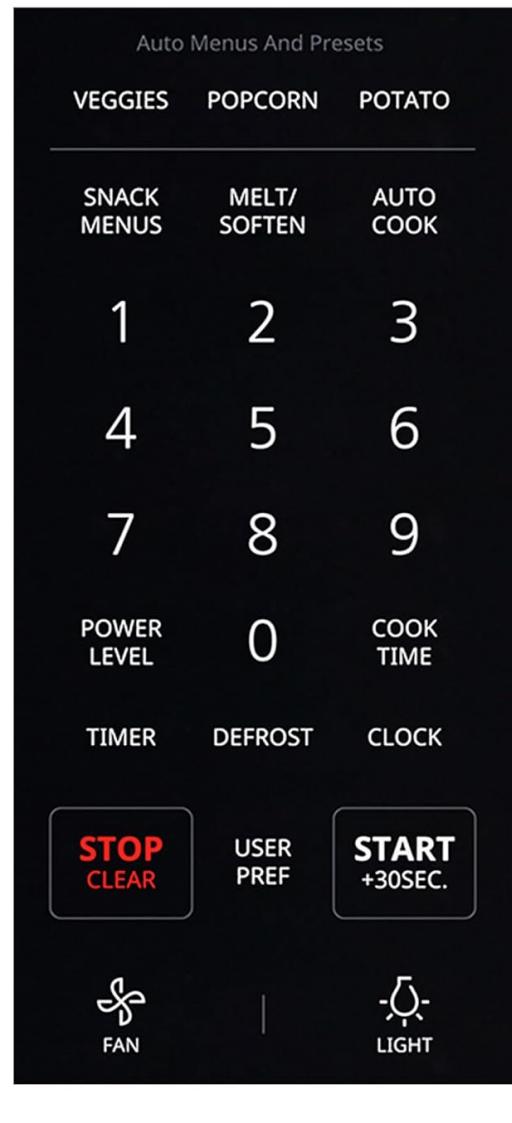


Figure 2.2: Overview of key features including power levels, cooking programs, cooktop lighting, and ventilation system.

3. INSTALLATION

This Farberware microwave oven is designed for over-the-range installation. Due to its weight and the complexity of electrical and ventilation connections, professional installation is highly recommended. Ensure that the installation area meets the specified dimensions and electrical requirements.

- Dimensions:** The product dimensions are approximately 18.62 inches (Depth) x 29.88 inches (Width) x 10.31 inches (Height). Verify that your cabinet and wall space can accommodate these measurements.
- Electrical Requirements:** The unit operates on 120V AC and requires a dedicated 20-amp circuit. Consult a qualified electrician if your current setup does not meet these specifications.
- Ventilation:** The microwave features a powerful vent fan. Ensure proper ducting is available for external venting, or prepare for recirculation if external venting is not an option.

MATCHES ALL TYPES OF DECOR



Figure 3.1: The microwave installed over a range, demonstrating its space-saving design and integration into kitchen decor.

Refer to the detailed installation template and instructions provided in the separate installation guide for precise mounting and wiring procedures.

4. INITIAL SETUP

After installation, perform the following steps for initial setup:

- 1. Power On:** Plug the microwave into a grounded electrical outlet. The LED display will illuminate.
- 2. Set Clock:** Press the "Timer/Clock" button. Use the number pad to enter the current time. Press "Timer/Clock" again to confirm.
- 3. Turntable Placement:** Ensure the glass turntable and its support ring are correctly seated inside the oven cavity.

LARGE AND EASY TO CLEAN INTERIOR



Figure 4.1: Interior of the microwave, highlighting the spacious cavity and turntable.

4. **Adjust Volume (Optional):** If available, use the "User Pref" or similar button to adjust the volume of alerts and beeps.
5. **Child Safety Lock:** To activate the child safety lock, press and hold the "Stop/Clear" button for 3 seconds. A lock indicator will appear on the display. Repeat to deactivate.

CHILD SAFETY LOCK OPTION



Figure 4.2: Visual representation of the Child Safety Lock feature.

5. OPERATING INSTRUCTIONS

Basic Microwave Cooking:

1. Place food in a microwave-safe container on the turntable.
2. Enter desired cooking time using the number pad.
3. Press "Start/+30 Sec." to begin cooking at full power (1000W).

Adjusting Power Level:

To cook at a lower power level:

1. Enter desired cooking time.
2. Press "Power Level".
3. Enter the desired power level (1-10, where 10 is 100% power).
4. Press "Start/+30 Sec.".

One-Touch Cooking Programs:

The microwave features pre-programmed settings for common food items:

- **Popcorn:** Press "Popcorn" button.
- **Potato:** Press "Potato" button.
- **Snack Menus:** Access various snack options via the "Snack Menus" button.
- **Auto Cook:** For specific dishes like scrambled eggs, use the "Auto Cook" feature.

Sensor Cooking & Reheat:

The intelligent sensor technology automatically adjusts cooking time and power for optimal results.

- **Sensor Reheat:** Press "Sensor Reheat" for automatic reheating of various foods.
- **Sensor Cook:** Press "Sensor Cook" for automatic cooking of items like vegetables.

Melt/Softens Feature:

Use the "Melt/Softens" button to easily melt or soften ingredients like butter, chocolate, or cream cheese.

Defrosting Options:

The microwave offers multiple defrosting methods:

- **Weight Defrost:** Enter the weight of the food for precise defrosting.
- **Time Defrost:** Manually set the defrosting time.
- **Auto Defrost:** Utilizes sensor technology for automatic defrosting.



DEFROST WITH EASE

Figure 5.1: Defrosting options on the control panel for convenient food preparation.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

- **Interior Cleaning:** Wipe the interior cavity with a damp cloth and mild detergent after each use. For stubborn stains, place a bowl of water with lemon slices inside and microwave for a few minutes to loosen residue, then wipe clean.
- **Exterior Cleaning:** Clean the exterior surfaces, including the control panel and stainless steel finish, with a soft, damp cloth. Avoid abrasive cleaners or scouring pads.
- **Turtable:** The glass turntable and support ring can be removed and washed with warm, soapy water or in the dishwasher.
- **Grease Filters:** The microwave is equipped with grease filters for the vent fan. Refer to the installation guide for instructions on how to remove and clean these filters regularly (typically monthly, depending on usage).
- **Charcoal Filter (if applicable):** If your model uses a charcoal filter for recirculation, replace it periodically as recommended in the installation guide.

7. TROUBLESHOOTING

Before contacting customer service, try the following solutions for common issues:

Problem	Possible Cause	Solution
Oven will not start.	Door is not closed securely. Power cord is unplugged. Fuse is blown or circuit breaker tripped.	Ensure door is firmly closed. Check power cord connection. Check household fuse/circuit breaker.
Food is not heating.	Incorrect cooking time or power level set. Door not closed properly.	Increase cooking time/power. Ensure door is fully latched.
Light bulb not working.	Light bulb is loose or burned out.	Tighten or replace the bulb. Refer to the manual for bulb replacement instructions.
Turntable not rotating.	Turntable is not properly seated. Debris under the turntable. Turntable motor malfunction.	Ensure turntable and ring are correctly placed. Clean under the turntable. Contact service if issue persists.
Excessive noise during operation.	Food container touching oven walls. Turntable not seated correctly.	Adjust food container. Re-seat turntable.

8. SPECIFICATIONS

Brand:	Farberware
Model Number:	FMR12LPSS
Capacity:	1.2 Cubic Feet
Wattage:	1000 watts
Voltage:	120 Volts (AC) <small>(Typical for household appliances)</small>
Product Dimensions (D x W x H):	18.62 x 29.88 x 10.31 inches
Item Weight:	60.9 pounds
Color:	Stainless Steel
Material:	Stainless Steel
Installation Type:	Over-the-Range

Special Feature:

Child Safety Lock

9. WARRANTY AND SUPPORT


Farberware products are manufactured to high-quality standards. This product is covered by a limited manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including warranty period and coverage details.

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Farberware Customer Support. Contact information can typically be found on the manufacturer's official website or on the product packaging.

When contacting support, please have your model number (FMR12LPSS) and purchase date available.

© 2024 Farberware. All rights reserved.

Documents - Farberware – FMR12LPSS

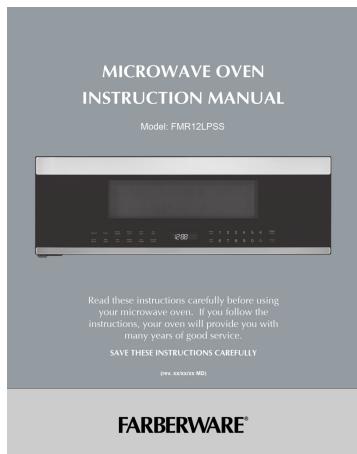

[\[pdf\]](#) User Manual Instructions Specifications Warranty Catalog

MICROWAVE OVEN INSTRUCTION MANUAL Fill a microwave safe container with 1 cup or cold water 250ml along the utensil in question 2 Cook on maximum power for minute 3 Carefully feel 44882b5d 8c24 454a b470 883be4ba8fde images thdstatic catalog Images 44 |||

MICROWAVE OVEN INSTRUCTION MANUAL Model: **FMR12LPSS** Read these instructions carefully before using your microwave oven. If you follow the instructions, your oven will provide you with many years of good service. **SAVE THESE INSTRUCTIONS CAREFULLY** rev. xx/xx/xx MD Farberware is a registered trademark... lang:en score:35 filesize: 1.05 M page_count: 25 document date: 2023-07-31