



Manuals.plus /

- › Hoover /
- › Hoover PowerScrub Deluxe Carpet Cleaner Machine User Manual

## Hoover FH50150NC

# Hoover PowerScrub Deluxe Carpet Cleaner Machine User Manual

Model: FH50150NC

Includes: Hoover Everyday Solution, 128 oz Formula, AH30932

## INTRODUCTION

---

This manual provides essential instructions for the safe and effective operation, maintenance, and troubleshooting of your Hoover PowerScrub Deluxe Carpet Cleaner Machine. Please read all instructions carefully before using the appliance.

The Hoover PowerScrub Deluxe Carpet Cleaner is designed to provide a deep clean for carpets, rugs, and upholstery. It features SpinScrub Brushes for effective stain removal and HeatForce Technology for faster drying.



Image: The Hoover PowerScrub Deluxe Carpet Cleaner Machine shown alongside a bottle of Hoover Everyday Solution.

## IMPORTANT SAFETY INFORMATION

---

Always follow basic safety precautions when using an electrical appliance to reduce the risk of fire, electric shock, or injury.

- Read all instructions before use.
- Use only as described in this manual.
- Do not leave appliance unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Connect to a properly grounded outlet only. See grounding instructions.
- Use only Hoover cleaning products intended for use with this machine.

## SETUP AND ASSEMBLY

---

### 1. Unpacking

Carefully remove all components from the packaging. Ensure all parts listed in the product manual are present. Retain packaging for future storage or transport.

## 2. Assembling the Handle

Insert the handle assembly into the main body of the cleaner until it clicks securely into place. Ensure it is firmly seated before proceeding.

## 3. Filling the Clean Water Tank

1. Remove the clean water tank from the unit.
2. Unscrew the cap and fill the tank with warm tap water up to the indicated fill line.
3. Add the recommended amount of Hoover Everyday Solution (or other compatible Hoover cleaning solution) to the solution compartment of the tank. Refer to the solution bottle for specific dilution instructions.
4. Securely replace the cap and reinsert the clean water tank onto the unit until it locks into position.



Image: The dirty water tank being emptied into a sink, highlighting the easy-to-clean design.

## 1. Pre-Cleaning Steps

- **Vacuum Thoroughly:** Before using the carpet cleaner, vacuum the area to be cleaned to remove loose dirt and debris.
- **Test in an Inconspicuous Area:** Always test the cleaning solution and machine on a small, hidden area of the carpet or upholstery for colorfastness and fabric compatibility.

## 2. Carpet Cleaning

1. Plug the cleaner into a grounded electrical outlet.
2. Press the power button to turn on the unit.
3. Press the solution trigger on the handle and make a slow forward pass over the carpet. Release the trigger and make a slow backward pass over the same area to extract the dirty water.
4. Overlap passes slightly to ensure complete coverage. Continue until the dirty water tank appears clear, indicating the carpet is clean.
5. The HeatForce technology assists in faster drying of the cleaned area.



Image: The Hoover PowerScrub Deluxe in action, demonstrating its powerful suction on a carpet.

# FASTER DRYING WITH HEATED CLEANING



Image: A close-up view of the cleaner's base, highlighting the HeatForce feature for faster drying.



**TOUGH ON STAINS.  
GENTLE ON CARPETS.**

Image: A detailed view of the five SpinScrub brushes, designed to loosen dirt and debris effectively.

### **3. Upholstery and Stairs Cleaning**

1. Attach the desired cleaning tool (e.g., upholstery tool) to the end of the accessory hose.
2. Spray cleaning solution by pressing the trigger on the tool and gently scrub the surface.
3. Release the trigger and apply downward pressure while pulling the tool towards you to extract the dirty water.
4. Repeat as necessary, ensuring not to over-wet the fabric.

# CLEANS MORE THAN JUST YOUR CARPET



Image: A user cleaning upholstery with the included hose and tool, demonstrating the versatility of the cleaner.

## MAINTENANCE

---

### 1. Emptying and Cleaning the Dirty Water Tank

After each use, or when the dirty water tank reaches its maximum fill line, it must be emptied and rinsed.

1. Remove the dirty water tank from the unit.
2. Open the tank's emptying spout and pour out the dirty water.
3. Rinse the tank thoroughly with clean water.
4. Allow the tank to air dry before reattaching it to the unit.

### 2. Cleaning the SpinScrub Brushes and Nozzle

Regularly inspect and clean the brushes and nozzle for any trapped debris or hair to maintain optimal cleaning performance.

- Turn off and unplug the cleaner.

- Remove the nozzle cover to access the brushes.
- Remove any hair or debris wrapped around the SpinScrub brushes. The brushes can be removed for deeper cleaning if necessary.
- Rinse the nozzle cover under running water to clear any blockages.
- Reassemble all parts once clean and dry.

### 3. Storage

Store the cleaner in a dry, indoor area. Ensure both clean and dirty water tanks are empty and clean before storage.

## TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; circuit breaker tripped; power switch off.	Ensure plug is firmly in outlet; check circuit breaker; turn power switch to ON.
No suction.	Dirty water tank not properly seated; tank full; nozzle clogged; hose not properly attached.	Reseat dirty water tank; empty tank; clean nozzle; ensure hose is securely connected.
No solution dispensing.	Clean water tank empty; solution tank not properly seated; solution nozzle clogged.	Refill clean water tank; reseal solution tank; clean solution nozzle.
Poor cleaning performance.	Brushes clogged with hair/debris; incorrect cleaning solution; too fast passes.	Clean brushes; use recommended Hoover solution; make slower passes.

If the problem persists after attempting these solutions, please contact Hoover Customer Support.

## PRODUCT SPECIFICATIONS

**Brand:** Hoover

**Model Name:** Hoover PowerScrub Deluxe

**Item Model Number:** FH50150NC

**Color:** White

**Style:** PowerScrub Deluxe & Everyday Solution

**Capacity:** 8 Pounds

**ASIN:** B0CQPN89SS

**First Available:** December 20, 2023

## WARRANTY AND CUSTOMER SUPPORT

For warranty information, product registration, or technical assistance, please visit the official Hoover website or contact their customer support line. Keep your purchase receipt as proof of purchase for warranty claims.

**Hoover Official Website:** [www.hoover.com](http://www.hoover.com)

**Customer Support:** Refer to the Hoover website for current contact information (phone numbers, email, chat).

