

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ROCAM](#) /

› [ROCAM 11.5 Inch Large Display Digital Calendar Clock Instruction Manual ROCAM-CR1005](#)

ROCAM ROCAM-CR1005

ROCAM 11.5" Large Display Digital Calendar Clock Instruction Manual

Model: ROCAM-CR1005

Brand: ROCAM

[Overview](#) [Package](#)

[Contents](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. PRODUCT OVERVIEW

The ROCAM 11.5-inch Large Display Digital Calendar Clock (Model ROCAM-CR1005) is designed for clear readability, displaying time, period of the day, full day of the week, month, date, and indoor temperature. It features multiple alarm settings, a 5-level adjustable dimmer, and dual USB charging ports for convenience.



Image: Front view of the ROCAM 11.5-inch Digital Calendar Clock displaying time, date, day of the week, and temperature.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- ROCAM 11.5" Digital Calendar Clock
- Power Adapter
- USB Power Cable
- CR2032 Backup Battery (pre-installed or included separately)
- User Manual
- Desk Stand Bracket
- Wall Mounting Hardware (if applicable)

PACKAGE



Image: The ROCAM Digital Calendar Clock and its accessories, including the power adapter, USB cable, and user manual.

3. SETUP INSTRUCTIONS

3.1 Power Connection

1. Connect the USB power cable to the clock's DC 5V input port.
2. Plug the power adapter into a standard electrical outlet.
3. The clock display will illuminate.

Your browser does not support the video tag.

Video: Demonstrates plugging in the power cord and connecting it to the clock, showing the clock's display activating. This video also shows the dual USB charging ports in use.

3.2 Backup Battery Installation (if not pre-installed)

The clock includes a CR2032 backup battery to retain time and settings during power outages. If not already installed, locate the battery compartment on the back of the clock and insert the CR2032 battery with the positive (+) side facing up.



Image: Detail of the CR2032 backup battery slot on the rear of the clock, indicating its location for power failure memory.

3.3 Placement Options

The clock can be placed on a desk or mounted on a wall.

- **Desk Placement:** Attach the provided stand bracket to the back of the clock.
- **Wall Mounting:** Use the keyhole slot on the back of the clock to hang it on a screw or nail. Ensure the clock is securely mounted and level.

2 Way To Intall & 2 USB Charging Ports



Image: Rear view of the clock illustrating both the desk stand and the wall hanging hole. Dual USB charging ports are also visible.

4. OPERATING INSTRUCTIONS

4.1 Setting Time and Date

Use the buttons on the back of the clock to adjust the time and date. Specific buttons are provided for **DAY**, **MONTH**, **YEAR**, **HOUR**, and **MINUTE** adjustments. Refer to the labels on the back panel for precise control.

- **12/24 Hour Mode:** Use the dedicated switch button on the back to toggle between 12-hour and 24-hour time formats.

- **Daylight Saving Time (DST):** Press the 'DST' button to activate or deactivate Daylight Saving Time.



Image: The clock showing both 12-hour and 24-hour display options, highlighting the switch for changing modes.

4.2 Setting Alarms

The clock supports up to three independent alarms. Use the alarm setting buttons on the back to configure each alarm.

1. Press the corresponding alarm button (1, 2, or 3) to enter alarm setting mode.
2. Use the '+' and '-' buttons to adjust the alarm time.
3. Press 'OK' to confirm the time.
4. Select the alarm frequency: Everyday, Weekdays Only (Mon-Fri), or Weekend Only (Sat-Sun).
5. To turn off an alarm for 24 hours or permanently, use the **Alarm OFF** button.
6. **Snooze Function:** Press the large **'SNOOZE/DIMMER'** button on top of the clock to activate a 9-minute snooze.
7. **Alarm Volume:** The alarm volume is adjustable with 15 levels (60dB-108dB). Adjust using the volume controls during alarm setup.

3 Alarms with 7-5-2 Setting Mode



Image: Visual guide to setting the three alarms, including options for daily, weekday, or weekend activation, and volume adjustment.

Your browser does not support the video tag.

Video: Demonstrates setting the alarm time, adjusting volume, and selecting alarm frequency (Mon-Fri, Mon-Sun, Sat-Sun).

4.3 Display Brightness (Dimmer)

The clock features a 5-level adjustable dimmer. Press the **SNOOZE/DIMMER** button on the top of the clock to cycle through the brightness levels to suit your preference.

5 Level Adjustable Dimmer



Image: The clock display at five different brightness settings, illustrating the dimmer function controlled by the top button.

4.4 USB Charging Ports

The clock includes two USB charging ports (5V 1A) on the side, allowing you to charge compatible devices such as smartphones or tablets.

15 Levels of Volume Adjustable



3 Alarm Settings Option



Image: The clock with two devices charging simultaneously via its dual USB ports.

5. MAINTENANCE

To ensure optimal performance and longevity of your ROCAM Digital Calendar Clock, follow these simple maintenance guidelines:

- Cleaning:** Gently wipe the clock's surface with a soft, dry cloth. Avoid using abrasive cleaners, solvents, or chemical sprays, as these can damage the display or casing.
- Power Cord:** Periodically check the power cord for any signs of damage. If the cord is damaged, discontinue use and contact customer support.
- Placement:** Place the clock in a stable location, away from direct sunlight, excessive heat, or moisture.

6. TROUBLESHOOTING

If you encounter issues with your ROCAM Digital Calendar Clock, refer to the following common solutions:

Problem	Possible Solution
Clock display is off.	Ensure the power adapter is securely plugged into both the clock and the electrical outlet. Check if the electrical outlet is functioning by plugging in another device.
Time/settings are lost after power outage.	Verify that the CR2032 backup battery is correctly installed and has sufficient charge. Replace if necessary. Ensure the plastic pull-tab (if any) has been removed from the battery compartment.
Alarm does not sound or is too quiet.	Check if the alarm is enabled and set for the correct time and day. Adjust the alarm volume using the setting controls.

Problem	Possible Solution
Display is too bright or too dim.	Press the 'SNOOZE/DIMMER' button on the top of the clock to cycle through the 5 brightness levels.
USB charging ports are not working.	Ensure the clock is properly powered. Verify that the charging cable and the device being charged are functioning correctly.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	ROCAM-CR1005
Display Type	Digital LED
Display Size	11.5 inches (diagonal)
Product Dimensions	9.96" W x 7" H
Power Source	Corded Electric, Outlet Powered (DC 5V)
Backup Battery	1 x CR2032 (included, for memory retention only)
Alarms	3 independent alarms with 7-5-2 setting modes (Everyday, Weekdays, Weekends)
Snooze Function	9 minutes
Dimmer Levels	5 levels (manual adjustment)
USB Charging Ports	2 ports, 5V 1A output each
Temperature Display	°F / °C switchable
Time Format	12H / 24H switchable
Mounting Type	Wall Mount & Tabletop
Material	Plastic
Item Weight	16 ounces (1 pound)

8. WARRANTY AND SUPPORT

ROCAM provides an 18-month warranty for this product. For any questions, technical assistance, or warranty claims, please contact ROCAM customer support. Lifetime free user support is available. Contact information can typically be found on the product packaging or the official ROCAM website.

