

[Manuals.plus](#) /

› [HZPOWEN](#) /

› Universal Remote Control for All Emerson TV - Instruction Manual

HZPOWEN NH305UD

Universal Remote Control for All Emerson TV - Instruction Manual

Model: NH305UD | Brand: HZPOWEN

1. INTRODUCTION

This instruction manual provides essential information for the proper use and maintenance of your HZPOWEN Universal Remote Control, model NH305UD. This remote is designed to be compatible with a wide range of Emerson TV models, offering a seamless replacement for your original remote.

Please read this manual thoroughly before operating the remote control to ensure optimal performance and longevity.



Figure 1: HZPOWER Universal Remote Control (Model NH305UD)

This image displays the front view of the HZPOWER Universal Remote Control, featuring its array of buttons for various TV functions.

2. PRODUCT FEATURES

- **Universal Compatibility:** Specifically designed for all Emerson TV models, including LF501EM5, LF501EM5F, LF501EM6F, LF402EM6, LF402EM6F, LF461EM4, LF461EM4A, LF501EM4, LF501EM4A, LF501EM5, LF501EM5F, and LF501EM6F.
- **No Setup Required:** Ready to use right out of the box; no programming or pairing is necessary.
- **Full Functionality:** Covers all essential functions of the original Emerson TV remote.
- **Responsive Performance:** Equipped with a built-in smart chip for fast and reliable response times.
- **Extended Range:** Operates effectively up to 33 feet (approximately 10 meters).

Precisely control far from 12 meters



Figure 2: Precise Control from a Distance

This image illustrates the remote control's ability to precisely control the TV from a distance of up to 12 meters (approximately 39 feet), highlighting its extended operational range.

3. SETUP

The HZPOWER Universal Remote Control is designed for immediate use with compatible Emerson TV models. No complex setup or programming is required.

3.1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two new AAA batteries (not included), ensuring the positive (+) and negative (-) terminals are aligned correctly according to the diagram inside the compartment.
4. Close the battery compartment cover securely.

Once batteries are installed, the remote is ready to operate your Emerson TV.



Stable performance Fast Transmission Time 0.2 Second

Figure 3: Battery Compartment and Performance

This image shows the back of the remote control, indicating the battery compartment. It also highlights the remote's stable performance and fast transmission time of 0.2 seconds.

4. OPERATING INSTRUCTIONS

The HZPOWER Universal Remote Control provides intuitive access to all standard TV functions. Point the remote directly

at your Emerson TV for optimal signal transmission.

4.1. Basic Functions

- **Power Button (●):** Press to turn the TV On or Off.
- **Number Buttons (0-9):** Use to directly enter channel numbers.
- **Volume Up/Down (VOL +/-):** Adjusts the TV's volume level.
- **Channel Up/Down (CH +/-):** Changes the TV channel sequentially.
- **Mute Button ():** Mutes or unmutes the TV sound.
- **Source Button (SOURCE):** Cycles through available input sources (HDMI, AV, etc.).
- **Navigation Pad (▲ ▼ ◀ ▶):** Use the directional arrows to navigate menus and select options.
- **OK Button:** Confirms selections within menus.
- **Menu Button (MENU):** Accesses the TV's main menu.
- **Back Button (BACK):** Returns to the previous screen or menu.
- **Info Button (INFO):** Displays information about the current program or input.



Figure 4: Remote in Use

This image shows a hand holding the remote control, demonstrating its comfortable grip and ease of use while operating a television.

5. MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** While durable, repeated drops can damage internal components. Handle the remote with care.

6. TROUBLESHOOTING

If you experience issues with your HZPOWEN Universal Remote Control, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote is not working.	Batteries are dead or incorrectly installed. Obstruction between remote and TV. Remote is too far from the TV.	Replace batteries with new AAA batteries, ensuring correct polarity. Remove any objects blocking the line of sight between the remote and the TV's infrared sensor. Move closer to the TV (within 33 feet/10 meters).
Certain buttons do not respond.	Dirty contacts under the button. Internal damage.	Ensure the remote is clean. If problem persists, contact customer support. If the remote has been dropped or damaged, replacement may be necessary.
Remote does not control non-Emerson devices (e.g., Firestick).	This remote is specifically designed for Emerson TVs.	This remote is not intended for use with other brands or streaming devices like Firestick. Please use the original remote for those devices.

7. SPECIFICATIONS

- **Model Number:** NH305UD
- **Brand:** HZPOWEN
- **Compatible Devices:** Emerson Televisions
- **Connectivity Technology:** Infrared (IR)
- **Max Number of Supported Devices:** 1 (Emerson TV)
- **Power Source:** 2 x AAA Batteries (not included)
- **Package Dimensions:** 6.5 x 2.28 x 0.91 inches (16.51 x 5.79 x 2.31 cm)
- **Item Weight:** 2.08 ounces (59 grams)
- **Manufacturer:** HZPOWEN
- **Date First Available:** July 14, 2018



Figure 5: Remote Control Dimensions

This image provides a visual representation of the remote control's dimensions, showing its length and width for reference.

8. WARRANTY AND SUPPORT

For any questions, concerns, or technical assistance regarding your HZPOWEN Universal Remote Control, please contact the manufacturer or seller directly through the platform where the product was purchased.

Please retain your purchase receipt as proof of purchase for any warranty claims.