

X-PRO ATV-P013-Assembled

X-PRO Jaguar 200 ATV User Manual

Model: ATV-P013-Assembled | Brand: X-PRO

1. IMPORTANT SAFETY INFORMATION

Please read this manual thoroughly before operating your X-PRO Jaguar 200 ATV. Failure to follow the instructions and safety precautions can result in serious injury or property damage. Keep this manual for future reference.

WARNING: This ATV is not intended for sale or use in California due to specific state regulations.

- Always wear appropriate safety gear, including a helmet, eye protection, gloves, and sturdy footwear.
- Never operate the ATV under the influence of alcohol or drugs.
- Do not carry passengers. This ATV is designed for single-rider operation.
- Operate only on designated off-road trails or private property with permission. Avoid paved surfaces.
- Perform pre-ride inspections as outlined in the Maintenance section.

2. PRODUCT OVERVIEW

The X-PRO Jaguar 200 ATV is a robust off-road vehicle designed for recreational use. It features an automatic transmission with reverse, large aluminum rim wheels, and a durable frame.

2.1 Key Features

- Automatic Transmission with Drive, Neutral, and Reverse (D+N+R).
- Large 23-inch front and 22-inch rear aluminum rim wheels for enhanced off-road capability.
- Integrated LED headlights for improved visibility during night operation.
- Spacious design with overall dimensions of 62" Length, 44.5" Width, and 43.3" Height.
- Equipped with a 177.3cc 4-stroke air-cooled engine.

2.2 Components and Controls

Familiarize yourself with the main components and controls of your ATV.



Figure 2.1: Front view of the X-PRO Jaguar 200 ATV. This image displays the front grille, LED headlights, handlebars with red grips, and the large front wheels with aluminum rims. The robust front suspension components are also visible.



Figure 2.2: Side view of the X-PRO Jaguar 200 ATV. This perspective highlights the overall length, the seating position, the engine area, and the distinct sizes of the front and rear wheels. The rear cargo rack is also visible.



Figure 2.3: Rear view of the X-PRO Jaguar 200 ATV. This image shows the tail light, exhaust system, rear disc brake, and the large rear wheels. The rear cargo rack is prominently featured.

3. SETUP AND ASSEMBLY

Your X-PRO Jaguar 200 ATV arrives approximately 99% assembled. The remaining steps primarily involve unpacking and minor component checks.

3.1 Unpacking

The ATV is securely packaged for transport. Carefully remove all packaging materials, including any protective wrapping and crating. Ensure all components are accounted for before discarding packaging.



Fully Assembly Version is packaged as shown. All products are 100% brand new and unassembled in their original factory package. If you order fully assembled, your product is removed from its original packaging, assembled and tested. We then securely repackage to make suitable for transport as pictured above.

Figure 3.1: The X-PRO Jaguar 200 ATV as packaged for transport. The ATV is shown securely wrapped in black protective plastic and mounted on a wooden pallet, ready for shipment.

3.2 Initial Checks

- **Battery Connection:** Ensure the 12V/9Ah battery is securely connected. Verify positive and negative terminals are correctly attached and tightened.
- **Fluid Levels:** Check engine oil and fuel levels. The fuel tank capacity is 4.2 liters.
- **Tire Pressure:** Verify tire pressure for both front (23*7-10) and rear (22*10-10) tires. Refer to the tire sidewall for recommended pressure.
- **Fasteners:** Inspect all visible bolts and nuts for tightness, especially on wheels, suspension, and handlebars.
- **Brakes:** Test front drum brake and rear disc brake for proper function.

4. OPERATING INSTRUCTIONS

4.1 Starting the ATV

1. Ensure the ATV is on a level surface and the parking brake is engaged.
2. Turn the ignition key to the "ON" position.
3. Press the electric start button. If the engine does not start immediately, release the button and try again after a few seconds. Avoid prolonged cranking.
4. Allow the engine to warm up for a short period before riding.

4.2 Transmission Operation

The X-PRO Jaguar 200 ATV features an automatic D+N+R transmission.

- **D (Drive):** For forward motion.
- **N (Neutral):** For idling or starting the engine.
- **R (Reverse):** For backward motion. Engage only when the ATV is completely stopped.

Shift between gears only when the ATV is stationary and the engine is at idle.

4.3 Braking

The ATV is equipped with a front drum brake and a rear disc brake.

- Apply both brakes simultaneously for optimal stopping power and control.
- Avoid sudden or harsh braking, especially on loose or slippery surfaces.

4.4 Controls

- **Headlight:** Use the switch on the handlebars to turn the LED headlights ON/OFF for visibility.
- **Tail Light:** The tail light illuminates when the headlights are on or brakes are applied.
- **Ignition:** Key-operated ignition system.

5. MAINTENANCE

Regular maintenance is crucial for the longevity and safe operation of your ATV.

5.1 Engine Maintenance

- **Oil Changes:** Refer to the engine manufacturer's guidelines for recommended oil type and change intervals.
- **Air Filter:** Regularly inspect and clean or replace the air filter, especially when operating in dusty conditions.
- **Spark Plug:** Inspect and clean or replace the spark plug as needed to ensure efficient ignition.
- **Cooling System:** As an air-cooled engine, ensure cooling fins are free from dirt and debris for optimal heat dissipation.

5.2 Battery Care

- Keep battery terminals clean and free of corrosion.
- Ensure the battery is fully charged, especially during periods of non-use.
- If storing the ATV for an extended period, consider disconnecting the battery or using a trickle charger.

5.3 Tire and Wheel Maintenance

- Regularly check tire pressure and adjust to recommended levels.
- Inspect tires for cuts, punctures, or excessive wear.
- Check wheel nuts for tightness before each ride.

5.4 Chain Drive

- Keep the drive chain clean and lubricated.
- Check chain tension regularly and adjust as necessary to prevent excessive slack or tightness.

5.5 General Inspection

- Before each ride, perform a visual inspection of the ATV for any loose parts, leaks, or damage.
- Test brakes, throttle, and steering for proper function.
- Clean the ATV after each use to prevent dirt and mud buildup, which can affect performance and component life.

6. TROUBLESHOOTING

This section provides solutions to common issues you might encounter. For problems not listed here, or if solutions do not resolve the issue, contact customer support.

6.1 Engine Does Not Start

- **Check Fuel Level:** Ensure there is sufficient fuel in the tank.
- **Battery:** Verify battery connections are secure and the battery is charged. A weak battery can prevent starting.
- **Ignition:** Confirm the ignition key is in the "ON" position.
- **Spark Plug:** Inspect the spark plug for fouling or damage.

6.2 Loss of Power

- **Fuel Supply:** Check for clogged fuel lines or a dirty fuel filter.
- **Air Filter:** A dirty air filter can restrict airflow and reduce engine power. Clean or replace as needed.
- **Spark Plug:** A worn or fouled spark plug can lead to misfires and power loss.

6.3 Brakes Not Effective

- **Brake Adjustment:** Check brake cable tension and adjust if too loose.
- **Brake Pads/Shoes:** Inspect brake pads (disc) and shoes (drum) for wear. Replace if worn beyond limits.
- **Fluid Leaks (Disc Brake):** For the rear disc brake, check for any fluid leaks or low fluid levels.

7. TECHNICAL SPECIFICATIONS

Category	Specification
Engine	177.3cc, 4-Stroke, Single Cylinder
Cooling System	Air Cooled
Transmission	Automatic D+N+R (Drive, Neutral, Reverse)
Final Drive	Chain Drive
Ignition	CDI
Start System	Electric
Battery	12V/9Ah

Category	Specification
Max Speed	40+ MPH (Dependent on rider weight and road conditions)
Front Suspension	Double A-Arm
Rear Suspension	Regular Shock Absorber
Front Brake	Drum
Disc	
Front Tires	23*7-10 Aluminium Rim
Rear Tires	22*10-10 Aluminium Rim
Max Loading	250 lbs
Net Weight	330 lbs
Gross Weight	363 lbs
Overall Length	62"
Overall Width	44.5"
Overall Height	43.3"
Min Ground Clearance	5.31"
Wheel Base	43.52"
Fuel Tank Capacity	4.2 Liters
Headlight	Yes (LED)
Tail Light	Yes

8. WARRANTY AND SUPPORT

For specific warranty information regarding your X-PRO Jaguar 200 ATV, please refer to the documentation provided at the time of purchase or contact the seller directly.

For technical support, parts, or service inquiries, please contact X-PRO customer service. You can typically find contact information on the manufacturer's official website or through the retailer from whom you purchased the ATV.

Seller: XPROUSA

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question