

## WHATOOK LH220251-M1

# User Manual

WHATOOK 2-in-1 Computer Vacuum Cleaner & Compressed Air Duster Blower  
Model: LH220251-M1

## 1. INTRODUCTION

The WHATOOK 2-in-1 Computer Vacuum Cleaner and Compressed Air Duster Blower is a versatile and powerful tool designed for efficient cleaning of electronic devices, car interiors, and various household items. Featuring a high-speed motor, adjustable airflow modes, and a rechargeable battery, this device offers both blowing and suction capabilities to effectively remove dust, debris, and dirt from hard-to-reach areas. Its portable and cordless design, coupled with multiple nozzles and brushes, makes it an ideal solution for comprehensive cleaning tasks.



Figure 1.1: The WHATOOK 2-in-1 Computer Vacuum Cleaner and Air Duster, showcasing the main unit, various nozzles, cleaning brushes, and USB-C charging cable.

## 2. SAFETY INFORMATION

Please read all safety instructions carefully before using the device. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Keep the device away from water and other liquids. Do not operate with wet hands.
- Do not block the air intake or outlet during operation to prevent overheating.
- Use only the provided Type-C charging cable and a compatible power adapter (not included) for charging.
- Do not disassemble, repair, or modify the device yourself. Contact customer support for assistance.
- Keep out of reach of children and pets. This device is not a toy.
- Avoid pointing the air duster directly at eyes, ears, or other sensitive body parts.
- Do not use the device in environments with flammable gases or liquids.
- Store the device in a cool, dry place when not in use.

### 3. PACKAGE CONTENTS

Verify that all items are present in the package:

- WHATOOK 2-in-1 Computer Vacuum Cleaner / Air Duster Unit
- USB Type-C Charging Cable
- 8 x Interchangeable Nozzles (various shapes and sizes for blowing and vacuuming)
- 3 x Cleaning Brushes (for different cleaning needs)
- Storage Bag
- User Manual (this document)



Figure 3.1: Visual representation of the items included in the product package, including the main unit, various attachments, charging cable, and storage bag.

### 4. SETUP

#### 4.1 Charging the Device

Before first use, fully charge the device. Connect the provided USB Type-C charging cable to the charging port on the device and plug the other end into a compatible USB power source (e.g., wall adapter, computer USB port, power bank). The LED indicator will show charging status and turn off when fully charged.

- Charging time: Approximately 3 hours for a full charge.
- Runtime: Up to 50 minutes depending on the speed setting.

# 75W TYPE-C QUICK CHARGE

USB Charging, Convenient and Fast



Figure 4.1: The device connected to a power source via its USB Type-C charging cable, illustrating convenient and fast charging capabilities.

## 4.2 Attaching Nozzles

Select the appropriate nozzle for your cleaning task. The device supports both blowing and vacuuming functions, each requiring specific nozzle attachments.

- **For Blowing Mode:** Firmly push the desired blowing nozzle onto the front air outlet of the device until it clicks into place.
- **For Vacuum Mode:** Attach the vacuum collection cup to the rear of the device, then firmly push the desired vacuum nozzle onto the opening of the collection cup.

# HOW TO USE 2in1 ELECTRIC DUSTER & VACUUM



Installation of nozzles for dust blowers



Installation and removal of vacuum nozzles



1. Removal of vacuum cleaner nozzles



2. Clean water flush filter



3. Air dry it

Figure 4.2: Step-by-step guide on how to properly install nozzles for both the blowing and vacuuming functions of the device.

## 5. OPERATING INSTRUCTIONS

### 5.1 Powering On/Off and Adjusting Speed

The device features three adjustable airflow modes for versatile cleaning.

- **To Power On/Off:** Long press the power button for 3 seconds.
- **To Adjust Speed:** Once powered on, short press the power button to cycle through the three speed settings:
  - **Gear 1 (Low Speed):** 60,000 RPM / 6,000 PA (approx. 55 minutes runtime)
  - **Gear 2 (Medium Speed):** 80,000 RPM / 8,000 PA (approx. 35 minutes runtime)
  - **Gear 3 (High Speed):** 100,000 RPM / 10,000 PA (approx. 20 minutes runtime)

# 3 GEARS SPEED ADJUSTABLE DESIGN

Max speed up to 100,000RPM / 10000PA



## 1ST GEAR

60,000RPM / 6000PA

55 Minutes Runtime



## 2ST GEAR

80,000RPM / 8000PA

35 Minutes Runtime



## 3ST GEAR

100,000RPM / 10000PA

20 Minutes Runtime



Figure 5.1: Illustration of the three-speed control system, detailing the motor speed, pressure, and approximate runtime for each gear.

## 5.2 Using Blowing Mode (Air Duster)

Attach a blowing nozzle. Point the nozzle towards the area to be cleaned and activate the device. Use the appropriate speed setting for the task. The integrated LED light illuminates the cleaning area for better visibility.

- Ideal for keyboards, computer components, camera lenses, and other delicate electronics.
- Effective for removing dust from air conditioner filters and hard-to-reach crevices.

## BEST ALTERNATIVE TO COMPRESSED AIR CANS



Figure 5.2: The air duster being used to clean a dusty air conditioner filter, demonstrating its effectiveness as an alternative to canned air.

### 5.3 Using Vacuum Mode (Mini Hoover)

Attach the vacuum collection cup and a vacuum nozzle. Activate the device and move the nozzle over the surface to suction up dust and small debris.

- Suitable for cleaning car interiors, desk surfaces, sofa crevices, and pet hair.
- The vacuum mode is designed for light debris and dust, not heavy-duty vacuuming.

## SUPER POWERFUL 2-IN-1 ELECTRIC DUSTER & VACUUM



Figure 5.3: The device shown in both its dust blowing mode (top) and vacuuming mode (bottom), illustrating its dual functionality for comprehensive cleaning.



Figure 5.4: Examples of the device's versatility, showing its application for cleaning various surfaces and objects around the home and in a car.

## 6. MAINTENANCE

### 6.1 Cleaning the Filter

Regularly clean the filter in the vacuum collection cup to maintain optimal suction performance. A clogged filter can reduce efficiency.

1. Remove the vacuum collection cup from the device.
2. Twist and pull out the filter assembly from the collection cup.
3. Clean the filter by rinsing it under running water. Ensure all dust and debris are removed.
4. Allow the filter to air dry completely before reassembling. Do not use the device with a wet filter.
5. Reinsert the dry filter assembly into the collection cup and attach it back to the device.

# HOW TO USE 2in1 ELECTRIC DUSTER & VACUUM



Installation of nozzles for dust blowers



Installation and removal of vacuum nozzles



1. Removal of vacuum cleaner nozzles



2. Clean water flush filter



3. Air dry it

Figure 6.1: Detailed steps for maintaining the device's vacuum filter, ensuring prolonged performance and hygiene.

## 6.2 General Cleaning

Wipe the exterior of the device with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully using the provided USB-C cable.
Weak airflow or suction.	Filter is clogged with dust/debris. Battery is low. Nozzle is not properly attached.	Clean the filter as described in Section 6.1. Recharge the device. Ensure the nozzle is securely attached.
Device makes unusual noise.	Normal operating noise (70 dB). Obstruction in air path.	This is within normal operating parameters. Check for any foreign objects in the air intake or outlet and remove them.
Battery drains quickly.	Using high-speed mode frequently. Battery degradation over time.	High-speed mode consumes more power. Use lower speeds when sufficient. Contact customer support if runtime significantly decreases.

## 8. SPECIFICATIONS

Brand	WHATOOK
-------	---------

<b>Model Name</b>	LH220251-M1
<b>Motor Speed</b>	Up to 100,000 RPM
<b>Suction Power</b>	Up to 10,000 Kpa
<b>Battery Capacity</b>	7600mAh (approximate)
<b>Runtime</b>	Up to 50 minutes (varies by speed setting)
<b>Charging Type</b>	USB Type-C
<b>Noise Level</b>	70 dB
<b>Number of Speeds</b>	3
<b>Item Weight</b>	1.5 pounds
<b>Package Dimensions</b>	8.39 x 5.59 x 2.72 inches

## 9. WARRANTY AND SUPPORT

WHATOOK is committed to providing quality products and excellent customer service.

- Warranty:** This product comes with a 24-month warranty from the date of purchase.
- Customer Support:** For any inquiries, technical assistance, or warranty claims, please contact WHATOOK customer support. We offer 12-hour response times, 7\*24 hour stand-by support, and lifetime after-sales support.
- Please refer to your purchase documentation for specific contact details.