

[Manuals.plus](#) /

› [SONGMICS](#) /

› SONGMICS HSR134W01 Extendable Rolling Clothes Rack User Manual

SONGMICS HSR134W01

SONGMICS HSR134W01 Extendable Rolling Clothes Rack User Manual

Model: HSR134W01

1. INTRODUCTION

Thank you for choosing the SONGMICS HSR134W01 Extendable Rolling Clothes Rack. This manual provides essential information for the safe assembly, operation, and maintenance of your new clothes rack. Please read these instructions carefully before use and retain them for future reference.



Image 1.1: The SONGMICS HSR134W01 Extendable Rolling Clothes Rack, showcasing its design and functionality in a bedroom environment.

2. IMPORTANT SAFETY INSTRUCTIONS

- **Weight Capacity:** Do not exceed the maximum load capacity of 45 kg (99 lbs). Overloading can cause the rack to collapse, leading to injury or damage to items.
- **Even Distribution:** Distribute weight evenly across the hanging rod and bottom shelves to maintain stability.
- **Assembly:** Assemble the rack strictly according to the provided instructions. Ensure all connections are secure before use.
- **Stability:** Place the rack on a flat, level surface. Engage the wheel brakes when the rack needs to remain stationary.
- **Children and Pets:** Keep children and pets away from the rack during assembly. Do not allow children to climb on or play with the rack.

- **Maintenance:** Regularly check all screws and connections for tightness. Tighten as necessary.

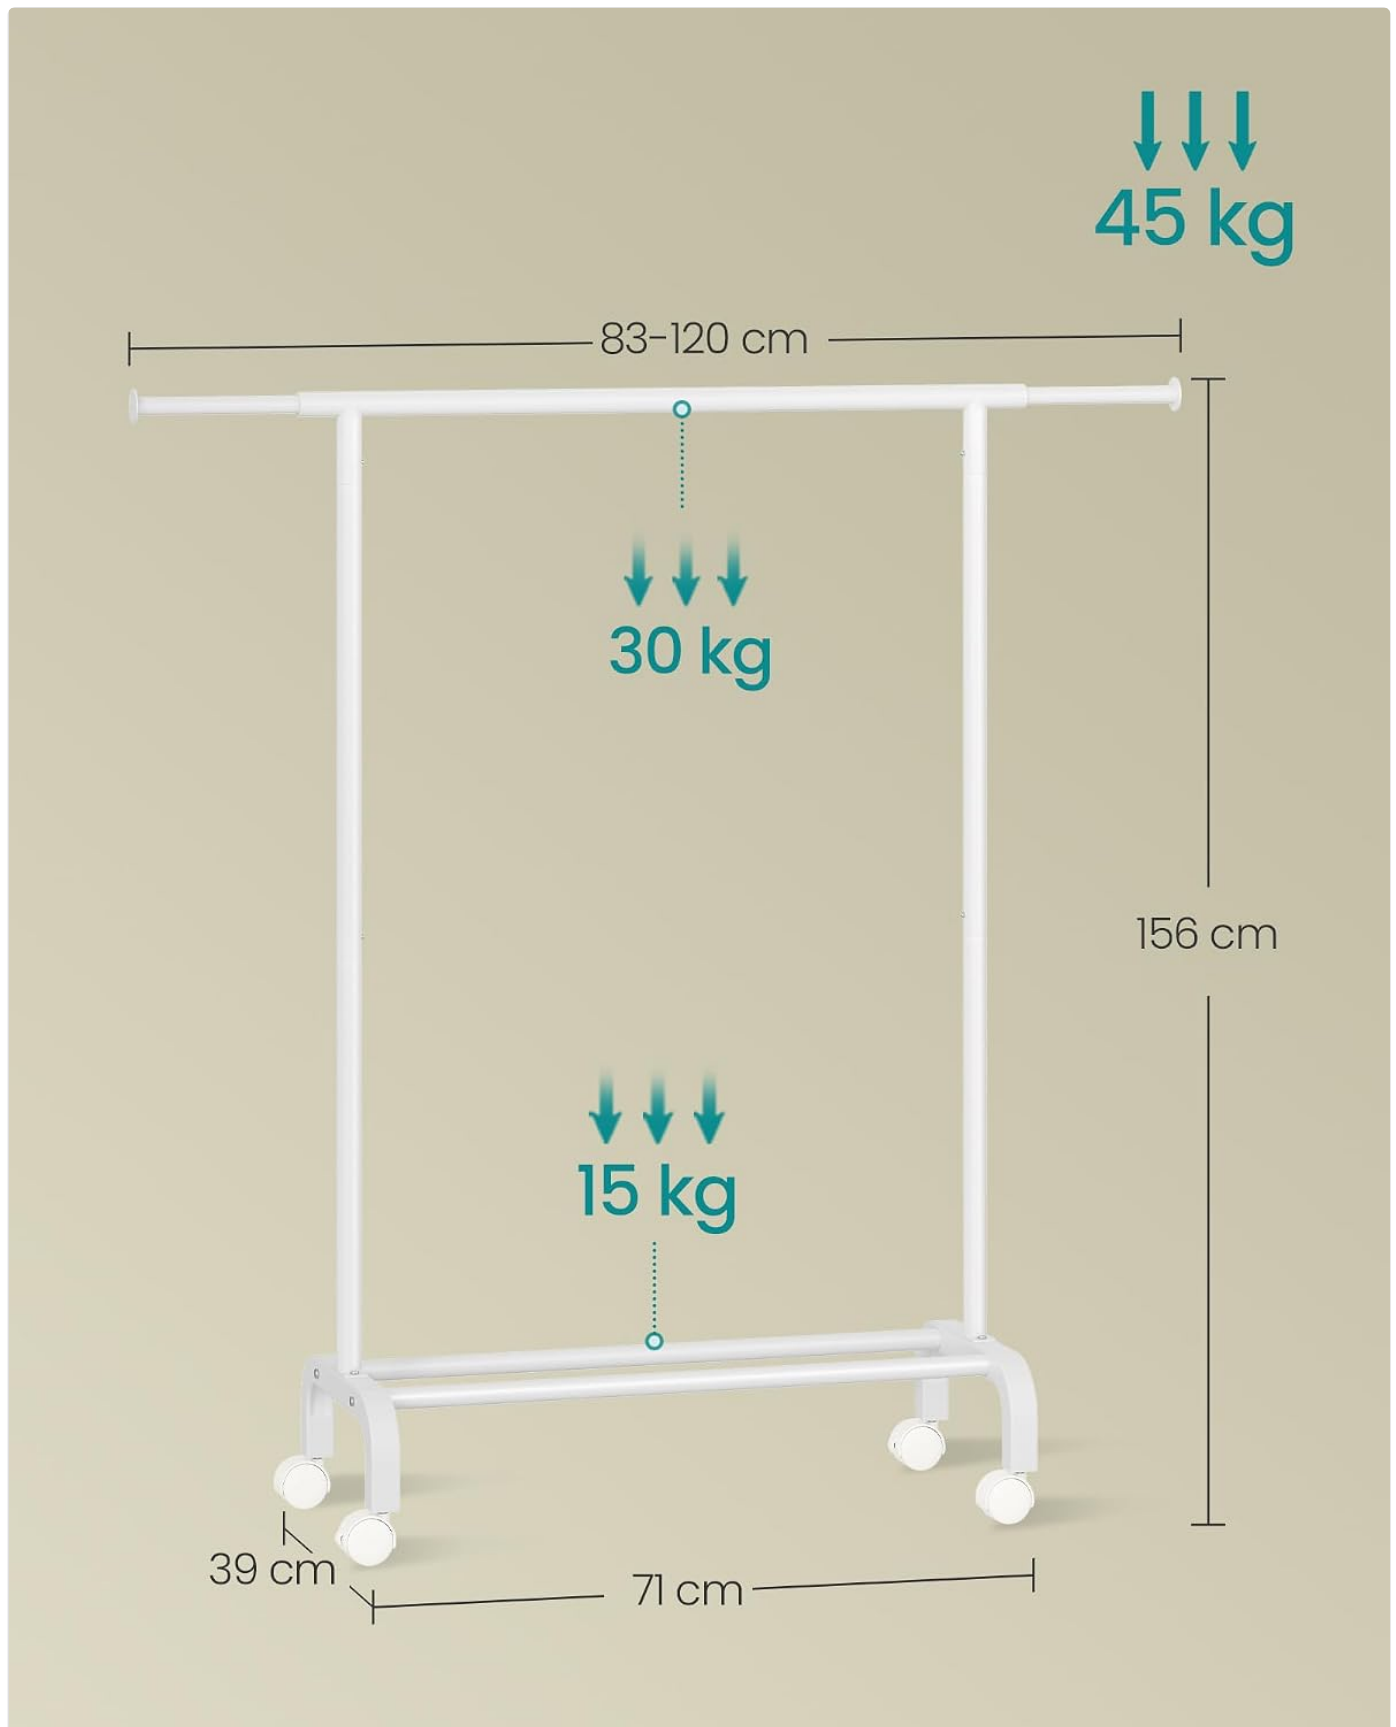


Image 2.1: Load capacity diagram illustrating the maximum weight distribution: 30 kg on the top rod and 15 kg on the bottom rods, for a total of 45 kg.

3. PACKAGE CONTENTS

Before assembly, please ensure all parts are present and undamaged. If any parts are missing or damaged, please

contact customer support.

The package typically includes:

- Main frame components (steel tubes)
- Extendable rod sections
- Wheels (including two with brakes)
- Assembly hardware (screws, wrench)
- Instruction manual (this document and/or a separate PDF)

For a detailed list of parts and assembly steps, please refer to the official installation PDF document: [Installation Manual \(PDF\)](#).

4. SETUP AND ASSEMBLY

Assembly is straightforward and requires minimal tools, which are usually included. Follow the steps below and refer to the detailed diagrams in the provided PDF manual for best results.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Assemble Base:** Connect the bottom frame components, ensuring they are securely fastened.
3. **Attach Wheels:** Insert the four wheels into the designated slots on the base. Ensure the two wheels with brakes are positioned on the same side for easier access.
4. **Install Vertical Supports:** Attach the vertical support poles to the base.
5. **Connect Top Rod:** Secure the main hanging rod to the top of the vertical supports. Ensure the extendable sections are correctly oriented.
6. **Final Check:** Once assembled, gently shake the rack to ensure all connections are tight and the structure is stable.



Image 4.1: Illustration of how to connect the steel tubes using the provided hardware during assembly.

5. OPERATING INSTRUCTIONS

5.1 Extending the Hanging Rod

The top hanging rod is extendable, allowing you to adjust its width to fit your space or accommodate more garments. Each end can be extended by up to 18.5 cm, increasing the total width from 83 cm to 120 cm.

- To extend: Gently pull the inner rod section outwards from either end of the main rod until it reaches the desired length or its maximum extension.
- To retract: Push the extended rod section inwards until it is fully retracted or at your desired shorter length.

Skalowalny projekt

Drażek na ubrania ma wysuwane końce (83-120 cm), aby dopasować się do Twojej przestrzeni, a także nadaje się do zawieszania toreb.



Image 5.1: The extendable feature of the top hanging rod, showing an additional 18.5 cm extension for increased capacity.

5.2 Using the Wheels and Brakes

The clothes rack is equipped with four 360° swivel wheels for easy mobility. Two of these wheels include locking brakes to secure the rack in place.

- **To Move:** Ensure both brakes are disengaged (unlocked). Gently push or pull the rack to its desired location.
- **To Lock:** Once the rack is in position, press down the lever on the two braked wheels until they click into the locked

position. This prevents the rack from rolling.

- **To Unlock:** Lift the lever on the braked wheels to release the lock, allowing the rack to move freely again.



Image 5.2: Detail of a wheel with its locking mechanism, indicating the unlock (up arrow) and lock (down arrow) positions.

5.3 Utilizing Bottom Storage

The rack features two lower bars that create a convenient storage space. This area is ideal for shoes, storage boxes, or baskets. The bars are elevated 14 cm from the floor, allowing for easy cleaning underneath, including by robotic vacuum cleaners.



Zwiększona przestrzeń dolna

Zostaw wystarczająco dużo miejsca, aby robot sprzątający mógł przejechać



w tym 2 koła z hamulcami



4 obrotowe kółka 360°

Image 5.3: The lower storage area of the rack, demonstrating its use for shoes and boxes, with ample clearance for a robot vacuum cleaner.

6. MAINTENANCE AND CARE

- **Cleaning:** Wipe the steel and plastic surfaces with a soft, damp cloth. Avoid using abrasive cleaners or harsh chemicals, as these can damage the finish.

- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Re-tighten any loose fasteners to maintain stability and safety.
- **Rust Prevention:** While the steel is designed to be durable, avoid prolonged exposure to excessive moisture to prevent rust.
- **Storage:** If storing the rack for an extended period, ensure it is clean and dry. It can be partially disassembled for more compact storage if needed.

7. TROUBLESHOOTING

7.1 Rack Feels Wobbly or Unstable

- **Check Connections:** Ensure all screws and connections are fully tightened. Refer to the assembly instructions to confirm all parts are correctly installed.
- **Even Load Distribution:** Verify that the weight of the clothes and items on the bottom shelves is evenly distributed. Uneven loading can cause instability.
- **Level Surface:** Make sure the rack is placed on a flat, level surface. Uneven flooring can cause wobbling.
- **Overloading:** Ensure the total weight does not exceed the 45 kg capacity. Remove excess items if overloaded.

7.2 Wheels Not Rolling Smoothly

- **Check for Obstructions:** Clear any debris, hair, or lint that may be caught in the wheel mechanisms.
- **Brakes Disengaged:** Ensure the wheel brakes are fully disengaged (unlocked).

8. SPECIFICATIONS

Brand	SONGMICS
Model	HSR134W01
Material	Alloy Steel, Plastic
Color	Cloud White
Dimensions (W x D x H)	(83-120) cm x 40 cm x 156 cm
Load Capacity	45 kg (99 lbs)
Special Features	Extendable Rod, 360° Swivel Wheels (2 lockable), Portable, Bottom Storage
Assembly Required	Yes

9. WARRANTY AND CUSTOMER SUPPORT

For warranty information, specific return policies, or if you encounter any issues not covered in this manual, please contact the retailer where you purchased the product or visit the official SONGMICS website for customer support. You can often find support information on the product packaging or through the seller's platform.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CQR8WNJ8>

More documents and user manuals: <https://manuals.plus/>