

ECONTROLLY FR113XD

ECONTROLLY FR113XD Remote Control Instruction Manual

Compatible with Mainstays WFP-22C Wall Mounted Electric Heater

1. INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your ECONTROLLY FR113XD Remote Control. This remote is specifically designed for use with the Mainstays WFP-22C Wall Mounted Electric Heater. Please read this manual thoroughly before using the remote control to ensure proper function and safety.

2. SAFETY INFORMATION

- Keep the remote control away from water and excessive moisture.
- Do not expose the remote control to direct sunlight or extreme temperatures.
- Avoid dropping the remote control or subjecting it to strong impacts.
- Dispose of used batteries responsibly according to local regulations.
- Do not attempt to disassemble or modify the remote control.

3. PRODUCT OVERVIEW

The ECONTROLLY FR113XD remote control features a simple, ergonomic design with clearly labeled buttons for easy operation of your Mainstays WFP-22C electric heater.





Figure 3.1: Front view of the ECONTROLLY FR113XD remote control, showing the six primary function buttons.



Figure 3.2: Angled view of the remote control, highlighting the 'ON/OFF', 'HEAT', 'DIMMER', 'TEMP', 'TIMER', and 'BACK LITS' button labels.



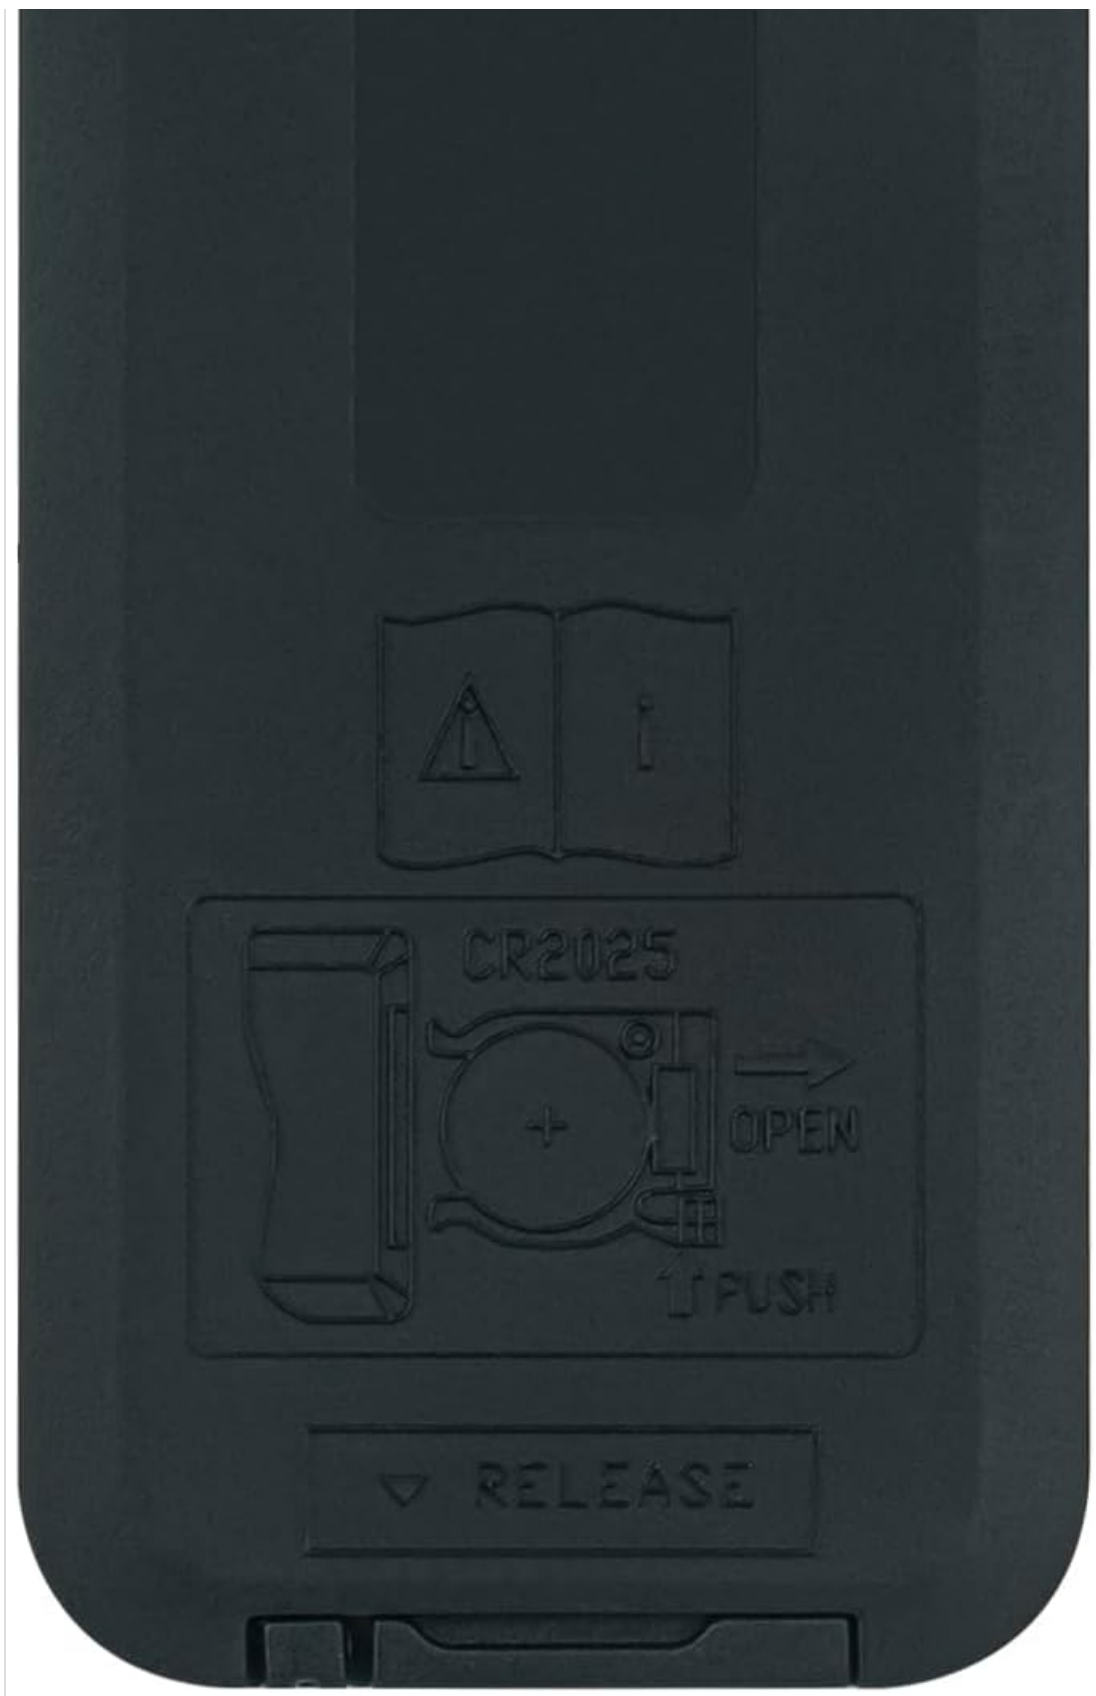


Figure 3.3: Back view of the remote control, illustrating the battery compartment cover and release mechanism. It indicates the use of a CR2025 battery.

4. SETUP

4.1 Battery Installation

The remote control requires two AAA batteries (not included) for operation. The back view image (Figure 3.3) shows a CR2025 battery, however, the product description states two AAA batteries. Please refer to the product packaging

or the remote's battery compartment for the correct battery type.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover open in the direction indicated by the arrow (usually 'OPEN' or 'PUSH').
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

No programming is required. Once batteries are installed, the remote is ready for use.

5. OPERATION

The remote control provides direct access to various functions of your Mainstays WFP-22C electric heater.

-  **ON/OFF Button:** Press to turn the electric heater on or off.
-  **HEAT Button:** Controls the heater's heat output settings. Multiple presses may cycle through different heat levels (e.g., low, high, off).
-  **DIMMER Button:** Adjusts the brightness of the flame effect. Press repeatedly to cycle through different dimmer levels.
-  **TEMP (F) Button:** Sets the desired temperature in Fahrenheit. Each press may increase or decrease the target temperature.
-  **TIMER Button:** Activates or adjusts the heater's timer function. Refer to your heater's main manual for specific timer settings.
-  **BACK LITS Button:** Controls the backlight feature of the heater, if available.

6. MAINTENANCE

6.1 Battery Replacement

When the remote control's range decreases or it becomes unresponsive, it is time to replace the batteries. Follow the battery installation steps in Section 4.1.

6.2 Cleaning

To clean the remote control, wipe it gently with a soft, dry cloth. Do not use abrasive cleaners, solvents, or wet cloths, as these can damage the surface or internal components.

7. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are installed correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the electric heater's receiver.
 - Confirm the remote is within the operational range of the heater.
- **Intermittent operation:**
 - This may indicate low battery power. Replace the batteries.
 - Ensure the remote's infrared emitter is clean and unobstructed.

8. SPECIFICATIONS

Model Number	FR113XD (RCEC1-FR113XD-OHDTTB)
Compatibility	Mainstays WFP-22C Wall Mounted Electric Heater
Power Source	2 x AAA Batteries (not included)
Dimensions	7 x 2 x 0.65 inches
Weight	2.4 ounces
Color	Black

9. WARRANTY AND SUPPORT

For warranty information or technical support regarding your ECONTROLLY FR113XD Remote Control, please contact the manufacturer directly. Refer to the product packaging or the ECONTROLLY website for contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question