

[Manuals.plus](#) /

› [VYTRONIX](#) /

› VYTRONIX VY-C900M 900W Digital Microwave Oven User Manual

VYTRONIX VY-C900M

VYTRONIX VY-C900M 900W Digital Microwave Oven User Manual

Model: VY-C900M

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not operate the oven when empty.
- Do not heat sealed containers, as they may explode.
- Use only microwave-safe dishes and utensils.
- Close supervision is necessary when the appliance is used by or near children.
- Do not tamper with or make any adjustments to the safety interlocks.
- Clean the oven regularly and remove any food deposits.
- Ensure the appliance is properly grounded.
- Do not use if the power cord or plug is damaged.
- Ensure adequate ventilation around the microwave.

For detailed safety information, refer to the full manual provided with your product.

PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your VYTRONIX VY-C900M Digital Microwave Oven.



The VYTRONIX VY-C900M Digital Microwave Oven, showcasing its sleek silver design and mirrored front.



A direct front view of the microwave, highlighting the digital display and control panel.



The interior of the microwave with the door open, showing a bowl of food on the glass turntable.

Components and Controls:

- **Door:** Features a handle for opening and closing.
- **Door Latch:** Secures the door when closed.
- **Observation Window:** Allows viewing of food during cooking.
- **Turntable Shaft:** Rotates the roller ring and glass turntable.
- **Roller Ring:** Supports the glass turntable.
- **Glass Turntable:** Ensures even cooking by rotating food.
- **Control Panel:** Houses the digital display and function buttons.
- **Waveguide Cover:** Protects the microwave components.

Control Panel Functions:

- **Digital Display:** Shows time, cooking settings, and indicators.
- **Power Button:** Adjusts microwave power levels (5 levels available).
- **Clock Button:** Used to set the current time.
- **Auto Defrost Button:** Initiates the automatic defrost function based on weight.
- **Auto Cook Button:** Accesses pre-programmed cooking menus.
- **Stop/Cancel Button:** Stops cooking or clears settings.
- **Time/Weight Knob:** Used to set cooking time, weight, or navigate menu options. Press to confirm.
- **Preset Button:** For programming delayed start or multi-stage cooking.

SETUP

Unpacking:

Carefully remove the microwave oven from its packaging. Inspect the oven for any signs of damage, such as dents or a misaligned door. Remove all packing materials from inside the oven cavity and from the turntable assembly.

Placement:


Place the microwave oven on a flat, stable surface that is strong enough to support its weight. Ensure there is adequate space for ventilation around the unit:

- Minimum 20 cm (8 inches) of free space above the oven.
- Minimum 10 cm (4 inches) of free space at the rear.
- Minimum 5 cm (2 inches) of free space on each side.

Avoid placing the oven near heat sources like radiators or stoves, and away from radio or television sets to prevent interference.



Diagram illustrating the external dimensions of the microwave: 48cm (W) x 39cm (D) x 28cm (H).

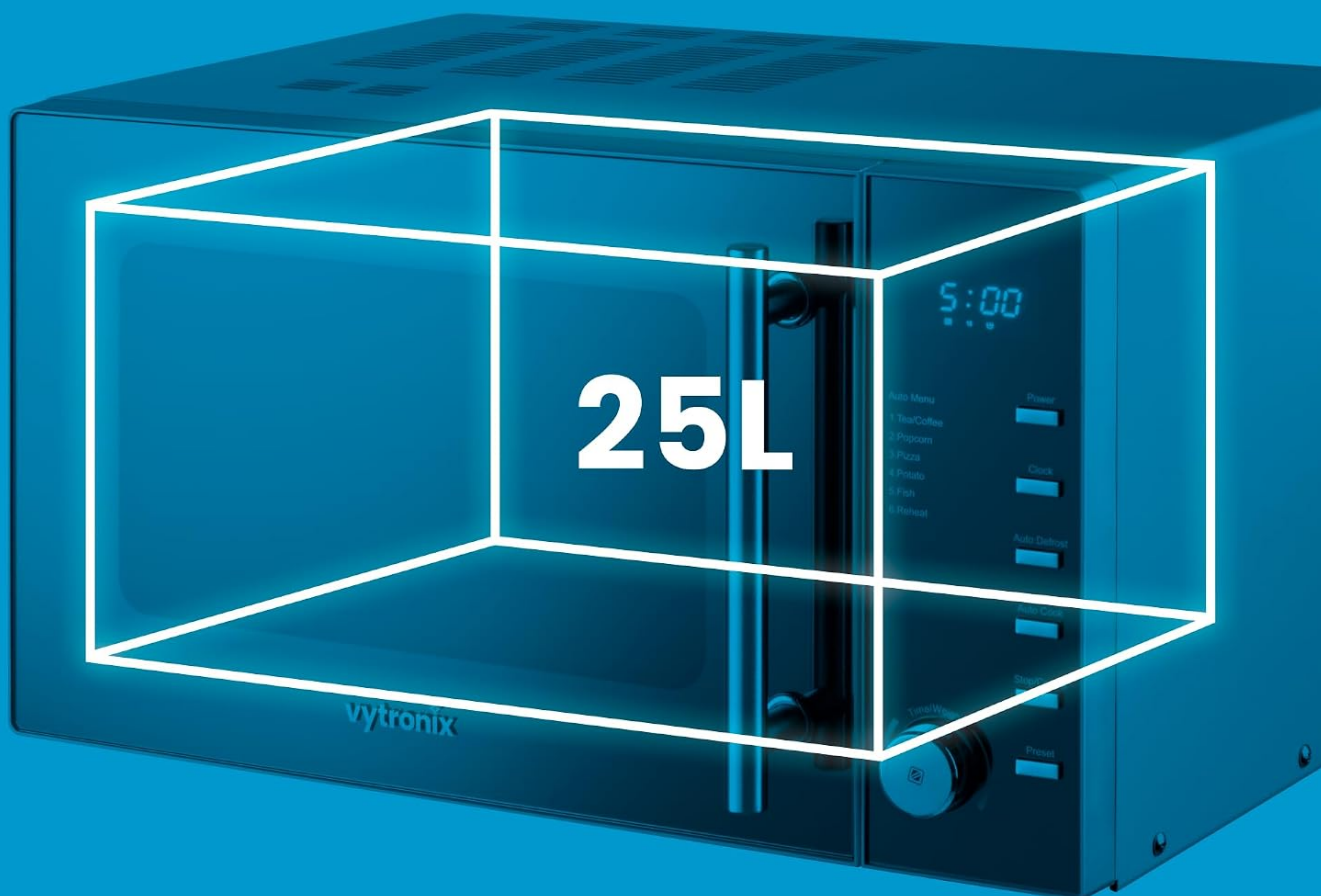

Outer: 281mm (H) x 483mm (W) x 395mm (d)
Inner: 220mm (H) x 340mm (W) x 344mm (d)

COMPACT SIZE, LARGE CAPACITY

An illustration highlighting the 25-litre capacity of the microwave, with outer dimensions of 281mm (H) x 483mm (W) x 395mm (D) and inner dimensions of 220mm (H) x 340mm (W) x 344mm (D).

Power Connection:

Plug the microwave oven into a standard, grounded electrical outlet. Ensure the voltage and frequency of your power supply match the specifications listed on the appliance's rating label.

OPERATING INSTRUCTIONS



The VYTRONIX VY-C900M microwave seamlessly integrated into a modern kitchen environment.

Setting the Clock:

1. Press the **Clock** button once.
2. Turn the **Time/Weight** knob to set the hour. Press the knob to confirm.
3. Turn the **Time/Weight** knob again to set the minutes. Press the knob to confirm.
4. The clock is now set.

Microwave Cooking (Manual Cooking):

1. Place food in a microwave-safe dish and place it on the glass turntable. Close the oven door.
2. Press the **Power** button repeatedly to select the desired power level (P100 for 100% power, P80 for 80%, etc.). There are 5 power levels available.
3. Turn the **Time/Weight** knob to set the cooking time.
4. Press the **Time/Weight** knob to start cooking.



A quiche being heated inside the microwave, demonstrating its cooking capability.

Auto Defrost Function:

This function automatically adjusts defrosting time and power based on the weight of the food.

1. Place the frozen food on the turntable. Close the door.
2. Press the **Auto Defrost** button.
3. Turn the **Time/Weight** knob to select the weight of the food.
4. Press the **Time/Weight** knob to start defrosting.

Auto Cook Menu:

The microwave has pre-programmed settings for common food items.

1. Press the **Auto Cook** button repeatedly to cycle through the menu options:
 - 1. Tea/Coffee

- 2. Popcorn
- 3. Pizza
- 4. Potato
- 5. Fish
- 6. Reheat

2. Once the desired menu item is displayed, press the **Time/Weight** knob to confirm and start cooking.

Multi-Stage Cooking:

You can program up to 3 cooking stages (e.g., defrost then cook) to run consecutively.

1. Program the first stage (e.g., Auto Defrost). Do not press start.
2. Program the second stage (e.g., Manual Cooking with desired power and time). Do not press start.
3. If needed, program a third stage.
4. Press the **Time/Weight** knob to start the multi-stage program.

Child Safety Lock:

To prevent unintended operation, especially by children:

- **To activate:** Press and hold the **Stop/Cancel** button for 3 seconds. A lock indicator will appear on the display.
- **To deactivate:** Press and hold the **Stop/Cancel** button for 3 seconds again. The lock indicator will disappear.



A hand carefully placing a bowl of soup into the microwave, ready for heating.

MAINTENANCE AND CLEANING

Regular cleaning of your microwave oven will ensure its longevity and efficient operation.

General Cleaning:

- Always unplug the oven from the power outlet before cleaning.
- Wipe the exterior surfaces with a damp cloth. Do not use abrasive cleaners or harsh solvents.
- Clean the interior cavity with a soft cloth and mild detergent. Wipe spills immediately to prevent staining and odors.
- Pay special attention to the waveguide cover (located inside the oven, usually on the right side). It should be kept clean and free of food splatter.

Turntable Care:

- The glass turntable and roller ring can be removed for cleaning. Wash them in warm, soapy water or in the dishwasher.
- Ensure the turntable and roller ring are completely dry before placing them back in the oven.
- Properly seat the roller ring in the center recess and place the glass turntable securely on top of the roller ring.

TROUBLESHOOTING

If you encounter issues with your microwave oven, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Oven will not start	Door is not closed properly. Power cord is not plugged in. Fuse is blown or circuit breaker tripped.	Ensure the door is firmly closed. Check that the power cord is securely plugged into a grounded outlet. Check your household fuse/circuit breaker.
Food not cooking evenly	Food not stirred or rotated. Incorrect power level or cooking time.	Stir or rotate food halfway through cooking. Ensure food is placed centrally on the turntable. Adjust power level and cooking time as needed.
Excessive noise during operation	Turntable or roller ring not seated correctly.	Remove and re-seat the glass turntable and roller ring. Ensure they are properly aligned.
Oven light not working	Light bulb needs replacement.	Contact qualified service personnel for bulb replacement. Do not attempt to replace it yourself.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Technical data for the VYTRONIX VY-C900M Digital Microwave Oven:

Feature	Specification
Brand	VYTRONIX
Model	VY-C900M
Product Dimensions (D x W x H)	39 x 48 x 28 cm
Item Weight	14.7 kg

Feature	Specification
Capacity	25 litres
Wattage (Output)	900 watts
Installation Type	Freestanding
Special Features	Timer, Turntable
Heating Method	Microwave radiation
Colour	Silver
Defrost System	Auto Defrost
Inner Material Type	Tempered glass
Included Components	Glass Plate, Roller Ring

WARRANTY AND SUPPORT

For information regarding the product warranty, please refer to the warranty card included with your purchase or visit the official VYTRONIX website. For technical support, spare parts, or service inquiries, please contact VYTRONIX customer service through their official channels.

Keep your purchase receipt as proof of purchase for any warranty claims.

© 2025 VYTRONIX. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CQRJF8V1>

More documents and user manuals: <https://manuals.plus/>